



## IDU-680 EFIS

ELECTRONIC FLIGHT INSTRUMENT SYSTEM

9.0C SOFTWARE

ROTORCRAFT PILOT GUIDE

Precise Performance.  
Proven Experience.  
Personalized Attention.



# Pilot Operating Guide and Reference

(Rotorcraft)

EFIS Software Version 9.0C

Document 64-000098-090C

**This document does not contain technical data or technology as defined in the ITAR Part 120.10 or EAR Part 772.**

**This pilot guide must be carried in the aircraft and always made available to the pilot. It can only be used in conjunction with the Federal Aviation Administration (FAA) approved Rotorcraft Flight Manual (RFM). Refer to the applicable RFM or Rotorcraft Flight Manual Supplement (RFMS) for aircraft specific information, such as unique ground tests, limitations, and emergency procedures.**

© 2024 Genesys Aerosystems All Rights Reserved

No part of this document may be reproduced in any form, or by any means, without prior written consent of Genesys Aerosystems.

FlightLogic and Virtual VFR are trademarks of Genesys Aerosystems. All other brand names and trademarks are the property of their respective holders.

**For service or repairs, contact an authorized Genesys Aerosystems dealer.** For product support or inquiries regarding this pilot guide, contact Genesys Aerosystems.



One S-TEC Way,  
Municipal Airport,  
Mineral Wells TX 76067  
Phone: (800) 872-7832

[www.genesys-aerosystems.com](http://www.genesys-aerosystems.com)

# Revision Record

Retain this record in front of pilot guide.

Rev	Notes/Pages changed, added, or deleted by current revision	Date	Author

Section 1	System Introduction and Overview.....	1-1
1.1.	Introduction.....	1-1
1.2.	EFIS/FMS Description .....	1-1
1.3.	System Overview.....	1-2
1.3.1.	Display Options.....	1-3
1.3.2.	Functional Integration and Display Redundancy.....	1-4
1.3.3.	Application Software Air Mode and Ground Mode .....	1-5
1.3.4.	IDU Initialization.....	1-5
1.4.	General Arrangement .....	1-11
1.4.1.	Normal and Essential Modes.....	1-11
1.4.2.	Data Source Monitors .....	1-12
1.4.3.	IDU Intra-System Communications .....	1-13
1.5.	Color Conventions .....	1-13
1.6.	AHRS Fast Slave and Erect.....	1-15
1.7.	Database and Software Updates .....	1-15
1.7.1.	Navigation and Obstruction Database.....	1-15
1.7.2.	Update Requirements.....	1-15
1.7.3.	Software and Terrain Database Update .....	1-17
1.8.	Run Demonstrator/Training Program .....	1-17
Section 2	Display Symbology.....	2-1
2.1.	Introduction.....	2-1
2.2.	Menu Functions .....	2-3
2.3.	PFI Symbology .....	2-4
2.3.1.	PFD Display Basic Mode .....	2-5
2.3.2.	Airspeed Display .....	2-5
2.3.2.1.	Airspeed Bug .....	2-7
2.3.3.	Heading Display .....	2-8
2.3.4.	Altitude Display .....	2-10
2.3.5.	Altitude Display (VNAV).....	2-10
2.3.6.	Selected Altitude Sub-Mode (Target Altitude).....	2-12
2.3.7.	Minimum Altitude.....	2-13
2.3.8.	Altimeter Setting .....	2-13

2.3.9.	Vertical Speed Indicator .....	2-14
2.3.9.1.	Vertical Speed Bug.....	2-15
2.3.10.	Normal AGL Indication .....	2-16
2.3.11.	Analog AGL Indication.....	2-17
2.3.12.	Decision Height.....	2-18
2.3.13.	Pitch Scale.....	2-18
2.3.14.	Bank Angle Scale.....	2-19
2.3.15.	Turn Rate Indicator .....	2-20
2.3.16.	PFI Background .....	2-20
2.3.16.1.	PFI Field of View (FOV).....	2-24
2.3.17.	Flight Director.....	2-25
2.3.18.	Flight Path Marker (Velocity Vector) .....	2-26
2.3.19.	Highway in the Sky/Skyway.....	2-28
2.3.20.	Landing Gear Indication .....	2-28
2.3.21.	Hover Vector.....	2-29
2.3.22.	Marker Beacon Symbology .....	2-30
2.3.23.	Timer Indication and Flight Time .....	2-30
2.3.24.	Course Deviation Indicator (CDI).....	2-31
2.3.24.1.	OBS Setting of CDI .....	2-32
2.3.24.2.	Heading/Roll-Steering Sub-Mode.....	2-33
2.3.25.	Vertical Deviation Indicator (VDI) .....	2-33
2.3.26.	Active Waypoint and Waypoint Identifier .....	2-35
2.3.27.	Mini Map .....	2-37
2.3.28.	Mini Traffic.....	2-38
2.3.29.	Runways .....	2-39
2.3.30.	Heliports.....	2-40
2.3.31.	Unusual Attitude Mode .....	2-41
2.3.32.	Horizon Synchronization .....	2-41
2.3.33.	Imperial Unit Feet and Metric Units .....	2-42
2.4.	MFD Symbology .....	2-44
2.4.1.	Ownship Symbology.....	2-44
2.4.2.	Moving Map.....	2-44
2.4.3.	Compass Rose/Boundary Circle Symbol.....	2-46

2.4.4.	Field of View (FOV) Indication .....	2-47
2.4.5.	Map Range .....	2-48
2.4.6.	Clock Options .....	2-48
2.4.7.	Air Data and Ground Speed .....	2-49
2.4.8.	Waypoint Distance ETE/ETA Functions.....	2-50
2.4.9.	Navigation Data .....	2-51
2.4.10.	Analog Navigation Symbology .....	2-54
2.4.11.	Borders.....	2-55
2.4.12.	Terrain/Obstructions.....	2-56
2.4.13.	Pan Mode .....	2-58
2.4.14.	Direct Point .....	2-59
2.4.15.	Altitude Capture Predictor/Top-of-Descent .....	2-59
2.4.16.	Projected Path.....	2-60
2.4.17.	Parallel Track/Active Flight Plan Path/Manual Course.....	2-60
2.4.17.1.	Parallel Track .....	2-60
2.4.17.2.	Manual Course .....	2-61
2.4.17.3.	Active Flight Plan Path.....	2-61
2.5.	HSI Page .....	2-62
2.5.1.	Conventional HSI/PTR Format .....	2-62
2.5.2.	Analog Navigation Symbology .....	2-62
2.5.3.	HSI CDI and VDI Scale.....	2-64
2.5.4.	Clock.....	2-65
2.5.5.	Air Data and Ground Speed .....	2-65
2.5.6.	Fuel Totalizer/Waypoint Distance ETE/ETA Functions .....	2-65
2.6.	Navigation Log (NAV LOG).....	2-65
2.6.1.	NAV LOG Display Format.....	2-65
2.6.2.	Clock and Ground Speed.....	2-66
2.6.3.	Fuel Remaining and Fuel Flow Data.....	2-66
2.6.4.	Waypoint Identifier Column.....	2-66
2.6.5.	VNAV and VNAV Offset Column .....	2-67
2.6.6.	Path Column .....	2-68
2.6.7.	Distance Column.....	2-69
2.6.8.	Estimated Time En Route Column .....	2-69

2.6.9.	Estimated Time of Arrival Column .....	2-69
2.6.10.	Fuel Remaining .....	2-69
2.6.11.	Distance To Go Column (DTG).....	2-69
2.6.12.	Time To Go Column (TTG) .....	2-69
2.7.	Hover Page.....	2-70
2.7.1.	Hover Vector.....	2-71
2.7.2.	Hover Page Range .....	2-72
2.7.3.	Compass Rose Symbols.....	2-72
2.7.4.	Active Flight Plan Path/Manual Course .....	2-73
2.7.5.	Navigation Data .....	2-74
2.7.6.	Projected Path.....	2-74
2.7.7.	AGL Indication.....	2-74
2.7.8.	Clock .....	2-76
2.7.9.	Air Data.....	2-76
Section 3	Menu Functions and Step-By-Step Procedures .....	3-1
3.1.	Menu Functions .....	3-1
3.1.1.	Menu Philosophy.....	3-1
3.1.2.	Avoidance of Autonomous Behavior.....	3-2
3.2.	Menu Synchronization.....	3-3
3.3.	Top-Level Menu .....	3-6
3.3.1.	PFD Top-Level Menu .....	3-6
3.3.2.	MFD Normal Mode Top-Level Menu .....	3-7
3.3.3.	MFD Essential Mode Top-Level Menu .....	3-8
3.4.	First-Level Menu.....	3-9
3.5.	Flight Plan (FPL) Menu.....	3-11
3.5.1.	Flight Planner Page.....	3-12
3.5.2.	Select Flight Plan on PFD (Step-By-Step).....	3-13
3.5.3.	CREATE-EDIT Menu Selections (Step-By-Step) .....	3-13
3.5.3.1.	Create Flight Plan.....	3-13
3.5.3.2.	Activate Flight Plan PFD or MFD.....	3-13
3.5.3.3.	Edit Flight Plan on PFD or MFD.....	3-13
3.5.3.4.	Reverse Flight Plan on PFD or MFD .....	3-14
3.5.3.5.	Delete Flight Plan.....	3-14

3.5.3.6.	Rename Flight Plan.....	3-14
3.5.3.7.	Create User Waypoint.....	3-14
3.5.3.8.	Create User Waypoint (LAT-LON) on PFD or MFD .....	3-15
3.5.3.9.	Create User Waypoint (RAD-DST) on PFD or MFD .....	3-15
3.5.3.10.	Edit User Waypoint on PFD or MFD .....	3-16
3.5.3.11.	Delete User Waypoint on PFD or MFD .....	3-16
3.5.3.12.	RAIM Prediction on PFD or MFD.....	3-17
3.6.	Active Flight Plan (ACTV) Menu .....	3-18
3.6.1.	Active Flight Plan (ACTV) Menu Options.....	3-19
3.6.2.	ACTV Menu (Step-By-Step) .....	3-23
3.6.3.	ACTV Hold Menu (Step-By-Step).....	3-24
3.6.4.	ACTV Nearest Menu (Step-By-Step) .....	3-24
3.7.	Information (INFO) Menu .....	3-24
3.7.1.	INFO Menu (Step-By-Step).....	3-26
3.8.	Omnibearing Selector (OBS) Menu (without NAV Preview) .....	3-26
3.8.1.	OBS Menu (Step-By-Step).....	3-28
3.8.2.	True North and Magnetic North Menu (Step-by-Step) ....	3-28
3.9.	Heading Bug (HDG) Menu .....	3-28
3.9.1.	HDG Menu with Analog Autopilot (Step-By-Step).....	3-29
3.9.2.	HDG Menu without Analog Autopilot (Step-By-Step).....	3-29
3.10.	Altitude Bug (ASEL) Menu .....	3-29
3.10.1.	Altitude Bug (ASEL) Menu (Step-By-Step).....	3-30
3.11.	Nearest (NRST) Menu .....	3-30
3.12.	Direct Menu .....	3-32
3.12.1.	Direct Menu (Step-By-Step).....	3-33
3.13.	Time Menu .....	3-34
3.13.1.	Time Menu (Step-By-Step).....	3-34
3.14.	PFD Source Menu .....	3-35
3.14.1.	Source Selection (Step-By-Step) .....	3-36
3.14.2.	AHRS Slave/DG/Slew .....	3-36
3.15.	PFD Bugs Menu .....	3-37
3.15.1.	PFD BUGS Menu (Step-By-Step) .....	3-38
3.15.1.1.	Minimums .....	3-38



3.15.1.2.	VNAV Climb and Descent Angle .....	3-39
3.15.1.3.	Vertical Speed Bug.....	3-39
3.15.1.4.	Indicated Airspeed Bug.....	3-39
3.16.	PFD Declutter (DCLTR) Menu .....	3-40
3.16.1.	PFD DCLTR Menu (Step-By-Step).....	3-40
3.17.	Altimeter (BARO) Menu.....	3-41
3.17.1.	BARO Menu (Step-By-Step) .....	3-41
3.18.	Faults Display (FAULTS) Menu .....	3-42
3.18.1.	Faults Menu (Step-By-Step).....	3-44
3.19.	Fuel Totalizer Quantity Setting (SET FUEL) Menu .....	3-44
3.19.1.	SET FUEL Menu (Step-by-Step) .....	3-45
3.20.	MFD Page Menu.....	3-46
3.20.1.	MFD Page Menu (Step-By-Step).....	3-46
3.21.	MFD Map Page Format Menu .....	3-47
3.21.1.	Map Page Format (Step-By-Step) .....	3-48
3.21.1.1.	Changing MFD Page Orientation (PFD or MFD) .....	3-48
3.21.1.2.	Adding LAT/LON to MFD Map Page .....	3-49
3.21.2.	MFD Full Map Page (Step-By-Step) (MFD Only).....	3-49
3.21.3.	MFD Symbol and Function Declutter Options (Step-By-Step) .....	3-49
3.21.4.	MFD HSI Declutter (DCLTR) Menu.....	3-50
3.21.4.1.	DCLTR Menu (Step-By-Step).....	3-50
3.22.	NAV LOG Page (PFD or MFD) .....	3-50
3.22.1.	NAV LOG (Step-By-Step) (PFD or MFD).....	3-50
3.23.	Hover Page.....	3-50
3.23.1.	Hover Page (Step-By-Step) (PFD or MFD).....	3-50
3.24.	Electronic Charts Page (MFD Only) .....	3-51
Section 4	Warning/Caution/Advisory System .....	4-1
4.1.	Warning/Caution/Advisory System .....	4-1
4.1.1.	Time-Critical Warning and Caution Alerts .....	4-1
4.1.2.	Warning Alerts.....	4-4
4.1.3.	Caution Alerts.....	4-5
4.1.4.	Side-Specific Caution Alerts .....	4-14

4.1.5.	Advisory Alerts .....	4-14
4.1.6.	Side-Specific Advisory Alerts .....	4-16
4.1.7.	Audio-Only Caution and Advisory Alerts.....	4-18
4.1.8.	Voice Alerts and Muting.....	4-20
4.1.9.	Visual Alert Prioritization and Declutter.....	4-20
Section 5	Reversionary Modes .....	5-1
5.1.	Reversionary Modes.....	5-1
5.1.1.	OAT Sensor Failure Mode.....	5-4
5.1.2.	Heading Failure Mode.....	5-4
5.1.3.	PFD Auto Reversion .....	5-4
5.1.4.	GPS Failure.....	5-5
5.2.	PFD and MFD Failure Mode Examples .....	5-7
5.2.1.	Failure Mode 0 .....	5-8
5.2.2.	Failure Mode 1 .....	5-10
5.2.3.	Failure Mode 2 .....	5-12
5.2.4.	Failure Mode 3 .....	5-14
5.2.5.	Failure Mode 4 .....	5-16
5.2.6.	Failure Mode 5 .....	5-18
5.2.7.	Failure Mode 6 .....	5-20
5.2.8.	Failure Mode 7 .....	5-22
Section 6	IFR Procedures.....	6-1
6.1.	EFIS Navigation Operational Capabilities.....	6-1
6.2.	Active Flight Plan .....	6-1
6.2.1.	Skipped Waypoint.....	6-3
6.2.2.	Waypoint .....	6-4
6.3.	Operations Outside a GPS/SBAS Coverage Area .....	6-7
6.4.	IFR Procedures .....	6-7
6.5.	Overview of Procedures and Instrument Approaches .....	6-7
6.5.1.	Waypoint Sequencing .....	6-8
6.5.2.	Fly-Over Waypoints .....	6-9
6.5.2.1.	Fly-Over with Defined Entry Heading .....	6-10
6.5.2.2.	Fly-Over with Defined Exit Heading .....	6-11
6.5.3.	Fly-By Waypoints.....	6-11

6.5.4.	Create a User Waypoint Overfly/Pan (Step-By-Step) .....	6-15
6.5.5.	Highway in the Sky (Skyway) .....	6-15
6.6.	Direct-To .....	6-21
6.6.1.	Direct-To Unnamed Waypoints inside Procedures .....	6-21
6.7.	Discontinuities .....	6-22
6.7.1.	Manual Termination Legs .....	6-22
6.8.	Magnetic Course .....	6-23
6.8.1.	AHRS Modes for Heading Source .....	6-23
6.8.2.	EFIS True North Mode .....	6-23
6.9.	Dead Reckoning .....	6-24
6.10.	Parallel Offsets .....	6-24
6.11.	Geodesic Path Computation Accuracy .....	6-27
6.11.1.	GPS Altitude .....	6-27
6.12.	Navigation Database Requirements .....	6-27
6.13.	Default GPS/SBAS Navigation Modes .....	6-29
6.14.	GPS/SBAS CDI Scale .....	6-31
6.14.1.	OBS Setting of CDI .....	6-32
6.14.2.	Alerting Scheme for LNAV/VNAV Procedures .....	6-32
6.14.3.	Alerting Scheme for LPV/LP Procedures .....	6-33
6.15.	Approach Type Selection .....	6-35
6.15.1.	Approach Path Definition (GPS Procedures) .....	6-36
6.15.2.	VTF IFR Approach .....	6-36
6.15.3.	VTF VFR Approach .....	6-37
6.16.	Required Navigation Performance .....	6-37
6.16.1.	Automatic RNP Mode .....	6-38
6.17.	Missed Approach and Departure Path Definition .....	6-38
6.18.	Loss of Navigation Monitoring .....	6-39
6.18.1.	Loss of Integrity Caution Monitoring .....	6-39
6.18.2.	Faults Menu .....	6-40
6.19.	Manual Holding Patterns .....	6-41
6.20.	Selection of an Instrument Procedure .....	6-41
6.20.1.	Standard Instrument Departure (DP) (Step-By-Step) .....	6-42
6.20.2.	VFR Approach to User Waypoint (Step-By-Step) .....	6-42

6.20.2.1.	For VFR Flight Planning .....	6-44
6.20.3.	Standard Terminal Arrival Route (STAR) (Step-By-Step) ..	6-44
6.20.4.	ILS Instrument Approach (Step-By-Step) .....	6-45
6.20.5.	ILS Approach with Manual Termination Leg in Missed Approach Procedure (Step-By-Step) .....	6-45
6.20.6.	LOC Back Course Instrument Approach (Step-By-Step) ..	6-45
6.20.7.	RNAV (GPS) Instrument Approach to LP Minima (Step-By-Step) .....	6-46
6.20.8.	RNAV (GPS) Instrument Approach to LPV Minima (Step-By-Step) .....	6-47
6.20.9.	RNAV (RNP) Instrument Approach to RNP 0.3 DA (Step-By-Step) .....	6-47
6.20.10.	NRST ILS Instrument Approach (Step-By-Step).....	6-48
6.20.11.	VOR/DME Instrument Approach (Step-By-Step).....	6-49
6.20.12.	ILS or LOC RWY ## Instrument Approach with Missed Approach Flown to Alternate Fix (Step-By-Step).....	6-50
Section 7	Terrain Awareness Warning System .....	7-1
7.1.	Terrain Awareness Warning System (TAWS) Functions .....	7-1
7.2.	Forward Looking Terrain Alert (FLTA) Function .....	7-2
7.2.1.	FLTA Modes .....	7-3
7.2.2.	GPS/SBAS Navigation Mode Slaving .....	7-3
7.2.3.	Default FLTA Mode .....	7-3
7.2.4.	FLTA Search Envelope .....	7-4
7.2.5.	FLTA Alerts and Automatic Pop-up .....	7-7
7.3.	Excessive Rate of Descent (GPWS Mode 1).....	7-8
7.4.	Excessive Closure Rate to Terrain (GPWS Mode 2).....	7-9
7.5.	Sink Rate after Takeoff or Missed Approach (GPWS Mode 3) .....	7-10
7.6.	Flight into Terrain when not in Landing Configuration (GPWS Mode 4) .....	7-10
7.7.	Excessive Downward Deviation from an ILS Glide Slope (GPWS Mode 5) .....	7-11
7.8.	External Sensors and Switches.....	7-12
7.9.	TAWS Basic Parameter Determination.....	7-13
7.10.	TAWS Selections on PFD .....	7-16

7.11.	TAWS Automatic Inhibit Functions (Normal Operation).....	7-19
7.11.1.	TAWS Automatic Inhibit Functions (Abnormal Operation) .....	7-20
7.11.2.	TAWS Manual Inhibit Functions .....	7-20
Section 8	Appendix .....	8-1
8.1.	Operating Tips.....	8-1
8.2.	Domestic or International Flight Planning.....	8-1
8.3.	Altitude Miscompare Threshold.....	8-1
8.4.	Airspeed Miscompare Threshold.....	8-2
8.5.	Jeppesen Sanderson NavData® Chart Compatibility.....	8-3
8.6.	Data Logging and Retrieval .....	8-3
8.6.1.	Delete Log Files .....	8-4
8.6.2.	Logged Flags and Custom CAS Messages.....	8-4
8.7.	Routes and Waypoints .....	8-4
8.7.1.	Download Routes and User Waypoints .....	8-4
8.7.2.	Upload Routes and User Waypoints.....	8-5
8.7.3.	Delete Routes and User Waypoints.....	8-5
8.8.	Secure Data Storage Device Limitations.....	8-5
8.9.	Summary of Asterisk Symbology .....	8-6
8.10.	Altimeter Settings .....	8-6
T 1.	Traffic Symbology .....	T-1
T 1.1.	Mini Traffic.....	T-3
T 2.	Dedicated Traffic Page.....	T-4
T 2.1.	MFD Page Menu.....	T-4
T 2.2.	Traffic Display Format.....	T-5
T 2.3.	Traffic Screen Range .....	T-5
T 2.4.	PFD First Level Menu.....	T-6
T 2.5.	MFD First Level Menu (Normal Mode) .....	T-7
T 2.6.	Flight Level (FL) Option .....	T-7
T 2.7.	MFD Traffic Format Menu .....	T-8
T 2.7.1.	Traffic Page Format Menu (Step-By-Step) (PFD or MFD) ...	T-9
T 2.8.	Clock and Options .....	T-9
T 2.9.	Compass Rose Symbols.....	T-10

T 2.10.	Air Data and Ground Speed .....	T-10
T 2.11.	Fuel Totalizer/Waypoint Distance Functions .....	T-10
T 3.	PFD Declutter (DCLTR) Menu .....	T-10
T 4.	MFD Fault Display Menu .....	T-11
T 5.	Menu Synchronization .....	T-11
RBP 1.	Remote Bugs Panel .....	RBP-1
S 1.	WX-500 Data Symbology .....	S-1
S 2.	MFD Strikes Page .....	S-2
S 2.1.	MFD Strikes Page (Step-By-Step) .....	S-2
S 2.2.	PFD First-Level Menu .....	S-3
S 2.3.	MFD First-Level Menu (Normal Mode) .....	S-4
S 2.4.	Clock and Options .....	S-4
S 2.5.	Active Flight Plan Path/Manual Course/Runways .....	S-5
S 2.6.	Air Data and Ground Speed .....	S-6
S 2.7.	Fuel Totalizer/Waypoint Distance Functions .....	S-6
S 2.8.	Strikes Format Menu .....	S-6
S 3.	MFD Fault Display Menu .....	S-6
S 4.	Menu Synchronization .....	S-7
D 1.	Datalink Symbology .....	D-1
D 1.1.	Borders .....	D-2
D 1.2.	ADS-B Data .....	D-2
D 1.2.1.	NEXRAD Data .....	D-2
D 1.2.2.	Graphical METARS .....	D-4
D 2.	Top-Level Menu Automatic Pop-Up Function Descriptions .....	D-6
D 3.	Dedicated Datalink Page .....	D-6
D 3.1.	MFD Page Menu .....	D-6
D 3.2.	Datalink Page Orientation .....	D-6
D 3.3.	Datalink Page Locations .....	D-7
D 3.4.	Datalink Page Legend .....	D-8
D 3.5.	Air Data and Ground Speed .....	D-8
D 3.6.	Clock and Options .....	D-8
D 3.7.	Datalink Page Screen Range .....	D-10
D 3.8.	Boundary Circle Symbols .....	D-11

D 3.9.	Active Flight Plan Path/Manual Course/Runways.....	D-11
D 4.	Information (INFO) Menu .....	D-11
D 5.	MFD Datalink Format Menu .....	D-12
D 5.1.	MFD Datalink Page (Step-By-Step) .....	D-12
D 5.2.	Formatting Map Page on PFD OR MFD (Step-By-Step) ....	D-13
D 5.3.	MFD Datalink NRST Airport Info PFD or MFD (Step-By-Step) . .....	D-13
D 5.3.1.	MFD Full Map page (Step-By-Step).....	D-13
D 6.	MFD Fault Display Menu.....	D-14
D 7.	Menu Synchronization.....	D-14
WX 1.	Weather Radar .....	WX-1
WX 1.1.	Weather Radar Return Data .....	WX-1
WX 2.	Weather Radar Page.....	WX-3
WX 2.1.	First-Level Menu Descriptions.....	WX-3
WX 2.2.	Weather Radar Page Menu .....	WX-4
WX 2.2.1.	Managing RDR-2100 Weather Radar Menu (Step-By-Step) (PFD or MFD) .....	WX-5
WX 2.2.2.	Managing RDR-2100 Weather Radar Control Menu (Step-By- Step) .....	WX-6
WX 2.2.3.	Managing RDR-2100 Weather Radar Tilt (Step-By-Step)	WX-6
WX 2.2.4.	Managing RDR-2100 Weather Radar Track Angle Menu (Step-By-Step).....	WX-6
WX 2.2.5.	Managing RDR-2000 Weather Radar Menu (Step-By-Step) .... .....	WX-6
WX 2.2.6.	Managing RDR-2000 Weather Radar Menus Control Menu (Step-By-Step).....	WX-6
WX 2.3.	Weather Page Screen Range.....	WX-7
WX 2.4.	Horizontal/Vertical Profile Depiction.....	WX-8
WX 2.5.	Track Line.....	WX-9
WX 2.6.	Active Flight Plan Path/Manual Course/Runways.....	WX-10
WX 2.7.	Clock/Options.....	WX-10
WX 2.8.	Air Data and Ground Speed.....	WX-13
WX 2.9.	Fuel Totalizer/Waypoint Distance Functions.....	WX-13
WX 2.10.	Waypoint Distance .....	WX-13

WX 3.	MFD Fault Display Menu .....	WX-13
WX 4.	Menu Synchronization .....	WX-14
V 1.	Video Page .....	V-1
V 1.1.	Top-Level Menu Option Descriptions.....	V-1
V 1.2.	Video Page First-Level Option Descriptions .....	V-1
V 1.3.	Video Page Format Menu .....	V-2
V 1.4.	Pan Mode .....	V-3
V 2.	Menu Synchronization .....	V-4
RD 1.	PFD Primary Flight Instrumentation .....	RD-1
RD 1.1.	Pitch Scale .....	RD-1
RD 1.2.	Flight Director Symbology .....	RD-1
RD 1.3.	Marker Beacon Indicators .....	RD-2
RD 1.4.	Unusual Attitude Mode.....	RD-2
RD 1.5.	Bank Angle Scale .....	RD-3
RD 1.6.	AGL Indication .....	RD-3
RD 1.7.	Airspeed Display .....	RD-4
RD 1.8.	Altimeter.....	RD-5
RD 1.9.	Altitude Display .....	RD-6
RD 1.9.1	Altitude Sub-Mode.....	RD-7
RD 1.10.	Vertical Speed Indicator.....	RD-9
RD 1.11.	Landing Gear Indication .....	RD-10
RD 1.12.	Heading Display .....	RD-11
RD 1.12.1	Heading Failure Mode.....	RD-12
RD 1.13.	Turn Rate Indicator.....	RD-12
RD 1.14.	Vertical Deviation Indicator.....	RD-12
RD 1.15.	Course Deviation Indicator .....	RD-13
RD 1.16.	Timer Indication .....	RD-16
SAR 1.	Search and Rescue (SAR) Patterns .....	SAR-1
SAR 1.1.	SAR Pattern Step-by-Step Procedures.....	SAR-2
SAR 2.	Expanding Square Pattern.....	SAR-3
SAR 3.	Rising Ladder Pattern .....	SAR-3
SAR 4.	Orbit Pattern.....	SAR-4
SAR 5.	Racetrack Pattern.....	SAR-5



SAR 6. Sector Search Pattern .....SAR-6

GLOSSARY

# Section 1 System Introduction and Overview

## 1.1. Introduction

The Genesys Aerosystems Electronic Flight Instrument System (EFIS) is a “pilot-centered” system. While still highly automated, it presents the pilot with information necessary to make decisions and take appropriate actions. For example, the Highway-in-the-Sky (HITS) allows for highly automated approaches, but its predictive nature provides the pilot awareness of upcoming heading and altitude changes.

## 1.2. EFIS/FMS Description

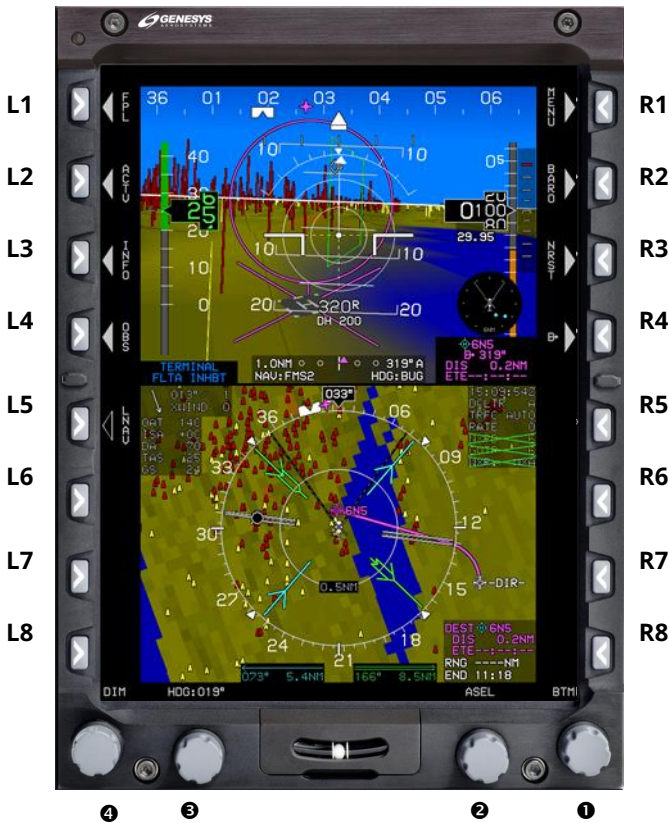


Figure 1-1: IDU-680 Input Identification

The integrated display unit (IDU) has 16 buttons along the vertical sides referenced as L1 through L8 starting at the top left corner of the display, moving

down, and R1 through R8 from the top right corner, moving down the display from a pilot's perspective.

Four knobs at the bottom of the bezel are designated, from left to right, ④, ③, ②, and ①. References throughout this guide refer to which knob to push and rotate for desired outcomes but ④ only controls the backlighting intensity.

A sensor on the face of the IDU bezel measures ambient light levels. Use ④ to control the brightness of the panel or display lighting. To adjust panel lighting (illumination of legends, knobs, inclinometer, and buttons), push and rotate ④ clockwise to increase or counterclockwise to decrease. Adjust display lighting (illumination of the LCD) without pushing rotate ④ as described with panel lighting. Lighting may be controlled locally or remotely, with a default state being with the local control.



**NOTE:**

If entering ground maintenance mode with a bright light shining or reflecting directly into the display, shield the light sensor to avoid the IDU from going directly into the flight mode.

On the bezel between the two center knobs, a slip indicator or blank housing acts as the secure data transfer port door. Lift it before power-up to initiate the ground maintenance mode after power-up. If a limits change, software, or database update is planned, the secure data storage device must be inserted before power-up.

**1.3. System Overview**

The EFIS is a complete flight and navigation instrumentation system providing information via computer-generated displays. The displays include 3D, enhanced situational awareness primary flight display (PFD) and multi-function display (MFD), which may be configured to show a moving Map, HSI, Navigation Log, WX-500 Lightning Strikes, Traffic, WX-RDR, Video, or Datalink page.

At any given time, each EFIS side has only one IDU transmit-enabled to send RS-232 and RS-422 system transmissions. By default, the PFD is transmit-enabled and if it subsequently fails, the respective MFD becomes transmit-enabled.

Table 1-1: EFIS Limits Options for Speed Units

Parameters	Airspeed Units Set To	
	Knots, MPH, or Km/h	SI
Airspeed	Knots, MPH, Km/h	Km/h
Altitude	Feet	Meters
Distance	NM	KM

Table 1-1: EFIS Limits Options for Speed Units

Parameters	Airspeed Units Set To	
	Knots, MPH, or Km/h	SI
Ground Speed	Knots	Km/h
Temperature	°C or °F	°C
True Airspeed	Knots	Km/h
VSI	fpm	m/s
Wind	Knots	m/s

**NOTE:**


Where distances are stated in “NM or KM” and altitudes are stated in “Feet or Meters,” the following statement applies: “depending upon the setting of the “Speed Units” system limit.”

### 1.3.1. Display Options


In an IFR installation, the PFD is configured with the primary flight information (PFI) in top area and multi-function display (MFD) page in bottom area. The MFD may be configured to show a MFD page in both the top and bottom areas or as a full map page.



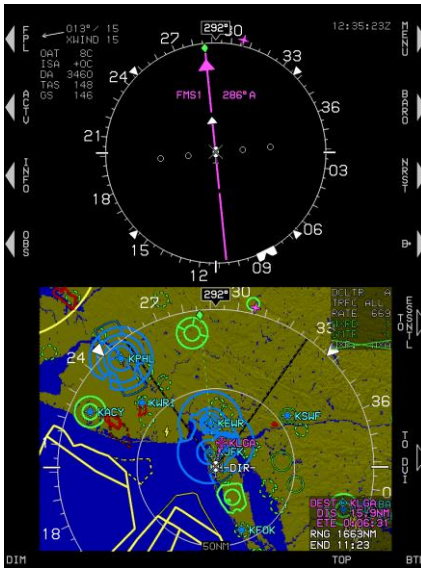Figure 1-2: PFD



MFD

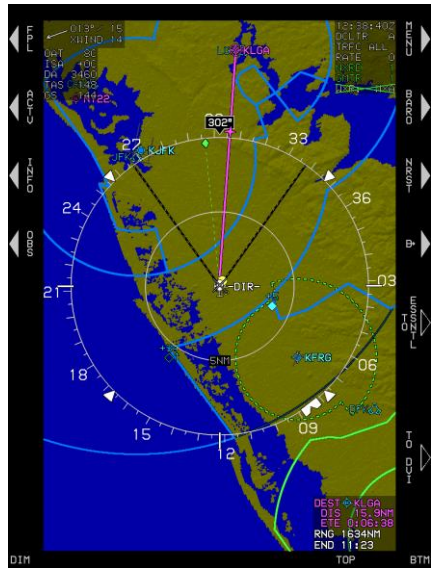

MFD with Full Map Page

Figure 1-3: MFD Display Options

### 1.3.2. Functional Integration and Display Redundancy

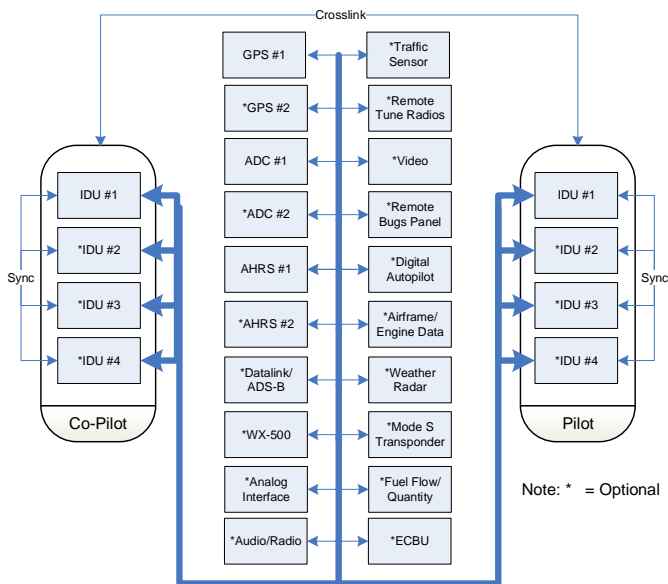


Figure 1-4: System Diagram

IDUs incorporate a high-brightness liquid crystal display screen, bezel buttons, rotary knobs, and enter switches. Because the receive ports of the IDUs are connected to the digital sensor modules in parallel, each IDU is independent from all other IDUs.

The IDUs depend upon intra-system (between IDUs on a side – “Sync”) and inter-system (between IDUs on opposite sides – “Crosslink”) to achieve synchronization of the integrated functions. The IDUs also depend upon intra-system communications to determine which IDU on a side takes over transmit-enabled responsibilities. The transmit-enabled IDU is the IDU providing data to external sensors and generating visual and audible alerts. Figure 1-4 is a typical system diagram.

### 1.3.3. Application Software Air Mode and Ground Mode

Numerous symbology elements change behavior depending upon whether the aircraft is on the ground (ground mode) or in flight (air mode). Mode is determined separately from the system initialization modes. This parameter is continuously calculated as follows:

If a Weight on Wheels/Weight on Ground sensor is installed, ground mode is determined solely from the sensor position, otherwise:

- 1) If airspeed is valid and AGL altitude is valid, ground mode is set when indicated airspeed is less than 30 knots, and AGL altitude is less than 75 feet.
- 2) If airspeed is invalid but AGL altitude is valid, ground mode is set when AGL altitude is less than 75 feet.
- 3) Under any other circumstance, air mode is set by default.



---

**NOTE:**

Application software for air mode or ground mode uses the following parameters: ground speed, airspeed (knots) and altitude (feet).

---

### 1.3.4. IDU Initialization

On power up, the hardware, including file system, IO, and graphics, is initialized. Immediately after graphics initialization, a screen with “INITIALIZING” is displayed with the Genesys Aerosystems logo, software version number, and part number. The software version number defines major revision number (i.e., “9.0”) and minor revision letter (i.e., “B”).

Table 1-2: IDU Number Designation

Version Number	Part Number
Rev 9.0C	25-680EFIS90B-SW-xxxx (IDU-680 CPM4)
	25-680EFIS90B-SW-xxxx (IDU-680 CPM5L)
	25-680EFIS90B-SW-xxxx (IDU-680 CPM5C)



Figure 1-5: Initialization Screen


**NOTE:**

Software part numbers can change after initial certification and are amended with installation manual changes or service bulletin issuance.

Aircraft limitations are initially read from flash drive storage to provide IDUs with a default configuration setup in the event of personality module failure. The personality module contains the CPU (IDU) number (Table 1-3) and side designation (pilot or co-pilot). The IDU number is identified below the part number on the CRC screen (Figure 1-7).

Table 1-3: IDU Number Designation

CPU/IDU #	Definition
0	Single IDU installation
1	IDU only shows PFD
2	First MFD in multi-display installation
3	Second MFD in a multi-display installation
4	Third MFD in a multi-display installation

Pilot IDU #1 reads aircraft configuration from its personality module. In a multi-screen installation, IDU #1 transmits this configuration to the other IDUs. The other IDUs save the transmitted configurations to flash drive storage.

Aircraft configurations are initially read from flash drive storage to provide IDUs with a default configuration setup in the event of personality module failure. Aircraft parameters (latitude, longitude, altitude), as they existed prior to the last system shutdown, are read for a good system initialization, even if system sensors are failed or not yet initialized. For future updates (i.e., updating software version 9.0C to 9.0D), all aircraft settings re-initialize to default values. Otherwise, aircraft settings, as they existed prior to the last system shutdown, are used to initialize the system except for the following default values:

- 1) Selected sensors are initialized to default values.
- 2) Active flight plan structure and associated values are cleared.
- 3) ADAHRS are set to slaved mode and the slewing value is initialized to zero.
- 4) Timers are turned off.
- 5) Datalink and map panning modes are set to off.
- 6) Fuel caution and alarm thresholds are set to default values.
- 7) Heading bug is set to 360° (Genesys Helicopter Autopilot enabled) or turned off.
- 8) Heading mode is turned off.
- 9) HSI navigation source is set to FMS.
- 10) HSI Preview navigation source is turned off (If NAV PRV enabled)
- 11) Horizon synchronization status is set to disabled.
- 12) Minimum altitude setting is turned off.
- 13) FMS OBS setting is set to automatic.
- 14) VOR/LOC 1 OBS setting is set to 360°.
- 15) VOR/LOC 2 OBS setting is set to 360°.
- 16) ADF1 OBS setting is set to 360°.
- 17) ADF2 OBS setting is set to 360°.
- 18) Parallel offset is set to 0 NM or KM.
- 19) PFD zoom mode is set to off.
- 20) Manual RNP is set to off.
- 21) If in round dial mode, analog AGL is set to off.
- 22) PFD skyway is set to on.
- 23) Vertical speed bug is turned off.



- 24) Target and preselected altitude bugs are turned off.
- 25) True North mode is turned off.
- 26) Airspeed speed bug is turned off.
- 27) If using weather radar menu, weather radar mode is set to off, vertical profile is set to off and stabilization is set to on.
- 28) Weather radar scale is initialized to 80NM. When using kilometers for radar scale, initialized to 160KM.
- 29) Crosslink is initialized to on.
- 30) Map modes are set to allowed values.
- 31) With DVI option, DVI is set to off.
- 32) Essential mode is set to off.
- 33) Traffic page flight level set to off.
- 34) All data link products selected for display.

Based upon the air/ground mode parameter value from the last system shutdown, the EFIS decides whether it is booting on the ground or in flight.

The EFIS determines whether it is booting on the ground or in flight based on the air/ground mode parameter value from the last system shutdown. If booting on the ground, the following actions happen:

- 1) A logo screen with “TESTING” is displayed.



Figure 1-6: Logo Screen with “TESTING” (CPM5L)

- 2) CRC-32 values for application executable, limitations files, NavData® files, obstruction files, sounds database, and terrain header files are checked.

During this action, “PRESS ANY BUTTON TO QUICK START” is displayed below “TESTING.” Press any button to stop the ground booting and execute the flight booting.

- 3) If the built-in-test (BIT) check fails, the program exits with an error message and creates a BIT result file indicating failure.
- 4) If the BIT check passes, the program continues to initialize and creates a BIT result file indicating passage.
- 5) If “Baro Auto-Setting on Startup” is enabled in EFIS limits, the system auto-sets the altimeter based on the terrain elevation at the startup point (only applicable at surveyed airports.) In QFE mode operation, the system auto-sets the altimeter to read zero altitude.
- 6) A logo screen displaying:
  - a) Software CRC-32;
  - b) Aircraft type;
  - c) Sounds database name and CRC-32;
  - d) Magnetic variation coefficients version and CRC-32; and
  - e) Database versions and validity dates are displayed along with “PRESS ANY BUTTON TO CONTINUE.”

```

REV 9.0C
P/N: 25-680EF1990C-SU-0003 (IDU-680 CP14)
SOFTWARE OK (PILOT CPU #1)
SOFTWARE CRC = 12345678
AIRCRAFT TYPE GENERIC
SOUND CONFIG: STANDARD EFIS SOUND (0CAC54E8)
MAG VAR DATA: WMM-2020 (D1CDE26D)
NAVIGATION DATA: COVERAGE = WORLD (CYCLE 2401)
                  DATES 01-25-2024 TO 02-22-2024
OBSTRUCTION DATA: DATE 02-22-2024
TERRAIN DATA: COVERAGE = S75W180 - N75E181
                DATE 05-26-2007
IAP/APD DATA: DATES 07-16-2020 TO 08-12-2020
PRESS ANY BUTTON TO CONTINUE
  
```

With Charts

```

REV 9.0C
P/N: 25-680EF1990C-SU-0003 (IDU-680 CP14)
SOFTWARE OK (PILOT CPU #1)
SOFTWARE CRC = 12345678
AIRCRAFT TYPE GENERIC
SOUND CONFIG: STANDARD EFIS SOUND (0CAC54E8)
MAG VAR DATA: WMM-2020 (D1CDE26D)
NAVIGATION DATA: COVERAGE = WORLD (CYCLE 2401)
                  DATES 01-25-2024 TO 02-22-2024
OBSTRUCTION DATA: DATE 02-22-2024
TERRAIN DATA: COVERAGE = S75W180 - N75E181
                DATE 05-26-2007
PRESS ANY BUTTON TO CONTINUE
  
```

Without Charts

Figure 1-7: CRC Screen

- 7) If all critical sensors (GPS, ADC, and AHRS) are in normal condition, the display screens are shown immediately.
- 8) If any critical sensor is not in normal condition, a logo screen with a two-minute countdown timer is displayed along with “PRESS ANY BUTTON TO SKIP.”



Figure 1-8: Two-Minute Countdown Screen (CPM5L)

- 9) The display screens initialize at the earliest of when:
  - a) 2 minutes has elapsed;
  - b) The pilot presses any button to escape startup countdown; or
  - c) All critical sensors are in normal condition.
- 10) The display screens are shown as follows:
  - a) IDU #1: PFD Normal mode with PFD on top, an MFD page (last selected MFD page on this IDU) on bottom.
  - b) Other IDUs: Initialize to MFD on top and MFD on bottom.
- 11) On all IDUs with fuel totalizer functions enabled, the fuel set menu is activated to remind the pilot to set the fuel totalizer quantity.
- 12) All active alerts are automatically acknowledged for 5 seconds to reduce nuisance alerting.

If booting in the air, the following actions happen:

- 1) A logo screen with "QUICK START" is displayed.



Figure 1-9: QUICK START Screen

- 2) BIT result file created during the last ground boot is checked.

- a) Failure = indicates a failure, program exits with an error message.
  - b) Passage = program continues.
- 3) The display screens initialize immediately as follows:
- a) IDU #1: PFD (PFD on top, MFD on bottom).
  - b) Other IDUs: Initialize to MFD on top and MFD on bottom.

**NOTE:**

If any menu is active after IDU initialization, press **EXIT (R1)** on each display and wait at least 20 seconds to allow PFDs to synchronize with MFDs and pilot and co-pilot sides to synchronize. If any IDU menu is active, intra-system and inter-system synchronization messages are paused.

## 1.4. General Arrangement

The IDU-680 is 7.500"W x 10.250"H x 4.750"D and weighs less than 9.5 lbs. It has the capacity to accommodate integrated peripherals mechanically attached to the IDU but have electrical isolation and redundancy. These modules may include:

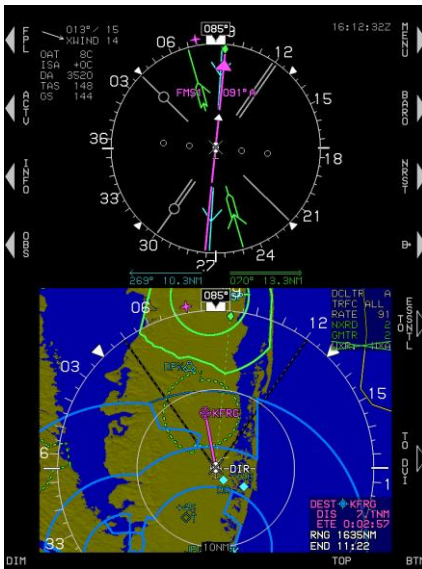
- 1) Integrated ADAHRS Sensor Module
- 2) Integrated GPS/SBAS Sensor Module
- 3) Serial Protocol Converters
- 4) Video Format Converters

Data storage is sufficiently sized to hold world terrain, navigation, and obstruction databases. Because the receive ports are connected to the digital sensor modules in parallel, each IDU is independent from all others.

### 1.4.1. Normal and Essential Modes

IDU software has normal mode and essential modes. The PFD described in this pilot guide has only a normal mode. The PFD (IDU #1) has a PFI page in the top area and a pilot-selectable multi-function page in the bottom area. See Section 2 Display Symbolology for additional information.

MFDs (IDUs configured as #2, #3 or #4) have normal and essential modes with pilot-selectable multi-function pages in both top and bottom areas. On the MFD, press **TO ESSNTL/TO MFD (R5)** to toggle Normal and Essential modes.



MFD Normal Mode



MFD Essential Mode

Figure 1-10: MFD Normal and Essential Modes

**TAWS popups:** When an FLTA alert is generated, a popup function enables PFI SVS and activates terrain at an appropriate scale and format on the moving map page (one of the multi-function pages). This is a required function of TSO-C194 for HTAWS (See Section 7 TAWS for more information.)

**Traffic popups:** When a traffic alert is generated, a popup function displays traffic on the PFI, moving map page, and mini traffic on the PFI (see Traffic appendix for more information).

#### 1.4.2. Data Source Monitors

In installations with redundant sensors, IDUs continuously monitor the following sensors to detect disagreements:

- 1) Airspeed
- 2) Altitude
- 3) Attitude
- 4) Barometric setting (pilot vs. co-pilot sides)
- 5) GPS position, track, and ground speed
- 6) Heading
- 7) Localizer and glide slope deviations
- 8) Radar altitude

### 1.4.3. IDU Intra-System Communications

Communication between IDUs installed on the same side is referred to as intra-system communications. In a two-sided system (pilot and co-pilot) configuration, the crosslink side-to-side communications is referred to as inter-system communications. IDUs on the same side (pilot side and co-pilot side individually) monitor each other using intra-system communications and perform the following checks:

- |  |  |
|--|--|
| 1) Intra-system communications freshness                 | 6) Barometric setting agreement                    |
| 2) Screen counter incrementing (i.e., screen not frozen) | 7) GPS position, track, and ground speed agreement |
| 3) Airspeed agreement                                    | 8) Heading agreement                               |
| 4) Altitude agreement                                    | 9) Localizer and glide slope deviation agreement   |
| 5) Attitude agreement                                    | 10) Radar altitude agreement                       |

### 1.5. Color Conventions

The EFIS uses a consistent set of colors to display information. Any color representation may not be identical as it appears on the IDU.

Table 1-4: Color Conventions


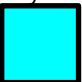
Color	Use(s)	Examples
White 	Items set by pilot and held by the EFIS or items where device feedback is not expected; marker beacon receiver high/low sensitivity modes; scales, associated labels, and figures; pilot action; or data entry.  When used for an analog bar indication, light gray (low-intensity white) is used instead, as a large white area on the screen may be overwhelming.	Scales markings (airspeed, altitude, heading, VSI, pitch, map ranges, etc.)  Pilot-selected values (airspeed, heading, altitude)  Secondary flight data (TAS, wind, OAT, timers, etc.)
Cyan 	VOR #1 and IFR navigation dataset items.  Information received from the device that is not related to a pilot setting.	Airports with instrument approach procedures, VORs, and intersections.

Table 1-4: Color Conventions



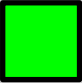




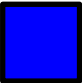
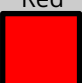

Color	Use(s)	Examples
<p>Magenta</p> 	<p>Indicates calculated or derived data and certain navigation database items. Light magenta for visibility</p>	<p>Active waypoint related symbols.</p> <p>Course data (desired track, CDI).</p> <p>VFR airports, NDBs, VNAV altitudes,</p>
<p>Gray</p> 	<p>Background for airspeed and altitude readout and for conformal runway depiction</p> <p>Light gray for usable portion of active runway, dark gray for other runway surfaces</p>	
<p>Green</p> 	<p>VOR #2 and to indicate normal or valid operation (airspeed, altitude tape coloring, status indication, etc.) Light green for visibility.</p>	<p>Aircraft track, skyway symbology, and airspeeds in green arc.</p>
<p>Dark Green</p> 	<p>Terrain indication on moving map (slope between adjacent terrain determines the shade used).</p>	
<p>Amber (Yellow)</p> 	<p>Identifies conditions requiring immediate pilot awareness and possible subsequent action. Currently used for DME hold indications. Loss of GPS navigation condition in all navigation symbology, including FMS active waypoint coloring.</p>	
<p>Olive</p> 	<p>In various shades shows terrain within 2000' and below aircraft altitude.</p>	
<p>Brown</p> 	<p>In a variety of shades indicates earth/terrain portion of PFD or when above 100 feet less than aircraft altitude on MFD.</p>	
<p>Blue</p> 	<p>In a variety of shades indicates sky portion of PFD, bodies of water on moving map.</p>	
<p>Red</p> 	<p>Indicates aircraft limitations or conditions, which require immediate pilot action, or a device failure (red "X").</p>	

Table 1-4: Color Conventions

Color	Use(s)	Examples
Black 	Field of view angle lines on moving map, figures on a gray background, and outlining borders and certain figures/elements on backgrounds with minimal contrast, e.g., airspeed, altitude, and menu tiles on the PFD/MFD.	

## 1.6. AHRS Fast Slave and Erect

If it is necessary to restore the heading and attitude references, the AHRS includes heading fast slave and attitude fast erect features, which can be performed when in approximately straight and level flight to ensure the best chance of providing valid observation for heading and attitude. See RFMS for nomenclature and location of switch or button.

## 1.7. Database and Software Updates

### 1.7.1. Navigation and Obstruction Database

The EFIS uses Jeppesen Sanderson NavData® for the navigation database and Jeppesen Sanderson obstacle data for the obstruction database.

Visit [www.jeppesen.com](http://www.jeppesen.com) to place the order for the correct database.



#### NOTE:

When ordering, review the EFIS Equipment-Database Compatibility Matrix (document 01-000062) on the Genesys Aerosystems website. This document specifies the compatibility of Genesys Aerosystems EFIS equipment and software versions to navigation database versions.

Three available coverage areas of navigation databases may be used on this EFIS:

Americas - Major airports and navigation for Alaska, Canada, Continental U.S., Hawaii, Puerto Rico, Bahamas, Bermuda, Mexico, Central, and South America.

International - All available coverage except North and South America.

World - Major airports and navigation with the Americas.

### 1.7.2. Update Requirements

Scheduled updates for databases are as follows:

- 1) Navigation Database - Every 28 days
- 2) Obstruction Database - Every 28 days



- 3) MAGVAR Database - Every 5 years (updated as described in a Genesys Aerosystems Service Bulletin)



**CAUTION:**

**Failure to update the EFIS with the correct NavData® causes the IDU to remain in continual reboot mode and does not allow any display page to appear.**

**Failure to update IAP/APD data with current data results in expired or missing NRST APD, IAP APD, or APPR plate images to appear on the MFD.**

The EFIS is updated through the ground maintenance function (GMF). To gain access to the GMF, prior to applying power, slide the secure data transfer port door (slip indicator or non-slip blank cover) at the bottom-center of the IDU bezel upward to the first detent position to expose the port.

To perform an update, the following procedures must be performed separately on every IDU installed in the aircraft.

To update the databases:

- 1) Load the navigation database (navdata.exe) and obstruction database (obst.exe) on secure data storage device.
- 2) With power off, insert the secure data storage device into the port.



**CAUTION:**

**Always install a valid secure data storage device in the IDU prior to activating any ground maintenance function. Operation of the GMF without a valid device installed may cause erroneous failure indications or corruption of the IDU.**

- 3) Turn on power to gain access to the GMF page.
- 4) Use **⬇** to highlight **Update Databases** and push to enter.

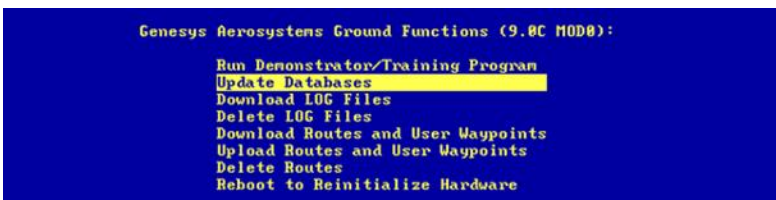


Figure 1-11: Ground Maintenance Page

- 5) Once each database is loaded, press any button to continue to complete the process.
- 6) Once both databases have been uploaded, power down the IDU, remove the secure data storage device, and lower the port door.
- 7) Once each IDU has been updated, power up the entire EFIS in normal flight mode and verify each IDU successfully updated with the latest database by noting the new navigation database and obstruction database cycle expiration dates before acknowledging the CRC screen (Figure 1-7). Because the obstruction database is advisory in nature, there technically is no expiration date. The listed date is the effective date of the next available obstruction database.
- 8) A CRC self-test verifies the data at every step of the process, thereby ensuring the data installed into the system has not been corrupted at any point during the process.

### 1.7.3. Software and Terrain Database Update

Software updates and terrain databases are provided on an as-needed basis and performed as per a service bulletin.

### 1.8. Run Demonstrator/Training Program

The EFIS has a built-in demonstration application to fly anywhere in the world while performing any procedure (except takeoff and landing) based on the current Jeppesen navigation database. Use this feature on the ground in ground-mode as follows:

- 1) With power off, lift the secure data transfer port door.
- 2) Power on the system. If desired, after entering Update Databases or any other option, use **1** to highlight **Run Demonstrator/Training Program** and then push to enter.

Use the demonstrator to gain familiarity with the EFIS menu structure and location of button tiles for each operation or load an instrument procedure before take-off to view the expected sequence of events.

The demonstrator begins flying over Reno, Nevada, USA at an altitude of approximately 8000' MSL. Altitude may be changed with altitude bug, VNAV profiles or navigation database procedures. Airspeed remains relatively constant but may be controlled with the IAS bug in the Bugs menu. The simulated aircraft may be positioned anywhere in the world, by activating a flight plan stored in the memory.

All appropriate navigation signals are simulated, allowing for precision and non-precision instrument approaches found within the current navigation

database. All obstructions in the latest obstruction database and all warning, caution, and advisory audible and flag annunciations are presented as appropriate during simulated flights.

**NOTE:**

When the IDU is operating in demonstrator mode, the IDU is isolated from all sensors and other IDUs. The creation of a flight plan results in that flight plan being stored on that IDU alone. To have that new flight plan available on all other displays, the following action must be taken. While in flight mode, activate the flight plan created in demonstrator mode. With crossfill enabled (in two-sided systems) view active flight plan on any other IDU and press **SAVE (L1)** to save this flight plan on all displays.

---

# Section 2 Display Symbolology

## 2.1. Introduction

This section details the symbolology used on the PFD and MFD in normal and essential modes. Not all combinations of possible views are represented.



Figure 2-1: PFD SVS Mode

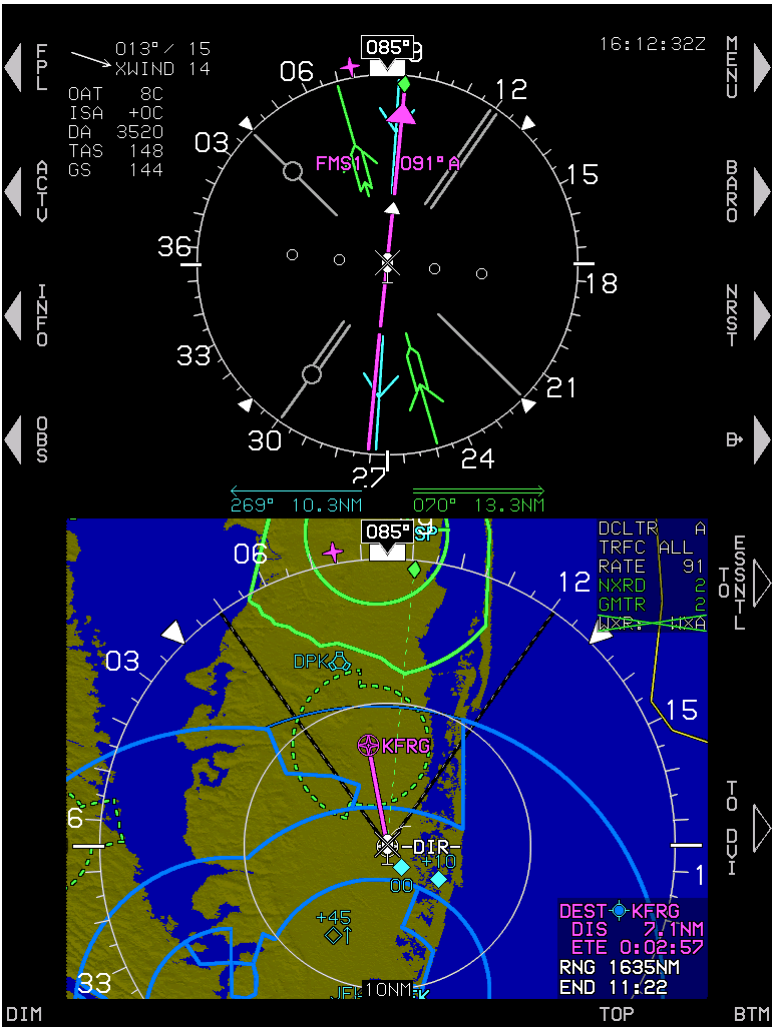


Figure 2-2: MFD Normal Mode

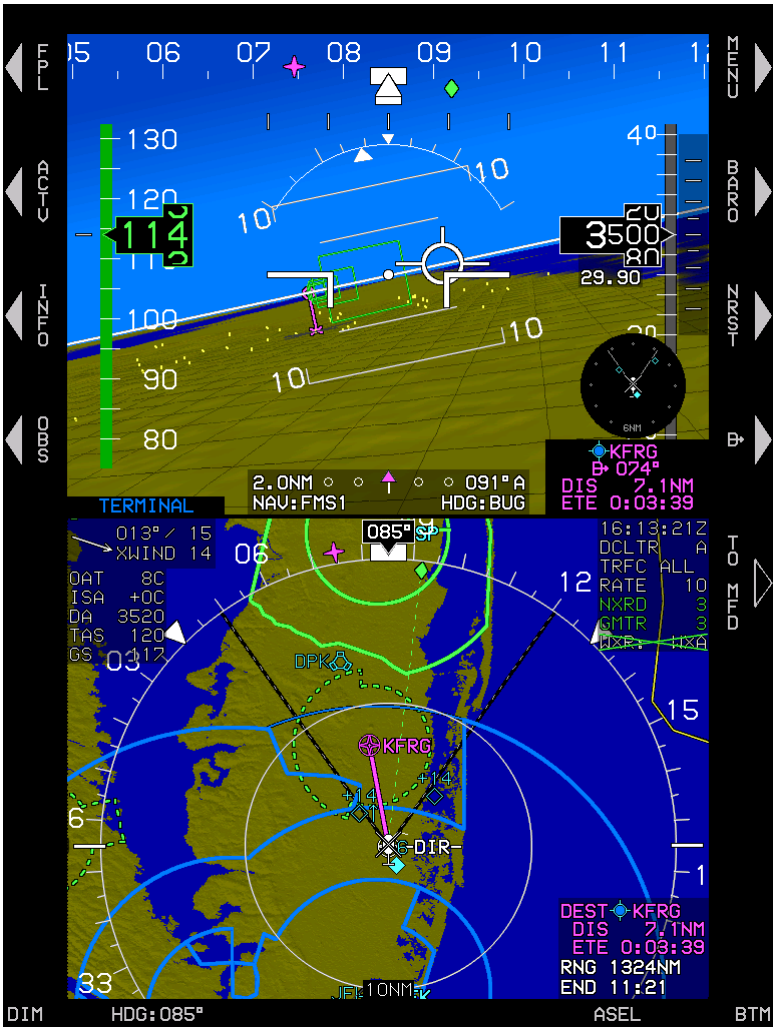


Figure 2-3: MFD Essential Mode

## 2.2. Menu Functions

See Section 3 Menu Functions and Step-By-Step Procedures for details.



Figure 2-4: Knob Functions




When the menu system is beyond the top-level, **EXIT (R1)** escapes to the top-level. When a menu level is deeper than the first level, **BACK (L1)** returns one level through the menu system. **MENU (R1)** is displayed when the menu system is at the top level.

one level through the menu system. **MENU (R1)** is displayed when the menu system is at the top level.

Figure 2-5: Menu Management
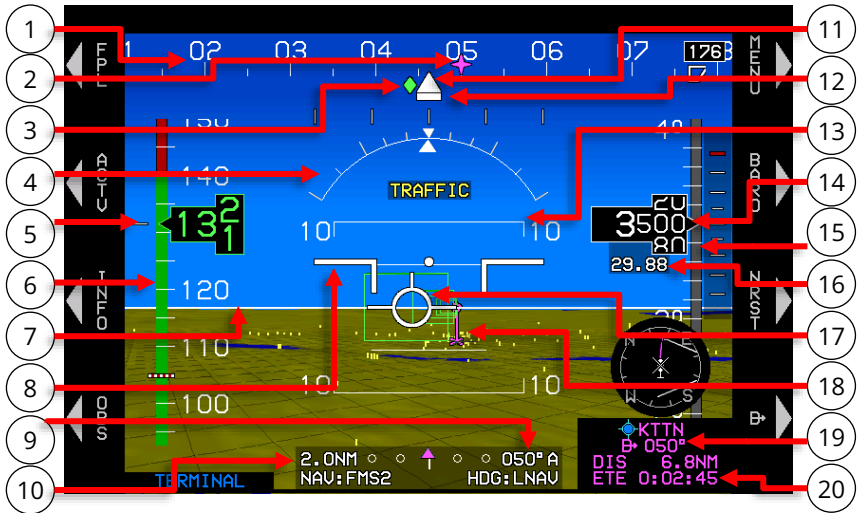
### 2.3. PFI Symbology



- |  |  |
|--|--|
| 1) Directional Scale                               | 12) Slip Indicator                                     |
| 2) Bearing to Waypoint                             | 13) Pitch Scale  |
| 3) Track Pointer                                   | 14) Altitude Readout                                   |
| 4) Bank Angle Scale                                | 15) Altitude Tape                                      |
| 5) Indicated Airspeed Readout                      | 16) Altimeter Setting                                  |
| 6) Indicated Airspeed Tape                         | 17) Flight Path Marker                                 |
| 7) Horizon Line                                    | 18) Active Waypoint Symbol                             |
| 8) Waterline                                       | 19) Along-Track Course and Distance to Active Waypoint |
| 9) Instantaneous Desired Course to Active Waypoint | 20) ETE or ETA based on Along-Track Distance           |
| 10) Course Deviation Indicator                     |  |
| 11) Heading Pointer                                |  |

Figure 2-6: PFI Symbology

The PFI combines pitot-static information, heading, attitude, 3D navigation data, and more overlaid on a virtual background of the outside world. Other objects in the background, including terrain, obstructions, traffic (if enabled),

and runways/heliports, are presented as if seen directly in front of the aircraft while looking outside.

### 2.3.1. PFD Display Basic Mode

When selected, basic mode is a traditional attitude display with airspeed, altitude, and heading scales appearing in blacked-out areas in a “Basic-T” arrangement but is disabled in unusual attitude mode. The following are no longer present in basic mode:

- 1) Atmospheric perspective
- 2) Airspeed trend
- 3) Terrain rendering
- 4) Obstruction rendering
- 5) Flight path marker
- 6) Airport runways/heli pads
- 7) Highway in the sky
- 8) Bank Scale Declutter



With Compass Rose in Bottom Area    Without Compass Rose in Bottom Area

Figure 2-7: PFD in Basic Mode

### 2.3.2. Airspeed Display

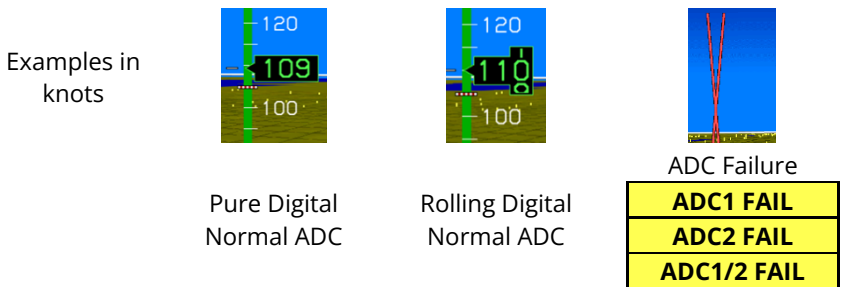


Figure 2-8: Airspeed Display

Airspeed is digitally displayed in same color as airspeed scale in knots per hour, miles per hour, or kilometers per hour depending upon the setting of the "Speed Units" in EFIS system limits. The digital display is either pure digital or incorporates rolling digits as set in EFIS limits. The airspeed box has a pointer



that interacts with the airspeed scale, which has graduations every 5 measurement units and labels every 10 measurement units (when applicable).


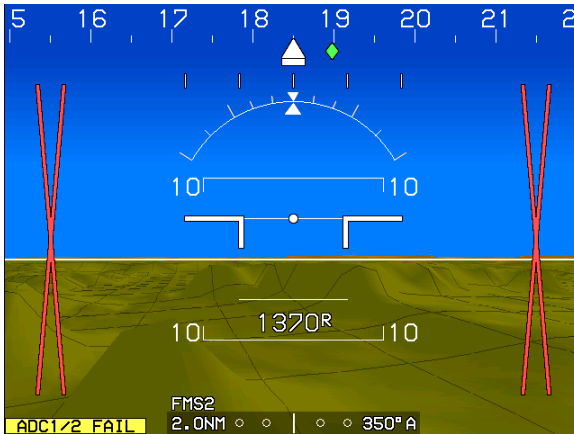


Figure 2-9: Airspeed Display Single Sensor System ADC Failure (Red X's Only)

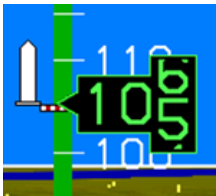The airspeed trend vector (calculated along the rotorcraft longitudinal axis) is displayed in a “worm” format to provide analog representation predicting speed achieved in 5 seconds assuming the instantaneous longitudinal acceleration is maintained.



Airspeed trend vector predicting speed of 112 KIAS within 5 seconds



Airspeed trend vector predicting speed of 86 KIAS within 5 seconds

Figure 2-10: Airspeed Trend Noodle

The airspeed scale for Part 27 or 29 rotorcraft has additional specific airspeed markings as defined in Figure 2-11.


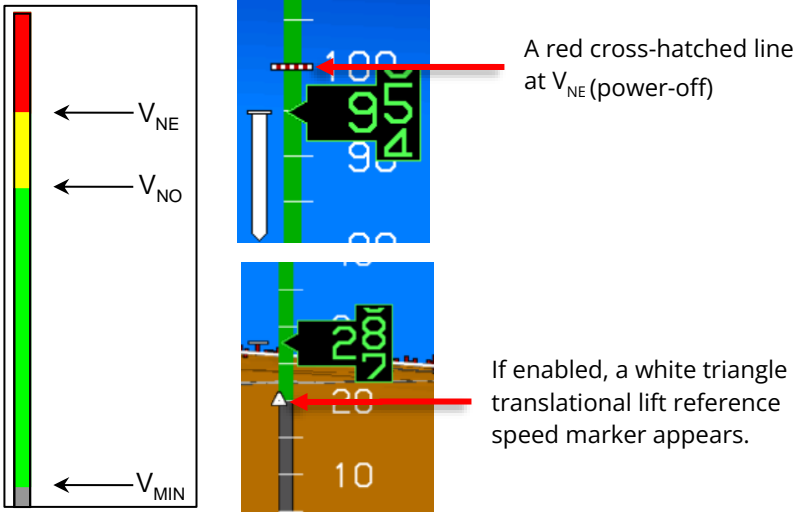


Figure 2-11: Airspeed Scale FAR Part 27/29

### 2.3.2.1. Airspeed Bug

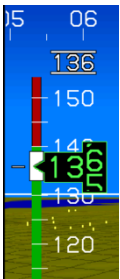The airspeed indication can have a pilot-settable airspeed bug with a 1-unit resolution and a range from the minimum airspeed bug value (set in the system limits) at the low end and red-line airspeed at the high end. The bug can be used as a visual reference.



The airspeed bug setting annunciation is colored white and the airspeed bug is always filled-white, as in Figure 2-12, which shows examples without a vertically integrated autopilot installed.

Figure 2-12: Airspeed Scale Bug Indication



**NOTE:**

See applicable autopilot guide for airspeed bug colors when vertically integrated with autopilot.



When the airspeed bug setting differs from aircraft speed to the extent the bug is off scale, the bug appears to be parked in the direction of the difference.


Figure 2-13: Airspeed Bug Off Scale

Table 2-1: Airspeed Bug Limits

Low End	High End
V <sub>MIN</sub>	Red-line (V <sub>NE</sub> )

### 2.3.3. Heading Display

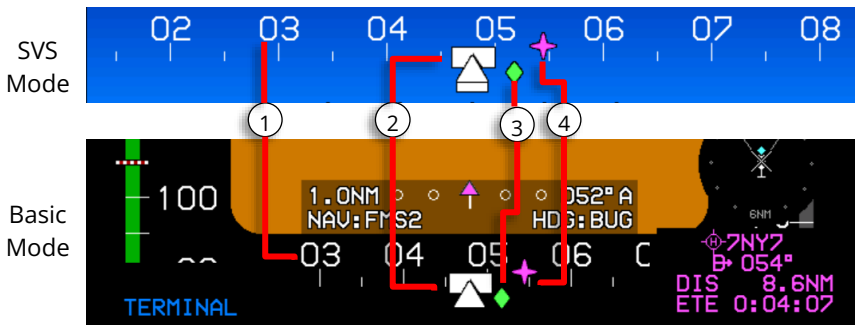The heading scale has graduations every 5° with major graduations and heading labels every 10° at equal space so that they approximately conform to the three-dimensional background at an aircraft roll angle of zero. A pilot-settable heading bug interacts with the heading pointer.



- 1) Heading Scale
- 2) Heading Pointer
- 3) Track Pointer
- 4) Active Waypoint Pointer

Figure 2-14: Heading Display



**NOTE:**

The track pointer is not displayed when ground speed is less than 30 knots.

The integral slip indicator is responsive to lateral (Y-axis) G-force (slip indicator is the white rectangular part of the heading pointer) and is damped so it approximately matches a conventional glass vial indicator.



Figure 2-15: Dampened Integral Slip Indicator

Table 2-2: Heading Display

	<p>Track pointer off scale when aircraft track is displaced from boundaries. (Extreme crosswind condition)</p>
	<p>When an active waypoint exists, a star-shaped bearing pointer corresponds with the active waypoint.</p>
	<p>Waypoint pointer is displaced from heading tape.</p>
	<p>When changed, the heading bug value is displayed for 5 seconds.</p>
	<p>When the heading bug is displaced beyond the boundaries of the heading scale, a partial heading bug is shown at the limit of the heading scale with the heading bug value above it.</p>
	<p>When the heading bug is hollow, feedback from the autopilot indicates HDG Bug sub-mode is in LNAV mode.</p>
	<p>When the heading bug is filled-white, feedback from the autopilot indicates HDG Bug sub-mode is in HDG mode.</p>
	<p>When AHRS is in DG mode, "DG" appears.</p>
	<p>Waypoint pointer and shortest direction of turn indications turn amber (yellow) if GPS loss of integrity (LOI) or loss of navigation (LON) caution.</p>

### 2.3.4. Altitude Display


The digital display of barometric altitude in feet or meters depends on the speed units system limit. Altitude is either purely digital (nearest 10 measurement units) or rolling digits (nearest 20 units) as defined in EFIS limits. The altitude box has a pointer that interacts with the altitude scale, which has graduations every 100 measurement units and labels every 500 measurement units. The altitude scale background has a gray region and a brown region where the junction between the gray and brown regions indicates ground level. When the ADC sensor fails, a red "X" is displayed in place of the altitude scale.



Pure Digital



Rolling Digital



ADC Failure




Figure 2-16: Altitude Display



Figure 2-17: Altitude Display Single System ADC Failure (Red X's Only)

### 2.3.5. Altitude Display (VNAV)

When enabled for performing VNAV with a manually selected altitude entered, **VNAV (L6)** appears. Pressing cancels ASEL (target altitude) and enters the VNAV altitude in the active flight plan.



Figure 2-18: Altitude Display (VNAV)

When in VNAV sub-mode, the altitude scale shows the active waypoint VNAV altitude (if it exists) with a bug symbol interacting with the altitude tape. The VNAV altitude bug setting is annunciated above the altitude scale with a resolution of 100 measurement units.

When not vertically integrated with a digital autopilot, the VNAV altitude bug setting annunciation includes "VNAV" indicating VNAV altitude sub-mode and is colored white with the VNAV altitude bug always filled-magenta.



Figure 2-19: VNAV Sub-Mode (Not Vertically Integrated) (Feet for Altitude and NM for Distance)



Figure 2-20: VNAV Sub-Mode (Not Vertically Integrated) (Meters for Altitude and KM for Distance)

### 2.3.6. Selected Altitude Sub-Mode (Target Altitude)

When in selected altitude sub-mode, the altitude scale has a pilot-settable target altitude bug.

The target altitude bug setting annunciation includes "ASEL" indicating selected altitude sub-mode and may be used either as a visual reference or, when vertically or partially integrated with an autopilot as a control parameter for climbs and descents.

Table 2-3: Selected Altitude Sub-Mode Range

Altitude	Range	Resolution	Indication
Feet	-1,000' to 20,000'	100 units	
Meters	-300m to 6,100m		

When an autopilot is not installed, the selected altitude is a reference only. The target altitude bug setting is white, and the target altitude bug is always filled-white.

### 2.3.7. Minimum Altitude


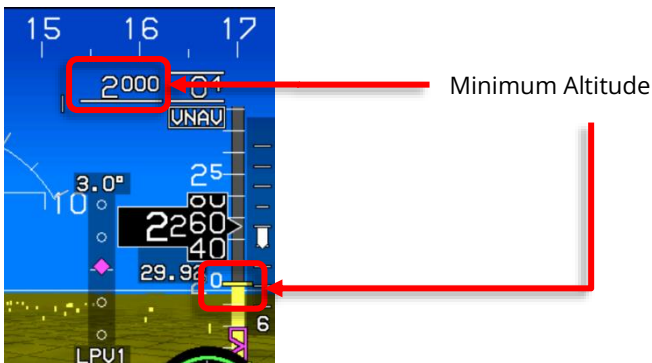


Figure 2-21: Minimum Altitude

The minimum altitude bug value is displayed in feet or meters with a resolution of 10 measurement units. The minimum altitude bug can be used in conjunction with a selected altitude or VNAV bug with no interference with each other. When a minimum altitude is set, descending from above to below causes a voice alert of "Minimums, Minimums" and the minimum altitude to turn amber (yellow) and flash.

### 2.3.8. Altimeter Setting

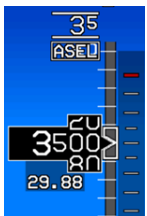

The altimeter setting is displayed digitally below the altitude readout box in inches of mercury (inHg) or millibars (mbar) according to the pilot-selected units. Press **BARO (R2)** to enter altimeter setting mode and view the altimeter setting in inHg or mbar value in the lower right corner. Rotate **1** CW to increase or CCW to decrease QNH. Push **1** to enter the new value and close the menu.

Figure 2-22: Altimeter Setting

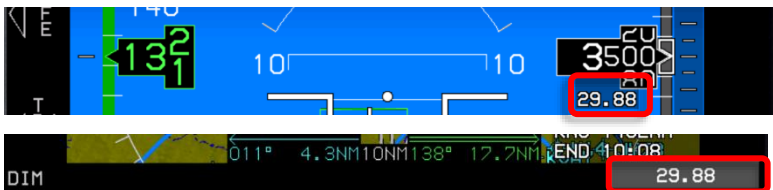


Figure 2-23: Selecting Altimeter Setting

QFE: Barometric setting resulting in the altimeter displaying height above a reference elevation (e.g., airport or runway threshold). When in QFE mode on the ground, system automatically sets to read zero altitude.









QNE: Standard barometric setting (29.92 inHg or 1013 mbar) used to display pressure altitude for flight above the transition altitude.

QNH: Barometric setting resulting in the altimeter displaying altitude above mean sea level at the reporting station.

Digital display of altitude is either purely digital (nearest 10 feet) or incorporates rolling digits (nearest 20 feet) as determined by EFIS limits.

Table 2-4: Altimeter Setting

 <p>Pure Digital - QNH</p>	 <p>Rolling Digital - QNH</p>
 <p>SVS Mode - QNH</p>	 <p>Basic Mode - QNH</p>
 <p>SVS Mode - QFE</p>	 <p>Basic Mode - QFE</p>


**NOTE:**

Altimeter setting limits are 745-1100 (mbar) or 22.00-32.00 (inHg).

### 2.3.9. Vertical Speed Indicator

The vertical speed indicator (VSI) is depicted in a "worm" format providing analog and digital representation of VSI in fpm or m/s depending upon the setting of the "Speed Units" system limit. A red line is optionally included at the rotorcraft's published VSI limit.

The pilot-settable VSI bug setting can be set in increments of 100 fpm or 1 m/s resolution. The vertical speed bug is used either as a visual reference, or as a control parameter for climbs or descents. It is mutually exclusive with the airspeed bug. When applicable, the VSI scale can include a red line at the rotorcraft's VSI limit.



Altitude in Feet: 600 fpm Descent




Altitude in Meters: 6 m/s Climb

Figure 2-24: VSI

Table 2-5: Scale Graduations and Display


Traffic Installed	Scale Limit	Scale Graduations and Display
Rounded to 100 fpm with Resolution of 100 fpm		
With TCAS-II	±2,000 fpm	±500, ±1,000, ±2,000, ±3,000 fpm Background of the VSI functions as an RA display with green and red regions to provide RA maneuver guidance.
Without TCAS-II	±3,000 fpm	±500, ±1,000, ±2,000, and ±3,000 fpm
Rounded to 1 m/s with Resolution of 1 m/s		
	±80 m/s	±5, ±10, ±20, and ±80 m/s
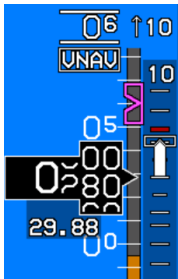
### 2.3.9.1. Vertical Speed Bug



The VSI indication has a pilot-settable vertical speed bug with a 100 fpm resolution and a range of ±2,000 fpm. It is mutually exclusive with the airspeed bug.

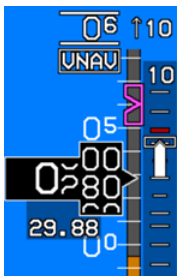Figure 2-25: VSI Bug (fpm)



When using m/s, the scale of the VSI is ±80 m/s. The scale includes an integral scale with graduations at ±5, ±10, ±20, ±50, and ±80 m/s. Analog readouts of VSI rounded to the nearest 1 m/s appear above the VSI (climbs) or below the VSI scale (for descents).

Figure 2-26: VSI Bug (m/s)

### 2.3.10. Normal AGL Indication

Above ground level (AGL) altitude is displayed in two formats, above the course deviation indicator (normal) and as the (analog) AGL indicator. These are mutually exclusive of each other and driven by the AGL altitude source used for TAWS, but not displayed when source is invalid or greater than the radar altimeter maximum valid as set in EFIS limits.

Source indication designates the source for either format as follows.

R = Radar Altitude

G = GPS/SBAS geodetic height less database ground elevation

B = Barometric altitude less database ground elevation

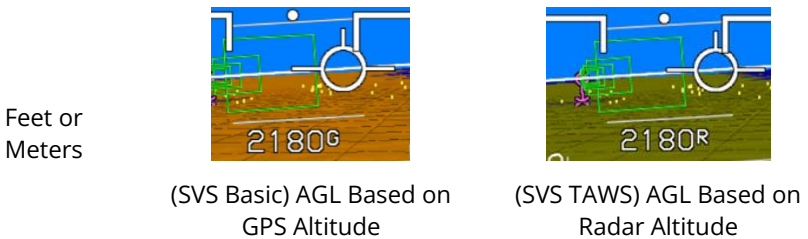


Figure 2-27: Normal AGL Indication

AGL is not displayed when:

- 1) AGL altitude is greater than the radar altitude maximum valid altitude as set in EFIS limits.
- 2) AGL source is invalid.
- 3) Source is barometric and indicated airspeed is in the noise range (less than 20KIAS) due to rotor wash effects.
- 4) In unusual attitude mode.

When AGL altitude source is radar altitude, AGL indication is smoothed to avoid jumpiness as defined in Table 2-6.

Table 2-6: AGL Indication

Altitude	≥300 Feet	≥100 Feet <300 Feet	<100 Feet	≥100 Meters	<100 Meters
AGL Indication resolution	10 Feet	5 Feet	1 Foot	5 Meters	1 Meter

### 2.3.11. Analog AGL Indication

An analog AGL indication may be selected for display on the PFI (above the waypoint identifier). Analog AGL indication is based on GPS/SBAS or Radar altimeter source used for the TAWS.

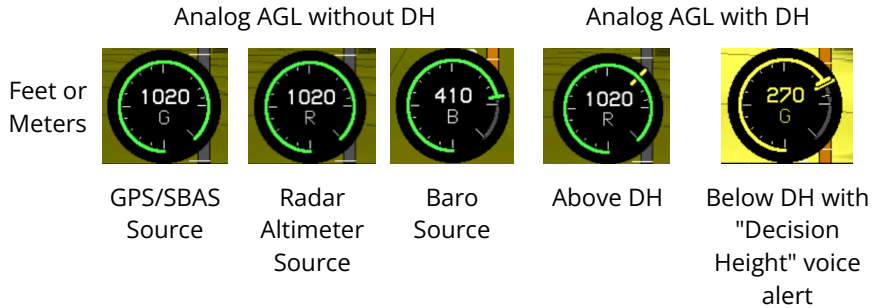


Figure 2-28: Analog AGL Indication

If traffic is enabled and while above 500' AGL, the mini traffic overrides the analog AGL indication.

Table 2-7: Analog AGL Indicator

Markings		AGL	Scaling (clock position)
Feet	0 to 100 Feet	0'	6:00
	100 to 1,000 Feet	50'	9:00
	Linear	100'	12:00
	Red radial line disappears at 1,000'	200'	1:30
		500'	3:00
Meters	0 to 50 Meters	0m	6:00
	50 to 500 Meters	25m	9:00
	Linear	50m	12:00
	Red radial line disappears at 500m	100m	1:30
		250m	3:00

Table 2-8: Analog AGL Indicator Markings

Feet	Tick Marks		Meters	Tick Marks	
	Major	Minor		Major	Minor
0'	✓		0m	✓	
10'		✓	5m		✓
20'		✓	10m		✓
30'		✓	15m		✓
40'		✓	20m		✓

Table 2-8: Analog AGL Indicator Markings

Feet	Tick Marks		Meters	Tick Marks	
	Major	Minor		Major	Minor
50'	✓		25m	✓	
60'		✓	30m		✓
70'		✓	35m		✓
80'		✓	40m		✓
90'		✓	45m		✓
100'	✓		50m	✓	
200'		✓	100m		✓
300'		✓	150m		✓
400'		✓	200m		✓
500'	✓		250m	✓	
1000'	✓		500m	✓	

The analog AGL indicator disappears in unusual attitude mode and is mutually exclusive with the mini map, and mini traffic. Analog AGL altitude is not displayed when it is greater than the radar altitude maximum valid value (always in feet, as set in EFIS limits), when it is invalid, or when the pilot deselects analog AGL.

### 2.3.12. Decision Height

A pilot-settable decision height is displayed above the CDI in feet or meters with the abbreviation DH and by a yellow radial on the analog indicator. When the aircraft descends below decision height, DH ### turns amber (yellow) and flashes and the circular tape turns amber (yellow). This is accompanied by “Decision Height” voice alert.



Figure 2-29: Decision Height

### 2.3.13. Pitch Scale

The PFI has large aircraft symbol reference marks fixed in the center of the display. Rotation of the background, pitch scale, and background-oriented display elements occur relative to the location of the waterline symbol or large aircraft symbol reference marks.

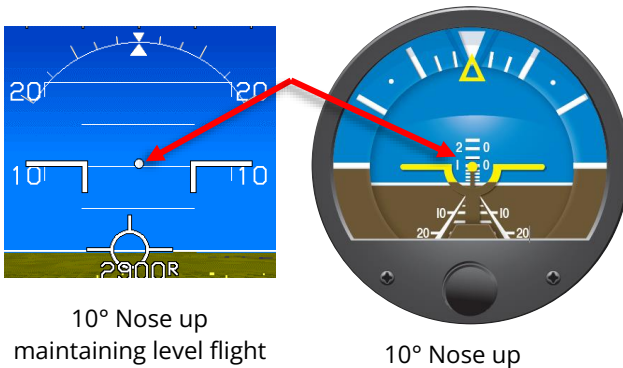


Figure 2-30: Pitch Scale

Pitch scale has increments every 5° with major increments and pitch scale labels every 10°. Increments are equally spaced to approximately conform to the 3D PFD background. Pointer bars at the ends of each major increment indicate direction to the horizon and automatically declutter to present the fewest possible increments needed to clearly display pitch attitude. The pitch scale terminates with a zenith symbol (small white circle) at +90° and a nadir symbol (small white circle with "+") at -90°.


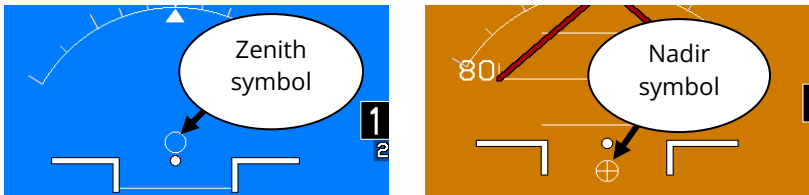


Figure 2-31: Pitch Scale Zenith and Nadir Symbol


### 2.3.14. Bank Angle Scale

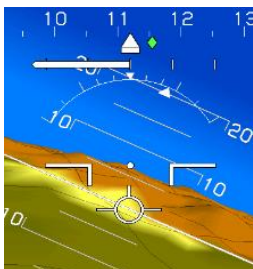The bank scale and roll pointer are centered upon the large aircraft symbol reference marks in basic or unusual attitude mode. In Basic Mode, with the slip indicator enabled, the roll pointer incorporates an integral slip indicator responsive to lateral (Y-axis) G-force.




Marks are shown at 10°, 20°, 30°, 45°, and 60° of bank. The bank angle scale and roll pointer are centered upon the large aircraft symbol reference marks (basic or unusual attitude mode). Both sky pointer and roll pointer configurations are shown in Figure 2-33, demonstrating a right turn.

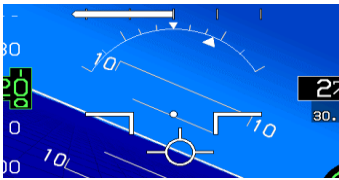Figure 2-32: PFD Bank Scale



Sky Pointer

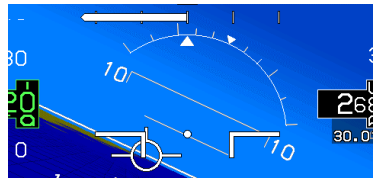

Roll Pointer

Figure 2-33: Roll vs. Sky Pointer



**NOTE:**

If the bank scale has been manually decluttered, it automatically appears while at low speed  $\leq 30$  knots ground speed. Bank scale decluttering can only be configured on SVS mode.

When bank angle scale decluttering is selected, the appearance of the bank angle scale and roll pointer are dampened based on magnitude and time to prevent nuisance appearances. A bank angle scale and sky pointer are displayed when the magnitude of the bank angle exceeds  $2.8^\circ$ .

**2.3.15. Turn Rate Indicator**

Rate of turn is available as an option in the PFD declutter menu to show a worm in the direction of turn with full-scale deflection indicating a standard rate of turn (and slightly beyond) and half-standard rate indicated at the mid-scale marking.




Figure 2-34: Turn Rate Indicator (Selected from Declutter Menu)

**2.3.16. PFI Background**

The PFI has a 3D background generated from terrain elevation and obstruction elevation data stored in electronic memory. The actual horizon displayed on the PFI is based upon the higher of terrain within 90NM or a horizon calculated using a visible horizon equation. Thus, the relative elevation of terrain and obstructions with respect to aircraft altitude and performance is observed by reference to the primary flight information, pitch ladder, and flight path marker (FPM).



Time-Critical Terrain Caution Alert    Time-Critical Obstruction Caution Alert

Figure 2-35: PFD Terrain and Obstructions

A blended-tone sky is displayed in conjunction with terrain. The sky fades from light blue at the horizon to dark blue at the top of the display to simulate atmospheric perspective and enhance the 3D presentation.



**WARNING:**

**DO NOT USE THIS EFIS FOR TERRAIN-FOLLOWING FLIGHT. DO NOT ATTEMPT TO NAVIGATE USING TERRAIN DEPICTION. ALWAYS ADHERE TO PUBLISHED NAVIGATIONAL INSTRUMENT PROCEDURES AND NAVIGATIONAL CHARTS IN ALL FLIGHT CONDITIONS.**

Terrain ahead of the aircraft is shown with the artificial horizon in the correct scale and perspective for the aircraft’s current position and altitude. Worldwide terrain coverage is provided in each IDU and shown with a resolution as in Table 2-9. Terrain is displayed ahead of the aircraft using a grid and simulates atmospheric perspective (terrain lines fade into the background ground color as they recede into the distance).

At latitudes greater than 75°, no grid lines are shown. To keep the grid spacing relatively consistent, at latitudes between 45° and 75°, the longitude spacing is increased according as in Table 2-9.

Table 2-9: LAT-LON Resolution Boundaries

Latitude Range	Longitude Grid Spacing	Heading Boundary	
		Pole	Equator
0° to 46°	24 arc-seconds		
46° to 62°	48 arc-seconds	46°	45°
62° to 70°	72 arc-seconds	62°	61°
70° to 74°	96 arc-seconds	70°	69°
74° to 75°	120 arc-seconds	74°	73°



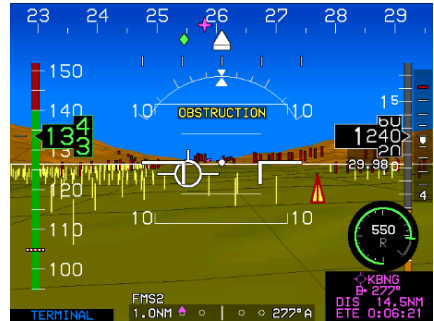


**NOTE:**

There is a one-degree dead band to prevent grid flicker while flying along one of the boundary latitudes. The grid space switching changes at one degree less latitude when flying towards the Equator than it does when flying toward the Poles.



Obstructions without hazardous condition



Obstructions creating an OBSTRUCTION caution

Figure 2-36: PFI with Obstructions

Obstructions such as towers, antennas, buildings, and other manmade structures are shown on the PFD as vertical amber (yellow) or red lines. Obstructions are conformal in both location and size and are only shown in conjunction with terrain regardless of altitude. Obstructions representing a collision hazard are annunciated with a time-critical warning or caution alert. See Section 4 Warning Caution Advisory System for description of alerts.



**WARNING:**

**MANY TOWERS, ANTENNAS, STRUCTURES, OBSTRUCTIONS, AND POWERLINES ARE NOT IN THE DATABASE.**



**NOTE:**

The obstruction data is provided by Jeppesen® and must be updated every 28 days to maintain current database information.

Table 2-10: Terrain and Obstruction Rendering Levels

Feature	Terrain Coloring	Obstructions	Notes
SVS BASIC	Shades of brown for non-water terrain	Within the following ranges, depicted on PFI in SVS Basic or SVS TAWS mode:  Narrow FOV: 17NM  Wide FOV: 12NM  Tops at or below aircraft altitude:	Amber and red colors are not used for normal display of terrain. Obstructions are shown as yellow lines.  Deep blue for areas of water has precedence over shades of brown.
SVS TAWS	Shades of olive when at or below 100 ft. aircraft altitude  Shades of brown when above 100 ft. aircraft altitude  TAWS coloring of FLTA alert or warning cells	Amber  Tops are above aircraft altitude: Deep red  Obstructions causing TAWS alarms are depicted in separate symbology (See Section 7 TAWS)	Amber and red colors are used for normal display of terrain and terrain areas causing FLTA alerts.  Deep blue for areas of water has precedence over other colors.
None	No terrain nor obstructions are shown.  1) Neither SVS BASIC or SVS TAWS is selected; OR 2) The GPS/SBAS sensor is failed; OR 3) The ADC is failed; OR 4) In unusual attitude mode; OR 5) When the horizontal figure of merit exceeds the greater of 0.3NM or the horizontal alarm limit for the mode of flight.		

When terrain and obstruction rendering are deselected or disabled, the PFI background is a conventional blue over brown attitude display presentation without atmospheric perspective. Additionally, terrain may be deselected on the PFI and retained on the map.

**NOTE:**

Independent declutter of obstructions is not possible.




PFI Area Terrain Deselected



MAP Area Terrain Deselected

Figure 2-37: PFD with Terrain Deselect Options
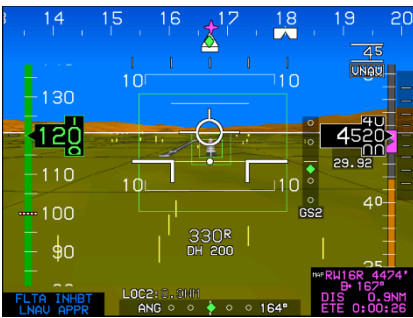
### 2.3.16.1. PFI Field of View (FOV)



Wide Field of view (Zoom Off)



Narrow Field of view (Zoom On)

Figure 2-38: PFI Field of View


The background has two pilot-selectable field of view (FOV) modes, wide FOV mode (approximately 70°) and narrow FOV mode (approximately 35°). In unusual attitude mode, wide FOV mode is automatically selected. This option is normally used on final approach to emulate the synthetic vision as seen through the windscreen for a visual advantage. Unless changed back to zoom off, zoom on remains until shut down. During the next power-up the EFIS PFD initializes with zoom off. (See § 2.4.4.)

**NOTE:**

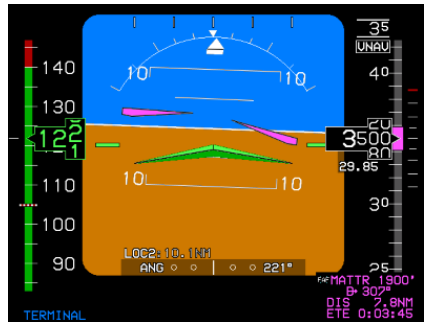During a missed approach procedure requiring an immediate turn, it is recommended to select zoom off for a wide field of view to capture all obstacles and terrain.

**2.3.17. Flight Director**


FD1 Single Cue



FD1 Single Cue (Basic Mode)



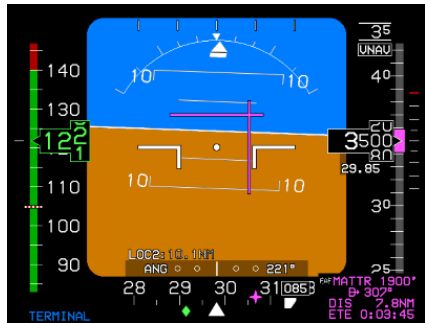FD2 Dual Cue



FD2 Dual Cue (Basic Mode)

Figure 2-39: Flight Director

Flight director (FD) symbology is controlled on the IDU or integrated autopilot/flight director. When selected, FD symbology and valid steering commands are received from the FD. The PFD has a large aircraft symbol fixed in the center of the display. Rotation of the background, pitch scale, and background-oriented display elements occur relative to the location of the large aircraft symbol reference marks.

### 2.3.18. Flight Path Marker (Velocity Vector)

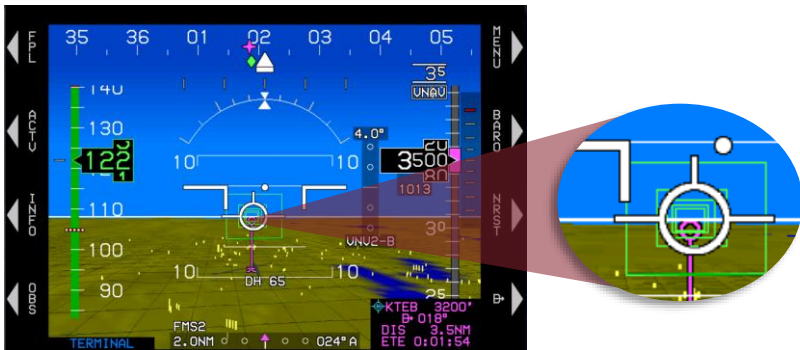


Figure 2-40: Flight Path Marker

The flight path marker (FPM) appears on the background to coincide with the aircraft's actual flight path as projected on the outside world. The FPM is laterally displaced parallel to the horizon with respect to the center of the display to account for the difference between aircraft track and heading and is vertically displaced perpendicular to the horizon to account for aircraft climb or descent angle.

Because the FPM is used in conjunction with a 3D background, the FPM utility normally associated with a HUD is achieved. When the FPM is displaced to the extent it interferes with the heading, altitude, or airspeed indications, it is removed from the display.



FPM nearing airspeed tape due to strong crosswind from the right



FPM removed due to excessive crosswinds from the right

Figure 2-41: Flight Path Marker Views

FPM movement is dampened by reference to aircraft pitch and heading so not to deviate from pitch or heading at a rate greater than 1°/sec.





FPM grayed to indicate degraded condition with GPS failure

FPM absent (Unusual Attitude Mode)

Figure 2-42: Flight Path Marker Behavior

Table 2-11: FPM and Hover Vector Relationship

Symbology	Not Shown	Shown
	1) Basic Mode 2) EFIS configured for round dials 3) During Unusual Attitude Mode 4) When the location of the FPM is displaced to the extent that it would interfere with heading, altitude, or airspeed indications 5) During <b>FPM INHBT</b> if external switch is configured in EFIS limits 6) FPM at low speed (airspeed ≤ 45 KIAS when configured for WOG, the aircraft is in ground mode)	1) SVS Mode 2) Airspeed >30 KIAS 3) When configured for WOG, airspeed is >45 KIAS 4) During reversionary mode (GPS failure) changes to light gray color
		1) Ground speed >30 knots 2) During AHRS failure 3) When configured for WOG, aircraft is in ground mode



When the Eastern (Russian) ADI format is configured in the EFIS limits, the FPM rotates to indicate roll.

Figure 2-43: Flight Path Marker Eastern (Russian) Format

### 2.3.19. Highway in the Sky/Skyway

When not decluttered, the EFIS displays the active GPS/SBAS navigation route or manual FMS OBS course in 3D with a series of skyway boxes, which overlie the flight plan route at a desired altitude and provide lateral and vertical guidance. See Section 6 IFR Procedures for details.




Coupled skyway with autopilot or without autopilot


Uncoupled from skyway with autopilot

Figure 2-44: Highway in the Sky
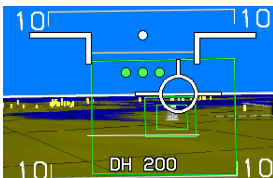
### 2.3.20. Landing Gear Indication



SVS Mode

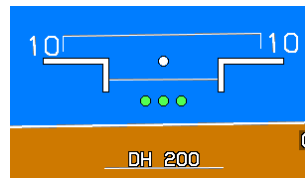

Basic Mode

Figure 2-45: Landing Gear Indication

If configured, the landing gear position is indicated as small, green “tires” below the flight path marker or large aircraft reference marks.

### 2.3.21. Hover Vector

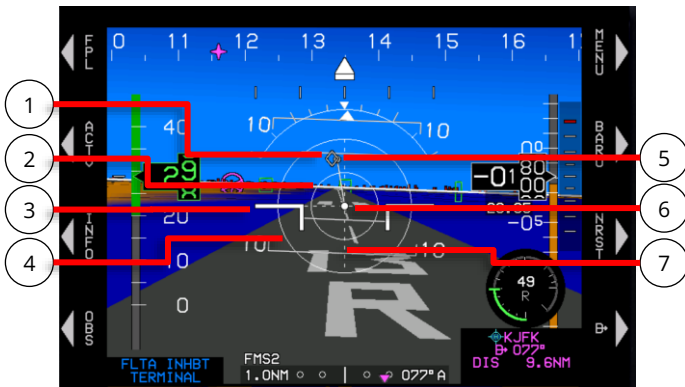


Figure 2-46: Hover Vector

The hover vector indicates direction and ground speed of drift at low ground speeds ( $\leq 30$  knots with 2 knot deadband) with large aircraft symbol reference marks consisting of the following:

- 1) A diamond shaped acceleration cue is centered on the gray dot to indicate direction and magnitude of horizontal acceleration;
- 2) Inner concentric ring indicating 10 knots ground speed or 5 m/s ground speed;
- 3) Large aircraft symbol reference;
- 4) Outer concentric ring indicating 20 knots or 10 m/s ground speed;
- 5) A gray dot equal in size to the white dot with a white connecting line indicates direction and magnitude of drift in a gods-eye view. Deviation of the dot in a straight up direction (12 o'clock position) indicates forward flight while straight down (6 o'clock position) indicates rearward flight. Deviation of the dot laterally indicates lateral drift. Movement of the dot is constrained to less than 5 knots per second, or 2.5 m/s, to prevent jumpiness;
- 6) The white dot of the large aircraft symbol reference indicates 0 knots, or 0 m/s, ground speed; AND
- 7) Vertical and horizontal dashed lines passing through the center extending to the outer ring.

See § 2.7.1 for full hover vector symbology with Hover page on MFD.





AGL Indicator (Normal)



AGL Indicator (Analog)

Figure 2-47: PFD Hover Vector Symbology

### 2.3.22. Marker Beacon Symbology

Marker beacon data acquired from the navigation receiver are displayed on the PFI but are disabled when the selected NAV source is other than VLOC1 or VLOC2. Valid marker beacon signals cause circular indicators with appropriate coloring and markings. Marker beacons and flight director symbology disappear in the unusual attitude mode.


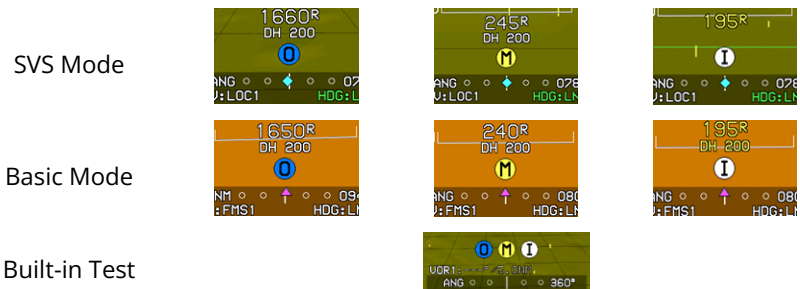


Figure 2-48: Marker Beacons

### 2.3.23. Timer Indication and Flight Time



When selected, a countdown or count-up timer is displayed above the large aircraft symbol reference marks. The flight timer begins as soon as the first time the aircraft transitions from ground mode to air mode. This flight time continues until the EFIS is powered down.

Figure 2-49: Timer Indication

When the flight time display option is selected, the current elapsed time since the aircraft transitioned from ground to air mode is displayed for 10 seconds or until any button is pressed or any action on knobs 1, 2, or 3. If the aircraft has not yet transitioned from ground to air mode, upon selecting the flight time display, it appears as **FLT TM: 00:00:00**.



Figure 2-50: Flight Time

### 2.3.24. Course Deviation Indicator (CDI)

Table 2-12: CDI Behavior and Color

CDI Pointer and Condition	Color or Behavior
Full-Scale Deflection	Flash

Slaved to GPS/SBAS

Scale is an appropriate FSD value for the mode of flight:

En route:  $\pm 2$ NM

From En route to Terminal: Change from  $\pm 2$  NM FSD to  $\pm 1$  NM FSD over a distance of 1 NM; start transition when entering terminal mode.

From Terminal to En route: Change from  $\pm 1$  NM FSD to  $\pm 2$  NM FSD over a distance of 1 NM; start transition when entering en route mode.

From Terminal to Approach: If VTF, switch immediately.

Otherwise, change from  $\pm 1$  NM FSD to approach FSD over a distance of 2 NM; start transition at 2 NM from FAWP.

From Approach to Terminal: Change to  $\pm 1$  NM.

From Departure to Terminal: If the initial leg is aligned with the runway, change from  $\pm 0.3$  NM FSD to  $\pm 1$  NM FSD at the turn initiation point of the first fix in the departure procedure.

2.0NM ○ ○ ↑ ○ ○ 123° A NAU:FMS2 LOI HDG:BUG	Slaved to GPS/SBAS (with GPS LOI Amber (Yellow)
2.0NM ○ ○   ○ ○ 347° A NAU:FMS2 LON HDG:BUG	Slaved to GPS/SBAS (with GPS LON Amber (Yellow)
Normal conditions	Magenta
In sources other than FMS	ANG (angular) scale annunciation
With Analog Autopilot Configured	
RNP ○ ○ ↑ ○ ○ 162° A NAU:FMS1 HDG:LNAV	RNP level of service
2.0NM ○ ○ ↑ ○ ○ 092° A NAU:FMS2 HDG:BUG	The True North symbol (°) (used if the navigation source is FMS and in True North mode)
ANG ○ ○   ○ ○ 300° NAU:BC1 HDG:BUG	Reverse sensing (Course error exceeds 104°)

Table 2-12: CDI Behavior and Color

CDI Pointer and Condition	Color or Behavior
<del>ANG: ---   --- 351° NAV: LOC2 HDG: BUG</del>	Red "X" displayed over CDI
2. ONM ○ ○   ○ ○ 346° A NAV: FMS1 HDG: LVL	Holding the wings level
1. ONM ○ ○ ↑ ○ ○ 256° A NAV: FMS1 HDG: LNAV	Selected nav source FMS1
2. ONM ○ ○   ○ ○ 004° A NAV: FMS2 HDG: BUG	Selected nav source FMS2 (Only available if a second GPS/SBAS receiver is installed)
ANG ○ ○ ◆ ○ ○ 300° NAV: LOC1 HDG: BUG	Selected nav source VLOC1
ANG ○ ○ ↑ ○ ○ 171° NAV: VOR1 HDG: LNAV	Selected nav source VOR1 with TO indication and LNAV captured
ANG ○ ○ ↓ ○ ○ 350° NAV: VOR2 HDG: BUG	Selected nav source VOR2 with the FROM indication
With Integrated Autopilot or Without Autopilot Configured When VOR, LOC, or BC is the NAV source, DME, when available, is displayed next to the NAV source	
BC1 : 4.4NM ANG ○ ○ ◆ ○ ○ 258°	Reverse sensing (Course error exceeds 104°)
<del>LOC1: ---. -NM ANG: ---   --- 351°</del>	Red "X" displayed over CDI
FMS1 ANG ○ ○ ↑ ○ ○ 258° A	Selected nav source FMS1 (during GPS approach)
LOC1: 4.4NM ANG ○ ○ ◆ ○ ○ 231°	Selected nav source VLOC1
VOR1: 214° / 9.0NM ANG ○ ○ ↑ ○ ○ 214°	Selected nav source VOR1 with TO indication
VOR2: 296° / 12.9NM ANG ○ ○ ↓ ○ ○ 116°	Selected nav source VOR2 with FROM indication

### 2.3.24.1. OBS Setting of CDI

In automatic mode, the system controls the scale and OBS. The selected navigation source is annunciated below the CDI as follows:

- 1) NAV: FMS1/FMS2
- 2) NAV: VOR1/LOC1
- 3) NAV: BC1/BC2 (annunciated instead of LOC1/2 when course error exceeds 104°)
- 4) NAV: VOR2/LOC2

### 2.3.24.2. Heading/Roll-Steering Sub-Mode

Heading/roll-steering sub-mode annunciation appears immediately right of the selected navigation source annunciation and displays:

- 1) HDG: LNAV (LNAV sub-mode guidance)
- 2) HDG: BUG (Heading bug sub-mode guidance)
- 3) HDG: --- (Failure sub-mode)

### 2.3.25. Vertical Deviation Indicator (VDI)

The vertical deviation indicator (VDI) displays vertical deviation for the selected valid vertical navigation source. The VDI displays the proper descent profile and automatically disappears in unusual attitude mode.

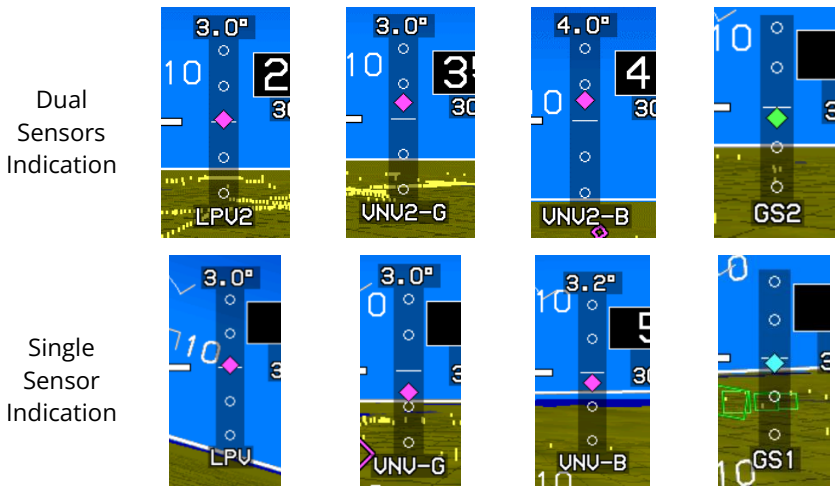


Figure 2-51: Vertical Deviation Indicator

- 1) LPV Mode and LPV1 or LPV2: When descending on the final approach segment in LPV mode. GPS altitude generates VDI indications; users may follow LPV minima guidance regardless of temperature.
- 2) LNAV Mode and VNV1-G or VNV2-G: When descending on the final approach segment in LP, LNAV/VNAV, and LNAV or RNP modes when using GPS VNAV. GPS altitude generates VDI indications; the pilot may follow guidance to LNAV minima regardless of temperature.
- 3) LNAV Mode and VNV1-B or VNV2-B: Default FMS barometric VNAV mode. Using barometric altitude to generate the VDI, the pilot may follow guidance to LNAV minima if the specified temperature is within limits.

- 4) GS1 or GS2: Glide slope receiver #1 or #2 as indicated. The pilot follows guidance to published barometric DH.

Table 2-13: Vertical Deviation Indicator Behavior

Source (Below VDI)	Behavior/Condition	Pointer Color
FMS	Conforms to the VDI display	Magenta
Glide Slope	Source must be valid when a valid glide slope is received.	Magenta (FMS) Cyan (VLOC 1) Green (VLOC 2)
LPV or VNAV mode	<p>Source is valid if:</p> <p>On VNAV descent segments when approaching the Top of Descent point to provide descent anticipation as long as the following are true:</p> <ol style="list-style-type: none"> <li>1) On VNAV descent segments; or</li> <li>2) If the vertical deviations on VNAV level segments option are enabled, on VNAV level segments; or</li> <li>3) If the vertical deviations on the VNAV level segments option are disabled when approaching the top of the descent point to provide descent anticipation;</li> </ol> <p>Providing:</p> <ol style="list-style-type: none"> <li>1) Aircraft is within 2NM or twice the full-scale deflection for the mode of flight (whichever is greater) of the lateral navigation route; and</li> <li>2) Aircraft is in TO operation relative to the active VNAV waypoint</li> </ol>	Magenta

Table 2-13: Vertical Deviation Indicator Behavior

Source (Below VDI)	Behavior/Condition (i.e., considering VNAV offsets); and	Pointer Color
	3) If on final approach segment, the aircraft is within a 35° lateral wedge of the azimuth reference point (GARP or MAWPT +10,000 ft.).	
LPV, VNV-G	During GPS LOI/LON or GPS VLON	Pointer and Text Color Amber (Yellow)



Figure 2-52: VDI Color during GPS/SBAS LOI/LON or VLON

**NOTE:**

The VDI remains functional during a VLON condition, providing the indication can be computed. If the pilot must revert to LNAV minimums, the VDI provides advisory guidance for stabilized profile during descent. A loss of navigation alert does not require removing navigation information from the navigation display. It is acceptable to display navigation information concurrent with the failure/status annunciation when conditions warrant.

### 2.3.26. Active Waypoint and Waypoint Identifier

The active waypoint symbol is a magenta “tethered balloon” consisting of:

- 1) an “X” depicted at the ground location of the active waypoint;

- 2) a hoop or “tethered balloon” (for fly-over waypoints) or “tethered diamond” (for fly-by waypoints) depicted at the VNAV altitude or at aircraft altitude (if there is no VNAV altitude), and
- 3) a line connecting “X” and hoop.



Figure 2-53: Active Waypoint Symbol

The “X” and connecting line are not shown if no ground elevation information is encoded with NavData® waypoint information (e.g., terminal and en route fixes). The active waypoint symbol is drawn using hidden-surface removal techniques of the terrain and obstruction rendering so an active waypoint behind terrain appears to be so. The active waypoint symbol disappears in unusual attitude mode and turns amber (yellow) in a GPS LOI/LON caution.

The identifier of the waypoint along with the path and along-track distance to the waypoint is displayed in the lower right corner of the PFI in magenta. If a target altitude is not set and the active waypoint has a VNAV altitude associated as in Figure 2-54 the identifier includes a display of the VNAV altitude.



- |  |   |
|--|---|
| 1) Instantaneous desired course to Active Waypoint | 3) Along-track distance to active waypoint  |
| 2) Course to waypoint                              | 4) ETE or ETA based on along-track distance |

Figure 2-54: Active Waypoint



**NOTE:**

Only the active waypoint is shown on the PFD display. Subsequent waypoints in a route are displayed sequentially as the current active waypoint is passed. With terrain turned off, the active waypoint is always visible regardless of distance.

If the active waypoint is beyond the lateral limits of the screen, the magenta waypoint direction pointer (i.e., magenta triangle) on the directional scale indicates shortest direction of turn to the waypoint.

If the waypoint is only a hoop hanging in space, it is a fix and not directly associated with a NAVAID on the ground (such as a VOR, NDB, user waypoint, or airport).

If the waypoint X disappears behind terrain on the PFI, there is terrain between the aircraft present position and the waypoint.

**2.3.27. Mini Map**

The mini map is mutually exclusive with the analog AGL and mini traffic. These features disappear in unusual attitude mode.



Distance in NM



Distance in KM

Figure 2-55: Mini Map

Table 2-14: Mini Map Behavior (When Not Decluttered)


VOR Pointer, Active Leg, Ownship Symbol	Color	Condition
VOR 1		Cyan
		When valid



Table 2-14: Mini Map Behavior (When Not Decluttered)

VOR Pointer, Active Leg, Ownship Symbol	Color	Condition
VOR 2	Green	
ADF 1	Gray	
ADF2	Gray	
Ownship Symbol	White	Always
Active Leg	Magenta	GPS/SBAS normal
	Amber (Yellow)	GPS/SBAS LOI/LON

### 2.3.28. Mini Traffic

Display of the mini map, and analog AGL, are mutually exclusive, with the mini traffic taking precedence during a traffic warning (TA or RA) if above 500'AGL. This feature automatically disappears in the Unusual Attitude mode. See Traffic Appendix for further details.



Distance in NM



Distance in KM

Figure 2-56: Mini Traffic

### 2.3.29. Runways





The EFIS displays airport runways in a 3D manner. Upon activation of a DP, VFR approach, IFR approach, or STAR procedure, runways for the airport associated with the procedure, as well as runways associated with the three nearest airports (computed by TAWS algorithms) are displayed.

Runways are displayed so runways behind terrain appear to be so. Runways are based on characteristics in the navigation database, including elevation, position, orientation, length, and width, and displayed as defined in Table 2-16.

Table 2-15: Runways

<p>With SVS TAWS</p>	
<p>SVS Basic</p>	
<p>TAWS disabled</p>	

Table 2-16: Runway Drawing Criteria

Feature	Color	Notes
Runway surface	Dark gray 	According to characteristics from navigation database, e.g., including position, orientation, length, and width
Runway markings	Medium gray 	
Landing portion of selected runway	Light gray 	Considering displaced threshold data
Runway markings for selected runway	Contrasting lighter gray 	

**2.3.30. Heliports**

Heliports appear as distinguishable 150' x 150' helipads with applicable markings. Heliports do not appear in basic mode or when in round dial PFD and disappear in unusual attitude mode.

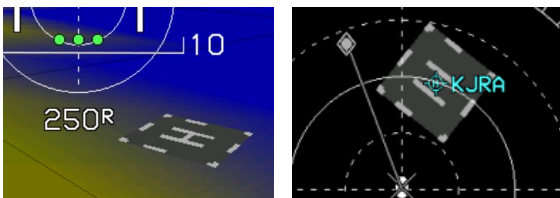


Figure 2-57: Heliports

### 2.3.31. Unusual Attitude Mode



Less than 30° pitch up and not in Unusual Attitude Mode

More than 30° pitch up and in Unusual Attitude Mode

Figure 2-58: Unusual Attitude Mode

Unusual attitude mode is enabled when pitch attitude exceeds +30° or -30° or bank angle exceeds 65° and remains engaged until pitch attitude and bank attitude return to within 10° of the horizon. Recovery chevrons appear prior to reaching  $\pm 20^\circ$  of pitch to aid in situational awareness and are a normal part of the pitch scale and are not necessarily tied to unusual attitude mode. The chevrons disappear when within  $\pm 15^\circ$  of the horizon. The following are disabled in the unusual attitude mode:

- 1) Terrain and obstruction rendering
- 2) CDI
- 3) VDI
- 4) FPM
- 5) Highway in the sky boxes
- 6) Atmospheric perspective
- 7) Analog and digital AGL indication
- 8) Active waypoint symbology and active waypoint box
- 9) Mini Map
- 10) Mini Traffic
- 11) If in basic mode, PFD reverts to SVS mode
- 12) If in zoom mode FOV, PFD reverts to normal FOV
- 13) Runways
- 14) Menus

### 2.3.32. Horizon Synchronization

Horizon synchronization introduces an offset to pitch angle and re-centering of the horizon during Category A departures with two yellow reference marks appearing at the actual horizon position.

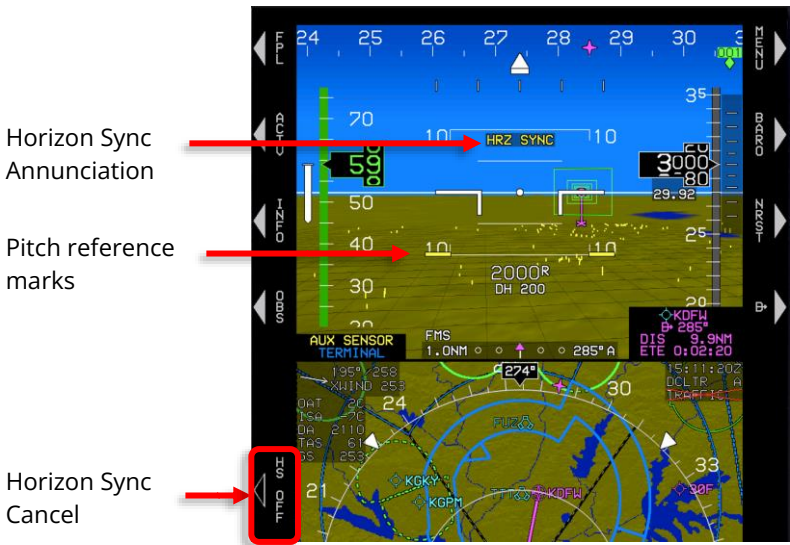


Figure 2-59: Horizon Synchronization

Table 2-17: Horizon Synchronization Parameters

Required for Activation	Automatically Deactivates
1) Category A is enabled (airspeed < 60KIAS);	1) Category A is disabled (airspeed > 60KIAS);
2) Pitch attitude information is valid;	2) Pitch attitude is invalid;
3) No pitch or roll miscompare alert exist;	3) Pitch or roll miscompare alert exists;
4) Pitch is in the range of $\pm 11^\circ$ ; and	4) Pitch magnitude is $\geq 30^\circ$ ; and
5) EFIS is not in unusual attitude mode.	5) EFIS is in unusual attitude mode.

### 2.3.33. Imperial Unit Feet and Metric Units

When EFIS limits are not set to SI units, altitude values (altitude display and pilot-selectable target [ASEL] and VNAV altitudes) may also be displayed additionally in metric units with a resolution of 1 meter.



Figure 2-60: Altitude Display (Feet)

When using meters for altitude display, altitude values (altitude display and pilot-selectable target [ASEL] and VNAV altitudes) may be displayed in imperial unit feet units with a resolution of 1 foot.

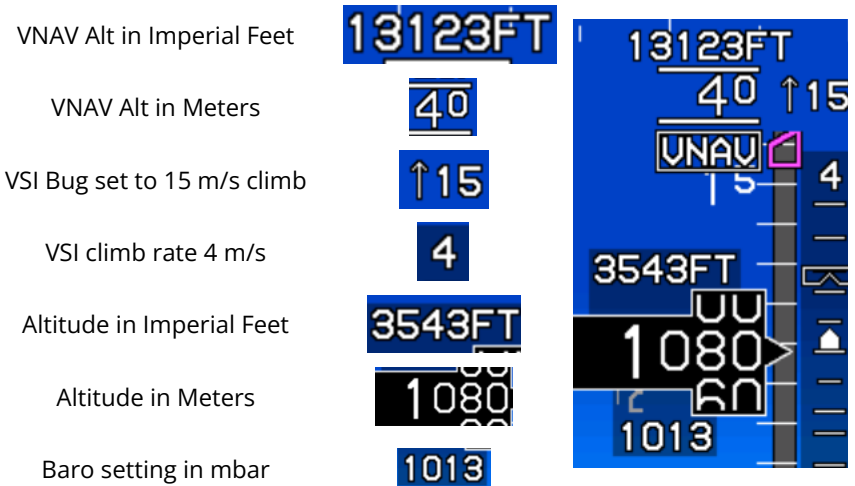


Figure 2-61: Altitude Display (Meters)

## 2.4. MFD Symbolology

The EFIS displays a variety of MFD pages:

- 1) Moving Map
- 2) HSI
- 3) Navigation Log
- 4) Strikes (see WX-500 Lightning Strikes appendix)
- 5) Traffic (see Traffic appendix)
- 6) Datalink (see Datalink appendix)
- 7) Video (see Video appendix)
- 8) Weather Radar (see WX-RDR appendix)

### 2.4.1. Ownship Symbolology



Rotorcraft



Pan Mode





Figure 2-62: Ownship Symbolology



**NOTE:**

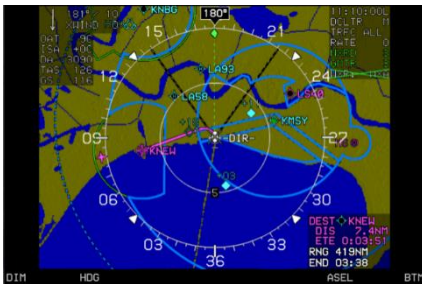When not panning with the AHRS in the DG mode, "DG" appears to the right of the ownship symbol.

### 2.4.2. Moving Map



Basic Moving Map



Moving Map with IAP


Figure 2-63: Basic Moving Map

Table 2-18: Moving Map Orientation

<p>North-Up Arc Mode</p>	<p>013° 20 XWIND 19 OAT 80 ISA +00 DA 3510 TAS 169 GS 125</p> <p>NORTH UP</p> <p>1253 KTER</p> <p>KEUR</p> <p>DIR</p> <p>KURA</p> <p>GNS</p> <p>14:34:39Z DCLTR A TRFC ALL RATE 0 DISEM 412G</p> <p>DEST KEUR DIS 40.9NM ETE 0:19:35 RNG 1181NM END 09:25</p> <p>DIM HDG ASEL BTM</p>
<p>North-Up Centered Mode</p>	<p>194° 19 XWIND 3 OAT 136 ISA +00 DA 1200 TAS 122 GS 113</p> <p>NORTH UP</p> <p>HAB7</p> <p>2.5</p> <p>11:58:12L DCLTR M TRFC ALL RATE 0 DISEM 412G</p> <p>DEST KACK DIS 25.1NM ETE 0:12:58 RNG 335NM END 02:49</p> <p>DIM HDG: 180° ASEL BTM</p>
<p>Heading Up Centered Mode</p>	<p>165° 10 XWIND 4 OAT 136 ISA +00 DA 1200 TAS 122 GS 113</p> <p>190°</p> <p>21</p> <p>12:08:01L DCLTR M TRFC ALL RATE 0 DISEM 412G</p> <p>DEST KAST DIS 4.6NM ETE 0:02:26 RNG 299NM END 02:59</p> <p>DIM HDG: 180° ASEL BTM</p>
<p>Heading Up Arc Mode</p>	<p>167° 10 XWIND 2 OAT 112 ISA +00 DA 8000 TAS 134 GS 126</p> <p>180°</p> <p>21</p> <p>10:55:28Z DCLTR H TRFC ALL RATE 0 DISEM 412G</p> <p>DEST KRX DIS 25NM ETE 0:03:40 RNG 462NM END 03:40</p> <p>DIM HDG ASEL BTM</p>



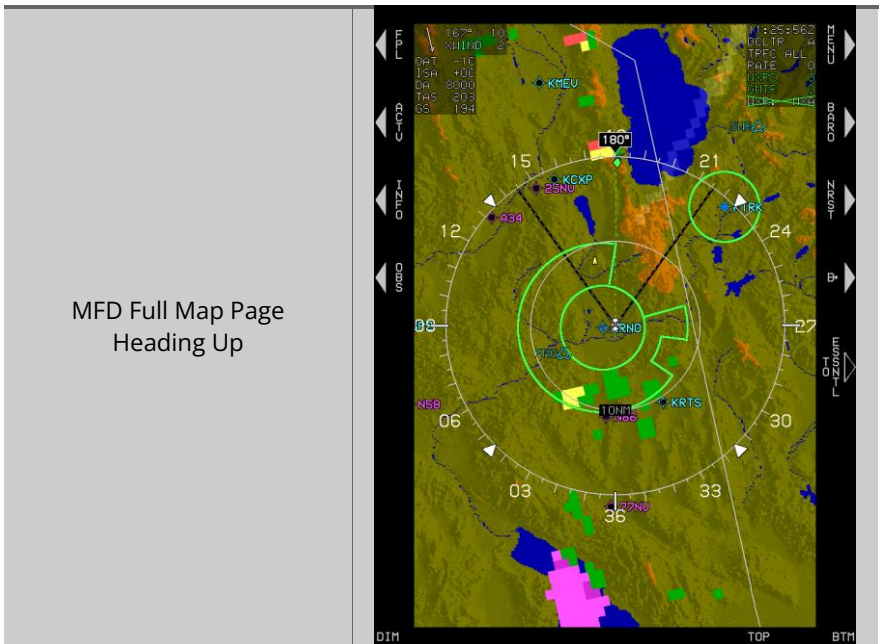Table 2-18: Moving Map Orientation



### 2.4.3. Compass Rose/Boundary Circle Symbol

When selected, a digital heading readout and pointer aligned with the longitudinal axis of the ownship symbol appears on the compass rose boundary circle.



Normal Mode



True North Mode

Figure 2-64: Compass Rose

If referenced to magnetic north, the heading readout uses the degree (°) symbol. Otherwise, a stylized true north (T) symbol is used. A green diamond-shaped track pointer aligned with the aircraft's track across the earth appears on the compass rose but is not displayed when ground speed is less than 30 knots.

In heading up mode, the magnetic digital heading readout and pointer are aligned with the longitudinal axis of the ownship symbol.

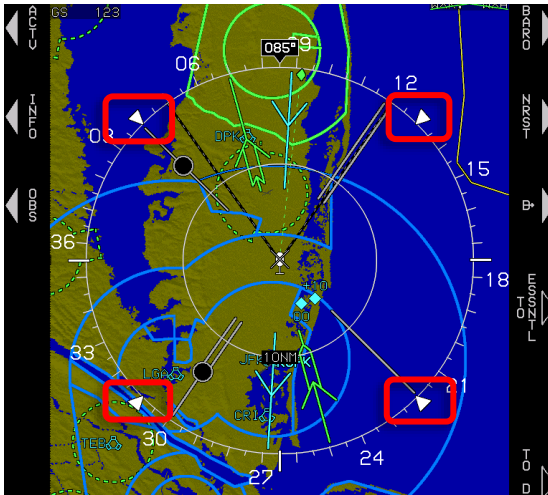


Figure 2-65: Boundary Circle Symbols (MFD Full Map)



**NOTE:**

See Section 6 IFR Procedures for description of the following heading modes with the AHRS and EFIS:

- 1) ADAHRS Slaved—EFIS Magnetic North
- 2) ADAHRS Slaved—EFIS True North
- 3) ADAHRS Free/"DG"—EFIS Magnetic North
- 4) ADAHRS Free/"DG"—EFIS True North.

**2.4.4. Field of View (FOV) Indication**

The Map page background indicates the FOV with a set of segmented gray lines leading out from the ownship symbol in either 35° or 70° angles depending on the zoom mode setting in the PFI area.



Normal FOV (Zoom Off)

Narrow FOV (Zoom On)

Figure 2-66: Field of View

### 2.4.5. Map Range



Figure 2-85: Map Range

The white range ring is centered on the aircraft's position to estimate distances quickly. Distance (in NM or KM) from the aircraft to the range ring is a white number overlaying the 6 o'clock position of the range ring. The range ring is half the distance to the compass rose and completely visible in arced display format.





Table 2-19: Range Scale

Distance in NM		Distance in KM	
Range Ring	Compass Rose	Range Ring	Compass Rose
0.5NM	1NM	1KM	2KM
1.0NM	2NM	2.5KM	5KM
2.5NM	5NM	5KM	10KM
5.0NM	10NM	10KM	20KM
10.0NM	20NM	25KM	50KM
25.0NM	50NM	50KM	100KM
50.0NM	100NM	100KM	200KM
100.0NM	200NM	250KM	500KM
250.0NM	500NM	500KM	1,000KM
500.0NM	1,000NM	1,000KM	2,00KM

### 2.4.6. Clock Options





Data in Table 2-20 are displayed in the upper right corner.

Table 2-20: Clock Options

Feature	Options	Notes
	Zulu Time hh:mm:ssZ	Synchronized with the GPS/SBAS constellation
	Local Time hh:mm:ssL	
Declutter Mode	DCLTR A DCLTR M	= Automatic declutter mode = Manual declutter mode
Terrain Status	Enabled or Disabled	Indicated by the absence or presence of terrain  Manually turned off  Failed
Traffic Status		See Traffic Appendix
Strikes Status		See Strikes Appendix
Datalink Weather Status		See Datalink Appendix
WX-RDR Status		See WX-RDR Appendix

## 2.4.7. Air Data and Ground Speed

Table 2-21: Air Data and Ground Speed

	Normal Mode		True North Mode	
				
Wind:	Knots	m/s	Knots	m/s
Alt:	Feet	Meters	Feet	Meters
Speed:	Knots	Km/h	Knots	Km/h

The following are displayed in the upper left corner:

- 1) Wind: Information consists of the following readouts:
  - a) The direction in degrees;
  - b) Speed in Knots or m/s;
  - c) Crosswind in Knots or m/s; and
  - d) Graphical wind vector arrow corresponding to MFD page orientation.



**NOTE:**

Wind information is not shown when the EFIS is in ground mode or the AHRS is in DG mode.

If referenced to magnetic north, direction readout uses the degree (°) symbol. Otherwise, a stylized true north (T) symbol is used.

- 2) Outside Air Temperature (OAT): Digitally in °C or °F (as configured in EFIS limits).
- 3) International Standard Atmosphere (ISA): Difference between ISA temperature and current outside air temperature is displayed digitally in °C or °F (negative value = less than standard OAT). Decluttered if not enabled in EFIS limits.
- 4) Density Altitude (DA): Digitally in feet or meters. Decluttered if the “Density altitude” is disabled in EFIS limits.
- 5) True Airspeed (TAS): Digitally in knots. Decluttered if “TAS” is disabled in EFIS limits.
- 6) Ground Speed (GS): Digitally in knots or Km/h.

**2.4.8. Waypoint Distance ETE/ETA Functions**

Active navigation route and fuel totalizer information is presented in the lower right corner.



GPS in normal state and current active waypoint

GPS in LOI/LON condition

GPS in normal state and not the current active waypoint

Figure 2-67: Fuel Totalizer/ Waypoint Distance Functions NM/KM

Table 2-22: Waypoint Distance ETE/ETA Functions

Function	Conditions	Type/Symbols
DEST Waypoint	<p>If there is an active flight plan, waypoint type, identifier, along-track distance, and ETE/ETA for the last waypoint (“DEST” waypoint) are shown.</p> <p>If the active waypoint is not the last waypoint, time to destination waypoint is based on the flight plan route. Otherwise, time is based on a direct geodetic path.</p> <p>Waypoint information is white but turns amber (yellow) with GPS LOI/LON caution.</p>	ETA or ETE  Degree (°) or True North (T) symbol
Range	<p>Based on instantaneous fuel flow, fuel remaining, and ground speed are shown immediately below “DEST” waypoint information for easy comparison.</p>	
Endurance	<p>Based on instantaneous fuel flow and fuel remaining as shown.</p>	

### 2.4.9. Navigation Data

Navigation symbology is displayed in correct relationship to the ownship symbol with navigation data symbols in Table 2-23.

Table 2-23: Navigation Symbology

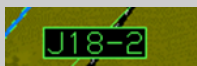
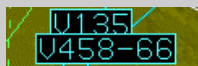
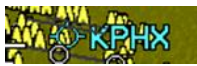

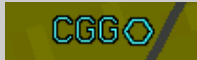








	High Altitude Airways H AIRWAY ✓		Low Altitude Airways L AIRWAY ✓
	IFR Airport LRG APT ✓ IFR APT ✓		VFR Airport VFR APT ✓
	VOR VORS ✓		NDB NDBS ✓

Table 2-23: Navigation Symbology

	VORTAC VORS ✓		DME only or TACAN VORS ✓
	User Waypoint USER WPTS ✓		User Waypoint in Pan Mode USER WPTS ✓
	Fix ENR FIXES ✓ TRM FIXES ✓		VFR Fix VFR FIXES ✓
	HSI overlay CDI scale HSI ✓		

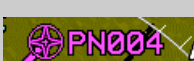The EFIS has manual and automatic decluttering of navigation data. The six levels of automatic declutter are based upon the number of navigation data symbols drawn in the current map format and range as follows:

- 1) Airports: Manually or automatically decluttered. In automatic declutter mode, large airports (IFR procedure and longest runway and automatically adjusted threshold needed to achieve desired symbol count) are always shown; IFR airports that are not large airports are shown in levels 1, 2, 3, and 4; and VFR airports are shown in levels 1, 2, and 3.
- 2) VORs: Manually or automatically decluttered. In automatic declutter mode, VORs are shown in levels 1, 2, 3, 4, and 5.
- 3) NDBs: Manually or automatically decluttered. In automatic declutter mode, NDBs are shown in levels 1 and 2. Both en route and terminal NDBs are shown.
- 4) Fixes (including user waypoints): Manually or automatically decluttered. In automatic declutter mode, en route IFR fixes are shown in level 1. Terminal IFR fixes and VFR fixes are manually selected and not shown in automatic declutter mode. En route IFR fixes, terminal IFR fixes, VFR fixes and user waypoints can be manually decluttered separately from each other.
- 5) High Altitude Airways: Manually selected/Automatically decluttered.
- 6) Low Altitude Airway: Manually selected/Automatically decluttered.
- 7) Airspace: Manually selected.



**NOTE:**

Airspace is manually selected and does not automatically declutter. Airspace selection status is maintained in the menu during power down and appears on the Map during the next initialization.

Table 2-24: Airspace Depiction








Type of ARINC 424 Airspace	Vertical Limits
 Dashed lines <b>ARSPC CTRL</b> ✓	More than ±500'
 Solid lines <b>ARSPC CTRL</b> ✓	Within ±500'
 Thick solid lines <b>ARSPC CTRL</b> ✓	Within airspace, vertical limits
	Airspace Color
 Class C, Control area, TRSAs, Class D <b>ARSPC CTRL</b> ✓	Green
 Class B, TCAs (where applicable) <b>ARSPC CTRL</b> ✓	Blue
 Caution, Danger, MOAs, Training, Warning, or Unknown areas <b>ARSPC SUA Y</b> ✓	Amber (Yellow)
 Prohibited, Restricted, or TFR areas (when equipped with Datalink) <b>ARSPC SUA R</b> ✓	Red



Figure 2-68: Navigation Data and Airspace Depiction on Map

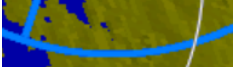


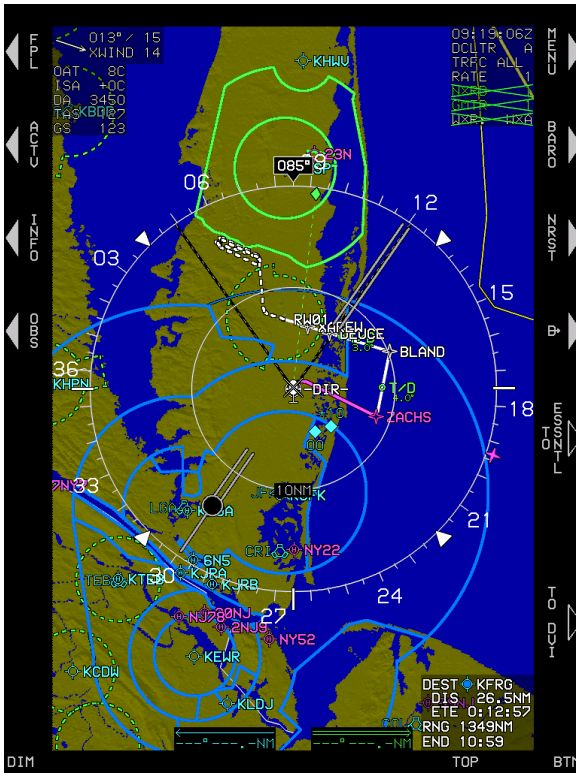


Figure 2-69: Navigation Data and Airspace Depiction on MFD Full Map Page

### 2.4.10. Analog Navigation Symbology

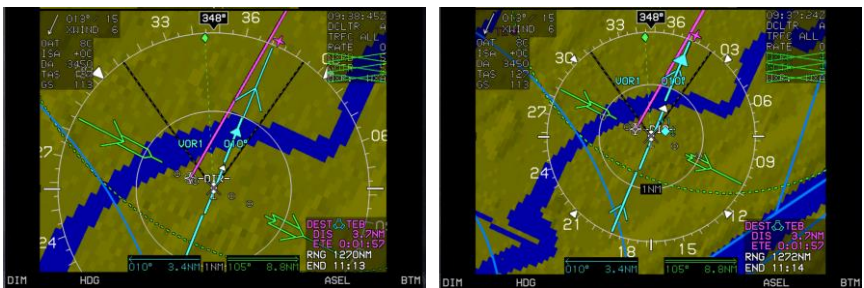

MAP in Arc Mode

MAP in Centered Mode

Figure 2-70: Analog Navigation Symbology, HSI Overlay



**NOTE:**

The full map page only has a centered mode.

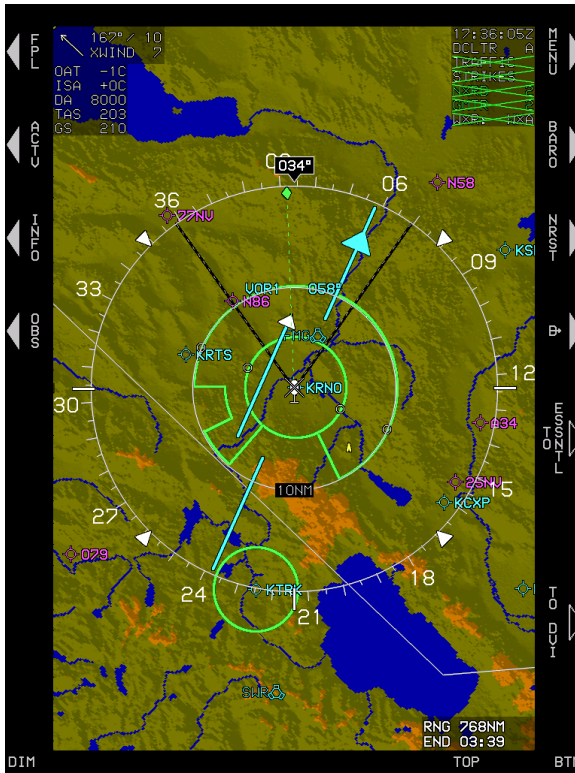


Figure 2-71: Analog Navigation Symbology, HSI Overlay (MFD Full Map)

When selected and valid, (VOR1 [cyan] and VOR2 [green]) navigation symbology is displayed. When VOR1 and VOR2 RMI pointers are selected for display, the bearing and distance for the selected VOR pointers appear at the bottom of the MFD page. Distance readouts match the color of the respective pointer.

If the DME channel is in hold mode, "H" is shown in the yellow distance readout. If a bearing or distance are not valid, the respective field is filled with dashes.

ADF1 is a gray single-line pointer and ADF2 is a gray double-line pointer. If the radio signal is invalid, the associated navigation pointer is not shown.

#### 2.4.11. Borders

International and U.S. state borders are drawn if selected at all map scales. They are white if the background includes terrain.



Borders Drawn



Without Borders Drawn

Figure 2-72: Borders

### 2.4.12. Terrain/Obstructions

Terrain and obstruction rendering are pilot-selectable to declutter the display by deselecting terrain. Furthermore, terrain and obstruction rendering are disabled when:

- 1) The GPS/SBAS sensor is failed; OR
- 2) When the ADC is failed; OR
- 3) When the horizontal figure of merit exceeds the greater of 0.3NM or the horizontal alarm limit for the mode of flight.

Terrain and obstructions are displayed in correct relationship to the ownship symbol using color to show relationship to aircraft altitude.



**NOTE:**

Independent declutter of obstructions is not possible.

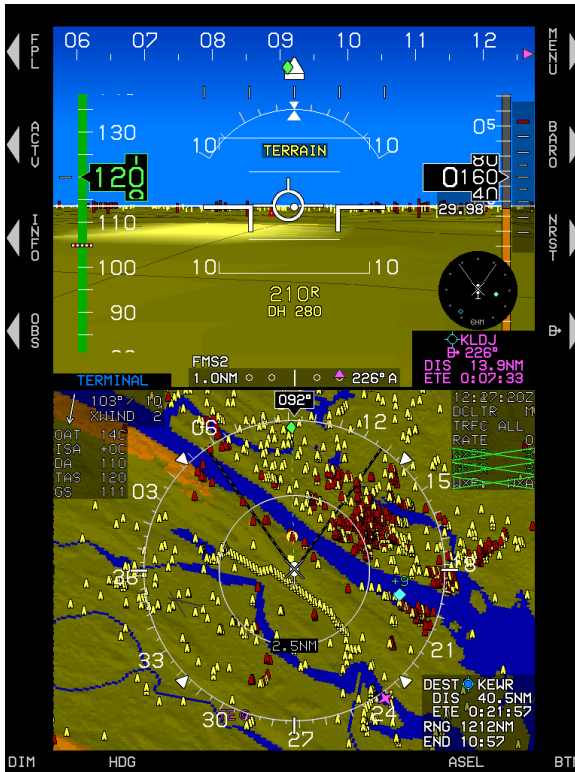


Figure 2-73: Terrain/Obstructions

Table 2-25: Terrain Color



Based on Aircraft Altitude	Color	Notes
Terrain at or below 100 feet below aircraft altitude	Olive shades 	Terrain slope determines shade
Terrain above 100 feet less than aircraft altitude	Brown shades 	
FLTA alerts	Amber and Red	See Section 7 TAWS

Table 2-25: Terrain Color


Based on Aircraft Altitude	Color	Notes
Water at all elevations	Deep Blue 	Takes precedence over other colors

Table 2-26: Obstructions

Lateral Distance Away	17 NM or less	PFI in narrow FOV
	12 NM or less	PFI in wide FOV
	Beyond the greater of 8.5 NM or current TAWS FLTA range in any cardinal direction	Not depicted
Vertical Criteria	8.5 NM or less	As described below
	More than 2,000' below aircraft	Not depicted
	Within 2,000' but more than 500' below aircraft	Depicted in amber (yellow)
	Above aircraft altitude	Depicted in deep red


**NOTE:**

See Section 7 Terrain Awareness Warning System for obstructions causing TAWS alarms and depiction of different symbology.

### 2.4.13. Pan Mode

Pan mode is used for changing the location of the center of the page away from current location and viewing map details along the route of flight and at the intended or alternate destination while in flight or on the ground. When pan mode is active, use labeled buttons to pan location north, south, east, and west in a North-up, centered orientation. Upon entering the pan mode, the heading pointer, track pointer, lubber line, waypoint pointer, analog navigation symbology, and field of view lines are removed.


Figure 2-74 shows the line with bearing and distance from the map center to the aircraft's current position in white when the aircraft is more than 0.5 NM away from the panning cursor. When panning, the nearest displayed airport, VOR, NDB, or fix within the inner range ring are highlighted with a flashing white circle. Buttons are labeled for viewing or hiding waypoint information. When exiting pan mode, all settings are restored as before pan mode was enabled.



Figure 2-74: Pan Mode

#### 2.4.14. Direct Point

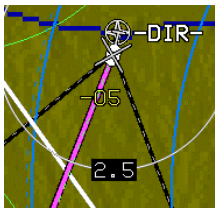Unnamed waypoints appear depending upon the procedure loaded, or when a direct-to command is entered. See Section 6 IFR Procedures for more information.



- 1) -ALT- altitude terminations
- 2) -DIR- waypoints that begin a Direct-To leg
- 3) -DME- distance or DME terminations
- 4) -INT- intercept terminations
- 5) -RAD- radial terminations

Figure 2-75: Direct Point

#### 2.4.15. Altitude Capture Predictor/Top-of-Descent



Top-of-Descent



Top-of-Climb/Bottom-of-Descent

Figure 2-76: Top-of-Descent or Top-of-Climb

When a selected altitude or VNAV altitude is specified on the PFD in the PFI area, T/D marks the correct point on the flight plan path where descent must commence and contains the location on the flight plan path with an indication of the glide path angle used to calculate position. After passing the top of descent along the lubber line, a green arc is shown ahead of the aircraft, marking the top-of-climb or bottom-of-descent based upon current VSI rate.

### 2.4.16. Projected Path

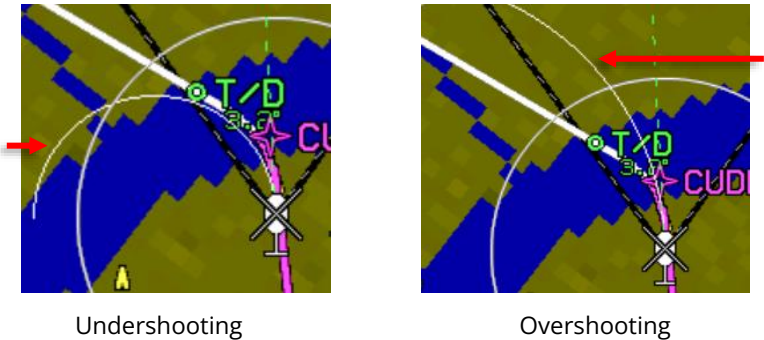


Figure 2-77: Projected Path

When the aircraft is in a bank angle with ground speed greater than 60 knots, a projected path emanates from the ownship symbol. This curving path is based on aircraft bank angle and ground speed as projected one minute into the future up to a maximum of 180° of turn. The projected path or “noodle” assists in course interception and making small adjustments to bank angle for proper roll out.

### 2.4.17. Parallel Track/Active Flight Plan Path/Manual Course

#### 2.4.17.1. Parallel Track



Figure 2-78: Parallel Track

When there is an active flight plan and GPS/SBAS OBS setting is automatic, the flight plan path is shown in correct relationship to the ownship symbol. See Section 3 Menu Functions and Step-By-Step Procedures for details on creating a parallel track.

### 2.4.17.2. Manual Course



Figure 2-79: Manual Course

When there is an active waypoint and the GPS/SBAS OBS setting is manual, **SUSPEND** appears (waypoint auto-sequencing is suspended when in manual OBS mode). The manual course through the waypoint is shown as a pointer centered on the waypoint. The pointer matches the lateral navigation guidance given on the PFI (GPS/SBAS CDI in manual OBS mode, skyway boxes, and mini map). See Section 6 IFR Procedures for further details.

### 2.4.17.3. Active Flight Plan Path

The active flight plan path's active leg/manual course and active waypoint are magenta but turn amber (yellow) in a GPS LOI/LON caution.

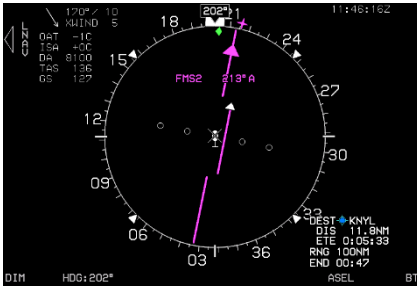


Figure 2-80: Loss of Navigation



## 2.5. HSI Page

### 2.5.1. Conventional HSI/PTR Format



Normal Magenta Pointer



GPS Loss of Integrity or Loss of Navigation Amber (Yellow) Pointer and Waypoint Information

Figure 2-81: Conventional HSI/PTR Format

When selected, the MFD displays conventional HSI symbology, including a selected course pointer, a lateral deviation indicator, and a “TO-FROM” indicator. Navigation source indication and OBS setting are displayed in the top center of the HSI in the same color as the course pointer. The HSI pointer color is:

- 1) Magenta (if FMS is the selected navigation source)
- 2) Cyan (if VLOC1 is the selected navigation source)
- 3) Green (if VLOC2 is the selected navigation source)
- 4) Amber (Yellow) when the HSI is slaved to GPS/SBAS and there is a GPS LON condition.

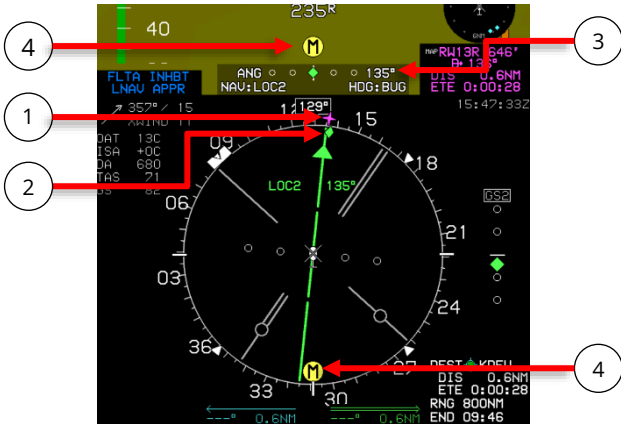
The ownship symbol is centered and pointing straight up on the HSI. The HSI has a compass rose aligned with either magnetic north or true north depending upon the status of the true north configuration set in EFIS limits. When the HSI NAV source (FMS, VOR1, or VOR2) fails, a red “X” is displayed in place of the HSI deviations. When the AHRS is in DG mode, “DG” appears to the right of the ownship symbol.

### 2.5.2. Analog Navigation Symbology

When selected, VOR1, VOR2, ADF1, and ADF2 navigation are displayed as defined in § 2.4.10.

Valid marker beacon symbols are displayed on the PFI and HSI page with appropriate coloring markings. Only during a built-in-test, more than one

marker beacon may be active. Marker beacons are disabled when NAV source is other than VLOC1 and or VLOC2.



- 1) Magenta bearing pointer to active waypoint
- 2) Green track pointer
- 3) Final approach course
- 4) Valid marker beacon

Figure 2-82: HSI Page

Table 2-27: HSI

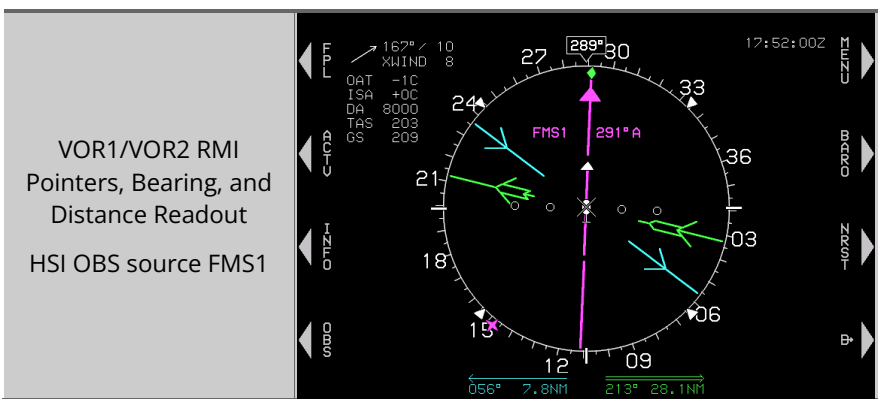


Table 2-27: HSI

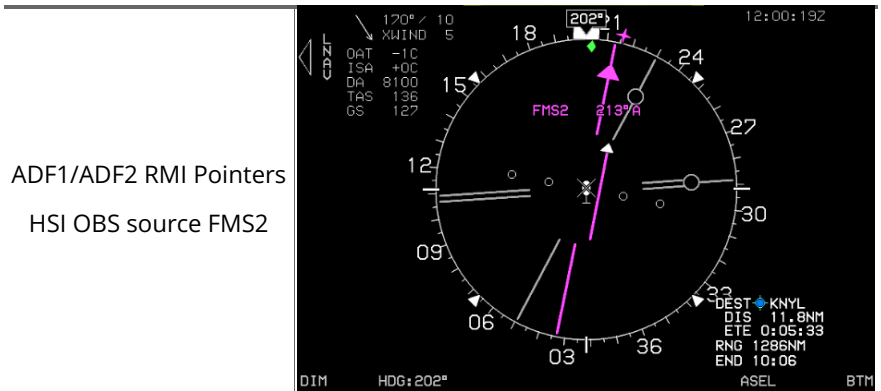


Figure 2-83: HSI Page Bearing Distance Readout

### 2.5.3. HSI CDI and VDI Scale

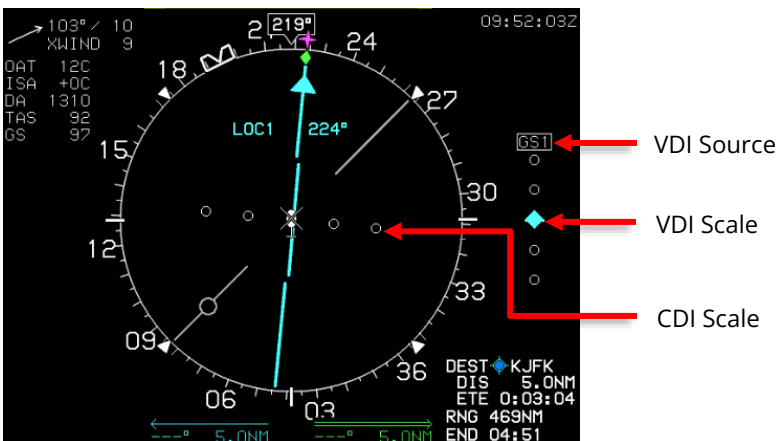


Figure 2-84: HSI CDI and VDI

The VDI appears when the VDI source is valid to display vertical deviation information for the currently selected navigation source.

- 1) LPV or, if a second GPS/SBAS receiver is installed, LPV1 or LPV2. Annunciation is made when descending on the final approach segment in LPV mode.
- 2) VNV-G or, if a second GPS/SBAS receiver is installed, VNV1-G or VNV2-G. Annunciation is made when descending on the final approach segment in LP, LNAV/VNAV, LNAV, or RNP modes when using GPS VNAV.
- 3) VNV1-B: Default FMS barometric VNAV mode.
- 4) VNV2-B: Default FMS barometric VNAV mode.
- 5) GS1: Glide slope #1.
- 6) GS2: Glide slope #2.

#### 2.5.4. Clock

Displayed as specified in § 2.4.6.

#### 2.5.5. Air Data and Ground Speed

Displayed as specified in § 2.4.7.

#### 2.5.6. Fuel Totalizer/Waypoint Distance ETE/ETA Functions

Displayed as specified in § 2.4.8.

### 2.6. Navigation Log (NAV LOG)

#### 2.6.1. NAV LOG Display Format

The Nav Log may be set to Waypoint to Waypoint (Wpt to Wpt) or Present Position to Waypoint (PPOS to WPT) display format as defined in Table 2-28. PPOS status is annunciated in the upper right corner of the Nav Log.



#### NOTE:

Since the NAV LOG uses MAGVAR at present position for course calculations, it is a current picture-in-time based entirely on present position. The flight planner uses MAGVAR from the internal database for each waypoint along the route and never references present position. Therefore, the flight planner is the correct flight plan with corrections along the route.


Table 2-28: NAV LOG Format

Wpt to Wpt	PPOS to Wpt
Waypoint Identifier	Waypoint Identifier
VNAV and VNAV Offset	VNAV and VNAV Offset

Table 2-28: NAV LOG Format


Wpt to Wpt	PPOS to Wpt
Path	Path
Distance	Distance to Go (DTG)
ETE	Time to Go (TTG)
ETA	ETA
Fuel Remaining	Fuel Remaining

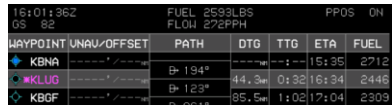In PPOS to WPT display format, PPOS status is annunciated as PPOS ON.



WAYPOINT	UNAU/OFFSET	PATH	DTG	TTG	ETA	FUEL
KBNA		B-194°			15:35	2712
*KLUG		B-123°	44.3m	01:30	16:34	2446
KBGF		B-051°	85.5m	1:02	17:04	2309

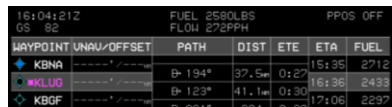In Wpt to Wpt display format, PPOS status is annunciated as PPOS OFF.



WAYPOINT	UNAU/OFFSET	PATH	DIST	ETE	ETA	FUEL
KBNA		B-194°	37.5m	01:27	16:35	2712
*KLUG		B-123°	41.1m	01:30	16:36	2433
KBGF		B-051°	85.5m	1:02	17:06	2297

Figure 2-85: PPOS Status on Navigation Log

### 2.6.2. Clock and Ground Speed

The following are displayed in the upper left corner:

- 1) Zulu Time or Local Time: As specified in § 2.4.6.
- 2) Ground speed: Displayed digitally in knots or Km/h

### 2.6.3. Fuel Remaining and Fuel Flow Data

The following are displayed in the upper center:


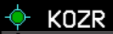




- 1) Fuel Remaining: If fuel level or fuel flow is available, current fuel remaining is displayed digitally in fuel units.
- 2) Fuel Flow: If fuel flow is available, the current total fuel flow is displayed digitally in fuel units.

### 2.6.4. Waypoint Identifier Column

The identifier for each waypoint of the active flight plan is displayed in the left column of the NAV Log. The active waypoint, indicated with an asterisk, is magenta. The current active waypoint color turns amber (yellow) during a GPS LON caution. Brackets indicate suppressed waypoints. Navigation data symbols are shown with the waypoint identifier to distinguish the waypoint type easily.

For airports with available datalink (if equipped) METAR, a graphical METAR is displayed as a colored fill within the circular part of the airport symbol, the convention as defined in Table 2-29.

Table 2-29: Datalink METAR Color Convention

Color	Meaning	
Sky Blue	Visual Flight Rules (VFR)	 *KLGA
Green	Marginal Visual Flight Rules	 KOZR
Yellow	Instrument Flight Rules (IFR)	 *KPNS
Red	Low Instrument Flight Rules (LIFR)	 *KULD
Magenta	Less than Category 1 Approach minimums	 *7NY7
Black	No Data	 KEDN

When a waypoint has special attributes, the following legends are drawn on top of the navigation data symbol:

- 1) SAR = Waypoint is part of a SAR pattern.
- 2) HOLD = Waypoint is part of an en route Holding pattern.
- 3) Airway Designation = Waypoint is part of the designated airway.
- 4) FAF = Waypoint is a final approach fix.
- 5) MAP = Waypoint is a missed approach point.
- 6) MA = Waypoint is part of the missed approach segment of an instrument approach procedure.
- 7) APP = Waypoint is part of an instrument approach procedure, but is not a final approach fix, missed approach point, nor part of the missed approach segment.
- 8) VFR = Waypoint is part of a VFR approach.
- 9) STAR = Waypoint is part of a standard terminal arrival procedure.
- 10) DP = Waypoint is part of a departure procedure.
- 11) PTK = Parallel offset. If a STAR or DP waypoint subject to a parallel offset, both STAR/DP and PTK are shown.

### 2.6.5. VNAV and VNAV Offset Column

The VNAV altitude and associated VNAV Offset are displayed immediately to the right of the Waypoint Identifier column. The VNAV altitude readout is in feet or meters, and the associated VNAV offset readouts are in NM or KM.

If an approach with a final approach segment data block, the VNAV offset readout associated with the missed approach point is "GPI" to designate the distance to the glide path intercept point. VNAV altitudes and offsets from the navigation database or manually entered are shown in white. VNAV altitudes

and offsets are computed automatically (shown in gray (auto-computed climb altitudes are dashed)).



---

**NOTE:**

No VNAV data (dashes) is associated with a suppressed waypoint as a suppressed waypoint is not part of the active flight plan.

---

### 2.6.6. Path Column

LNAV path between waypoints is displayed immediately to the right of the VNAV and VNAV offset column. The following are displayed:

- 1) Suppressed waypoints (not part of the active flight plan) are shown as dashes.
- 2) Discontinuities (i.e., a leg where FMS cannot compute a valid path) are shown with the legend "-DISCONT-."
- 3) Skipped waypoints are shown with the legend "-SKIPPED-."
- 4) Altitude terminations are shown with the leg course followed by the altitude at which the leg terminates.
- 5) Manual termination legs are shown with leg course followed by "-MAN-."
- 6) Procedure turn legs are shown with a pictorial representation of a procedure turn (either left or right turns) and the entry and exit course for the procedure turn.
- 7) Holding pattern legs are shown with a pictorial representation of a holding pattern (either left or right turns) and the inbound course for the holding pattern.
- 8) Arc legs are shown with a pictorial representation of an arc (either left or right turns) and the arc's entry and exit radials.
- 9) Radius to a fix legs are shown with a pictorial representation of an arc (either left or right turns) followed by "RF."
- 10) SAR pattern legs are shown with a pictorial representation of the SAR pattern (Expanding Square, Rising Ladder, Orbit, Race Track, or Sector, each with either left or right turns) followed by "SAR." (See SAR appendix.)
- 11) Other leg types (Direct, DME termination, radial termination, intercept, or course to a fix) are shown using the Direct-To Symbol, followed by the leg course.

### 2.6.7. Distance Column

Distance between waypoints is displayed immediately to the right of the path column. The distance readouts in NM or KM are calculated considering the associated path and parallel offsets.

### 2.6.8. Estimated Time En Route Column

ETE between waypoints is displayed immediately to the right of the distance column and calculated considering the distance between waypoints and current ground speed.

### 2.6.9. Estimated Time of Arrival Column

ETA at the active waypoint and all subsequent waypoints are displayed immediately to the right of the ETE column. The time of waypoint sequencing is stored and displayed as the ETA at waypoints before the active waypoint.

The ETA at the active waypoint is calculated considering the associated time remaining on the active leg and the current time. The ETA at subsequent waypoints is calculated considering the cumulative ETEs and current time.

### 2.6.10. Fuel Remaining

The fuel remaining at each waypoint is displayed immediately to the right of the Estimated Time of Arrival column. The fuel remaining at waypoint sequencing is stored and displayed as the fuel remaining at the waypoint before the active waypoint.

The fuel remaining at the active waypoint is calculated considering the associated time remaining on the active leg, current fuel flow, and current fuel quantity. The fuel remaining at subsequent waypoints is calculated considering the cumulative ETEs, current fuel flow, and current fuel quantity.

### 2.6.11. Distance To Go Column (DTG)

The distance between waypoint and present position is displayed immediately to the right of the Path column. The distance readout is in NM or KM. The distance between waypoint and present position is calculated considering the associated path as well as parallel offsets.

### 2.6.12. Time To Go Column (TTG)

The TTG between the waypoint and present position is displayed immediately to the right of the DTG column. The TTG between the waypoint and present position is calculated considering the associated DTG and current ground speed.





**NOTE:**

Since a suppressed waypoint is not part of the active flight plan, dashes appear in the absence of the following VNAV data associated with a suppressed waypoint.

Where column vertical position is aligned with preceding column, elements indicate the information applies to the associated waypoint.

Where column vertical position is offset from waypoint column elements, indicates that information applies to the leg between waypoints.

The following data columns are shown as dashes if suppressed, skipped, or manual terminations:

- |             |                       |
|-------------|-----------------------|
| 1) Path     | 4) ETA Fuel remaining |
| 2) Distance | 5) TTG                |
| 3) ETE      | 6) DTG                |

**2.7. Hover Page**

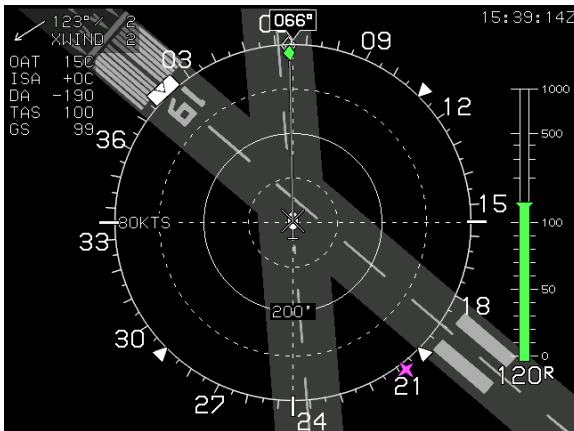


Figure 2-86: Hover Page Orientation

The hover page has the following elements.

- 1) Ownship symbology pointing straight up.
- 2) Always displayed in a heading up orientation.
- 3) Compass rose aligned with either magnetic north or true north.

4) Hover vector elements as described in § 2.3.21.

### 2.7.1. Hover Vector

The hover vector indicates direction, speed, and acceleration of drift, using the compass rose and range ring as speed scales. In addition, two intermediate speed scales (the first between the ownship symbol and the range ring, the second between the range ring and the compass rose) are drawn using dashed lines.

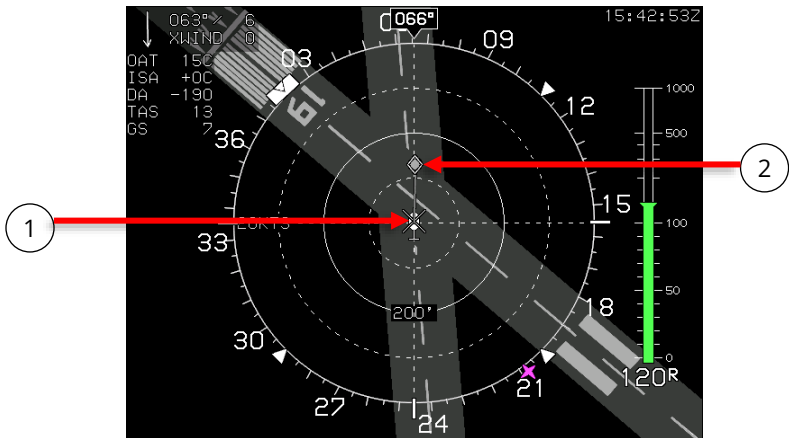


Figure 2-87: Hover Vector Symbology

- 1) The ownship symbol indicates 0 knots, or 0 m/s ground speed.
- 2) A gray dot connected to the ownship symbol by a line indicates flight direction and ground speed. A diamond-shaped acceleration cue is centered on the gray dot to indicate direction and magnitude of horizontal acceleration. Deviation of the dot in a straight up direction (12 o'clock position) indicates forward flight while straight down (6 o'clock position) indicates rearward flight. Deviation of the dot laterally indicates lateral drift. The movement of the dot is constrained to less than 5 knots per second, or 2.5 m/s, to prevent jumpiness.

The speed range for the hover vector indication automatically changes based upon current ground speed. Changes in speed range utilize a deadband to prevent flicker at speed range boundaries.

Table 2-30: Hover Speed Ranges



Knots	Km/h
	

Table 2-30: Hover Speed Ranges

Knots		Km/h	
40KTS		20M/S	
80KTS		40M/S	

### 2.7.2. Hover Page Range

The white range ring is centered on the aircraft's position to estimate distances quickly. Distance (in NM or KM) from the aircraft to the range ring is a white number overlaying the 6 o'clock position of the range ring. The range ring is half the distance to the compass rose.

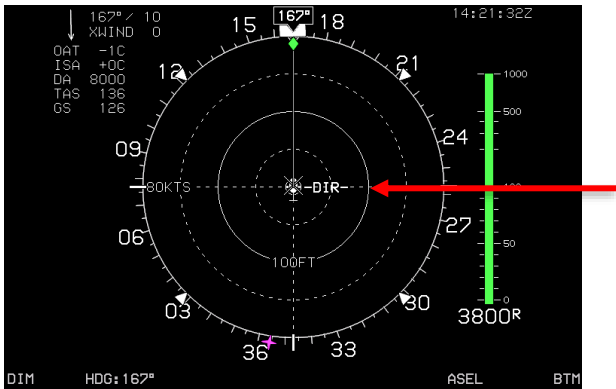


Figure 2-88: Hover Page Range

Table 2-31: Hover Speed Ranges

Distance	Nautical Miles	Kilometers
Ownship to Range Ring	100', 200', 400', 800', 0.25NM, 0.5NM, 1NM, and 2.5NM	25m, 50m, 100m, 250M, 500M, 1KM, 2.5KM, and 5KM
Ownship to Compass Rose	200', 400', 800', 1,600' 0.5NM, 1NM, 2NM, and 5NM	50m, 100m, 200m, 500m, 1KM, 2KM, 5KM, and 10KM

### 2.7.3. Compass Rose Symbols

As specified in § 2.4.3.

### 2.7.4. Active Flight Plan Path/Manual Course

The active flight path, waypoints, and manual course appear as specified in § 2.4.17. When there is a parallel offset, the active flight plan path depicts the parallel offset path, and the original flight plan path is shown with haloed gray dashed lines (Figure 2-89).


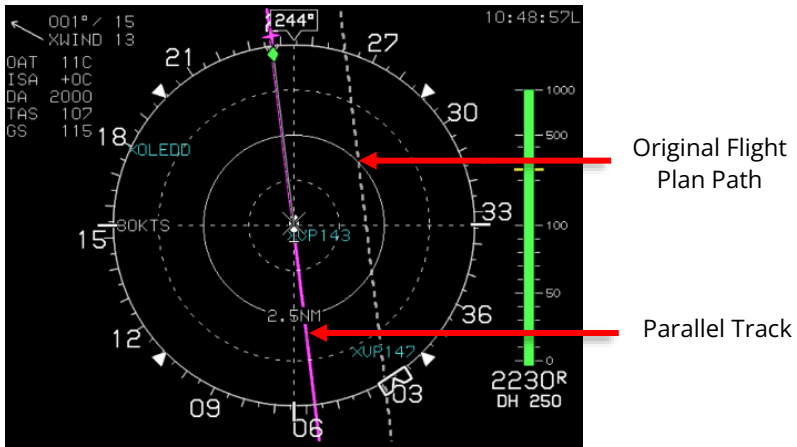


Figure 2-89: Hover Vector Active Flight Plan Path/Parallel Course

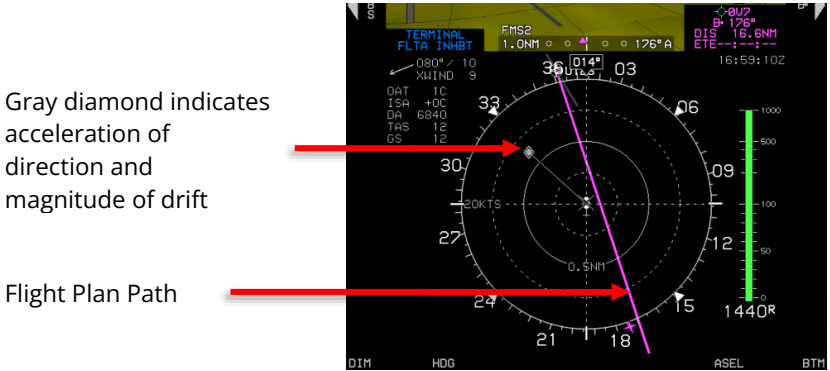

Automatic OBS mode (Automatic Waypoint Sequencing)



Table 2-32: AGL Indication Parameters

Indication	Parameters
Resolution	At or above 100 meters AGL/5 meters resolution
Meters for altitude	Below 100 meters AGL/1 meter resolution

Table 2-33: AGL Indication Parameters

Altitude	Minor Tick Marks	Range	Scale	Color/Characteristic
Feet	10', 20', 30', 40', 60', 70', 80', 90', 200', 300', and 400'	Max range of 1,000'	Linear 0 to 100'	Green-filled column thermometer with widened area on top
		Greater than 1,000'	Logarithmic 100' to 1,000'	Green-filled column thermometer without widened area on top
Meters	5, 10, 15, 20, 30, 35, 40, 45, 100, 150, and 200 Meters	Max range of 500 Meters	Linear 0 to 50 Meters	Green-filled column thermometer with widened area on top
		Greater than 500 Meters	Logarithmic 50 to 500 Meters	Green-filled column thermometer without widened area on top

Table 2-34: Hover Vector AGL Indication


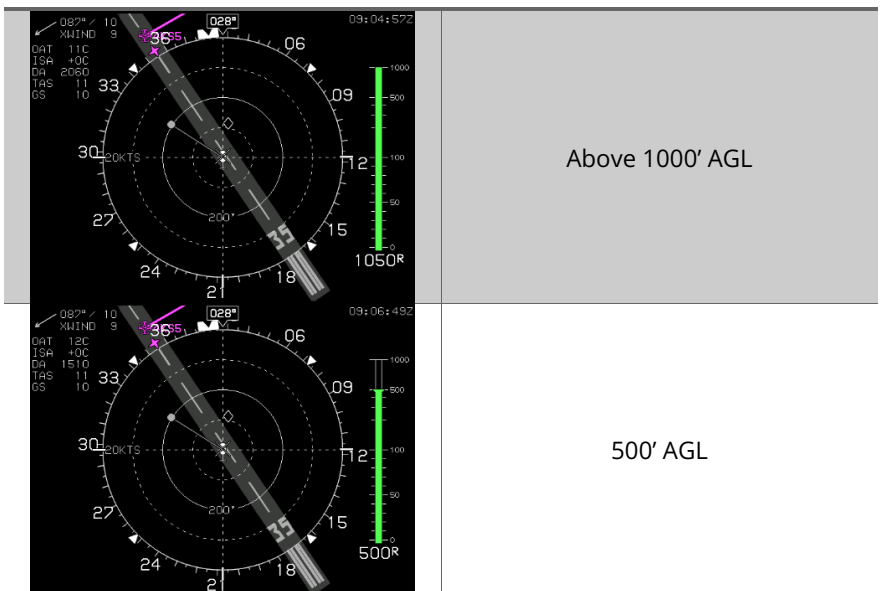


Table 2-34: Hover Vector AGL Indication

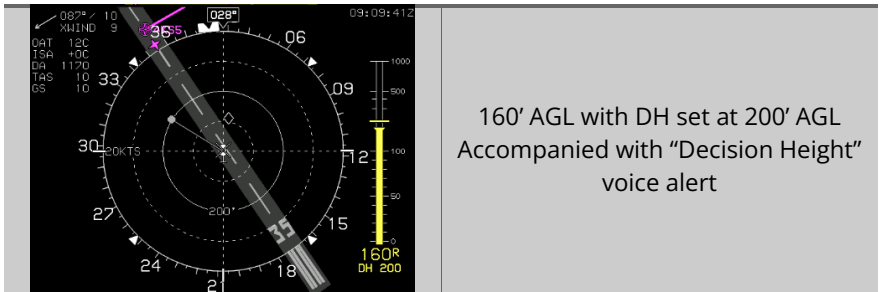

**2.7.8. Clock**

As specified in § 2.4.6.

**2.7.9. Air Data**

As specified in § 2.4.7.

## Section 3 Menu Functions and Step-By-Step Procedures

### 3.1. Menu Functions

Navigate menu functions with the 16 peripheral buttons and three knobs (④, ②, and ①). ④ is only used for adjusting screen and button brightness and cannot be used for menu functions. It is always labeled **DIM**.



Figure 3-1: IDU-680 Input Controls

#### 3.1.1. Menu Philosophy

The menu system, and buttons with an action, are clearly labeled with tiles. When the menu system is beyond the top-level, the following buttons appear:



**EXIT (R1):** When the menu system is beyond the top-level, **EXIT (R1)** escapes to the top-level.





**BACK (L1):** When a menu level is deeper than the first level, **BACK (L1)** returns one level through the menu system.



**NOTE:**

Some menu options are not available if a menu has been opened. Acknowledge any changes or press **EXIT (R1)** to return to the top-level when finished with the open menu. **MENU (R1)** is displayed when the menu system is at the top level.



**NOTE:**

During Step-By-Step procedures, use **1** (PFD or MFD BTM area), **1** or **2** (MFD) as applicable to select then push to enter.

Soft menu tiles: Used (even at the top-level) and are annunciated in a dedicated, blacked-out area in the screen margins adjacent to the appropriate IDU button or knob when appropriate.

Selection list: Menus adjacent to knobs are frequently a selection list. Within lists, a two-dot trailer, **ILS..**, indicates further menu levels. Lists too long to be presented in the space available provide an indication of location within the list.

Menu messages are displayed adjacent to the knobs when appropriate. Menu messages are cleared if any IDU button is pressed or knobs **1**, **2**, or **3** are pushed or rotated.



Further menu levels

Without further menu

A filled triangle next to a menu legend means the button press leads to a further menu level. A hollow triangle next to a menu legend means the button press is a final action.

Figure 3-2: Indication of Further Menu Levels

### 3.1.2. Avoidance of Autonomous Behavior

The displays are designed to be under the control of the pilot to ensure critical functions are placed at the top level (i.e., **TO ESSNTL**). Autonomous changes in function are avoided to the most extent possible. The following autonomous behaviors are incorporated into the IDUs, all of which are required by regulation or guidance.

Automatic pop-up of flight instruments: For IFR approval in rotorcraft, flight instrument information essential to flight safety must remain available to the pilot without additional crewmember action after a failure. This guidance is

specific to flight instruments, but it does not address powerplant or navigation instruments. This requirement is met by assigning an order of precedence of the IDUs based upon the IDU number. The PFD always shows the essential flight instruments, because the PFI page is always shown in the top area. Lower priority IDUs monitor the higher priority IDU via intra-system communications and automatically switch to Essential mode upon determining the higher priority IDU has failed.

**TAWS/HTAWS popups:** When an FLTA alert is generated, a popup function enables PFI SVS and activates terrain at an appropriate scale and format on the moving map page (one of the multi-function pages). This is a required function of TSO-C194 for Enhanced HTAWS and is enabled in the other TAWS/HTAWS options integrated in the EFIS software (See Section 7 Terrain Awareness Warning System for details).

**Traffic popups:** See Traffic appendix

### 3.2. Menu Synchronization

System settings changed by the menu system are synchronized between multiple IDUs and between top and bottom areas in MFD-MFD mode as in Table 3-1. All parameters for rotorcraft are included. Each appendix for Datalink, Strikes, Video, Weather Radar, and Traffic contains specific limitations for menu synchronization for that feature.

Table 3-1: Menu Synchronization


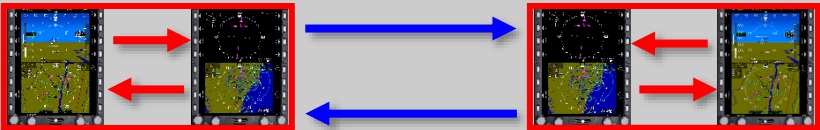
Menu Parameter	Notes
<i>The following menu parameters are always synchronized across all displays. These are bugs and fundamental aircraft values that should never have independence. <b>Intra-System</b> or <b>Inter-System</b> communications.</i>	
	
AHRS 1 and 2 mode and slewing values	
Fuel Totalizer Quantity	
VNAV Climb Angle	
Countdown Timer Start Time	
Countdown Timer Default Value	
Remote Tune Frequencies	When equipped and enabled
VNAV Descent Angle	
Decision Height Setting	Dependent upon EFIS Limits "Dual DH enabled"
Emergency and Minimum Fuel Settings	When enabled

Table 3-1: Menu Synchronization

Menu Parameter	Notes
Heading Bug and Heading Sub-Mode	
Minimum Altitude Bug Value	
VLOC OBS Settings	When equipped and enabled
Roll Trim parameter	When equipped and enabled
Airspeed Bug Setting	
Target Altitude Bug Setting	
Timer Starting Signal	When configured and enabled
True North Mode	
VSI Bug Setting	
Crosslink Synchronization Status	When configured and enabled
TCAS-II control parameters	When configured and enabled
Transponder Selection	When configured and enabled

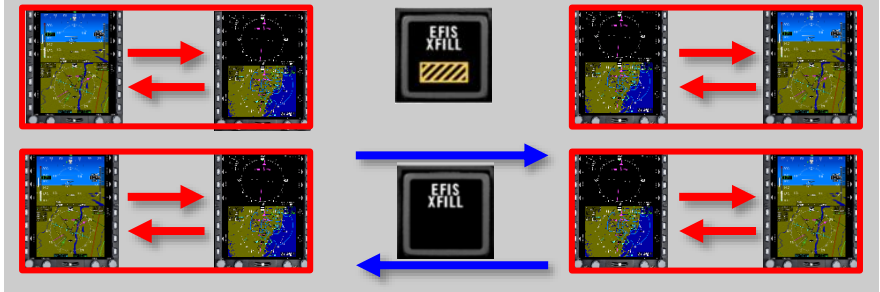The following menu parameters are synchronized across all displays when crosslink is enabled. Otherwise, they are only synchronized inside. These parameters are FMS parameters and allow the pilot and co-pilot FMSs to be operated independently when crosslink is inhibited. **Intra-System** or **Inter-System** communications.



Active Flight Plan Parameters

Runway Display Parameters



The following menu parameters are only synchronized inside. These parameters are usually sensor selections or PFD options used to keep the appearance of any pilot's PFD consistent in the case of PFD reversion. The inside characteristic means that individual pilots can still adjust their PFD settings to their preference. **Intra-System** communications.



Sensor Selections

Barometric Setting Parameters (Baro, Transition alt, Set QFE Baro)

Table 3-1: Menu Synchronization

Menu Parameter	Notes
Intra-System Setting Parameters	When configured and enabled
Decision Height Setting	Dependent upon EFIS Limits "Dual DH not enabled"
Active Navigation Source	
Horizon Synchronization Parameters	
PFD Basic Mode	
PFD Zoom Mode	
Navigation Preview Source	When enabled
PFD Analog AGL	
PFD Full-time Bank Scale	
PFD Flight Director	
PFD Mini Map	
PFD Altitude (meters)	
PFD Skyway	
PFD Terrain	
Rate of turn indication	
UTC Offset (Time Zone)	
<p><i>The following menu parameters are independent between displays. These are used to support non-PFI area display options to give the pilot maximum MFD operating flexibility. Note that some of these parameters are also independent between top and bottom MFD areas as specified in the notes.</i></p>	
 	
CPU Type	To support mixed CPU type installations
MFD Show ETA	
Essential Mode Status	Support for reversion
MFD Map and HSI Page (DCLTR) Pointer Settings	Independent between top and bottom MFD areas
MFD Map Function Declutter Settings	
MFD Map NavData® Symbol Declutter Settings	
MFD Selected Page	
MFD Map Page Settings	
MFD Show ETA	
DVI Mode Status	Support for DVI option

### 3.3. Top-Level Menu

The top-level menu consists of soft menu options along with option labels for the knobs. Under certain conditions, soft menu tiles automatically appear and may be shown for a significant period, or until acknowledged.

#### 3.3.1. PFD Top-Level Menu

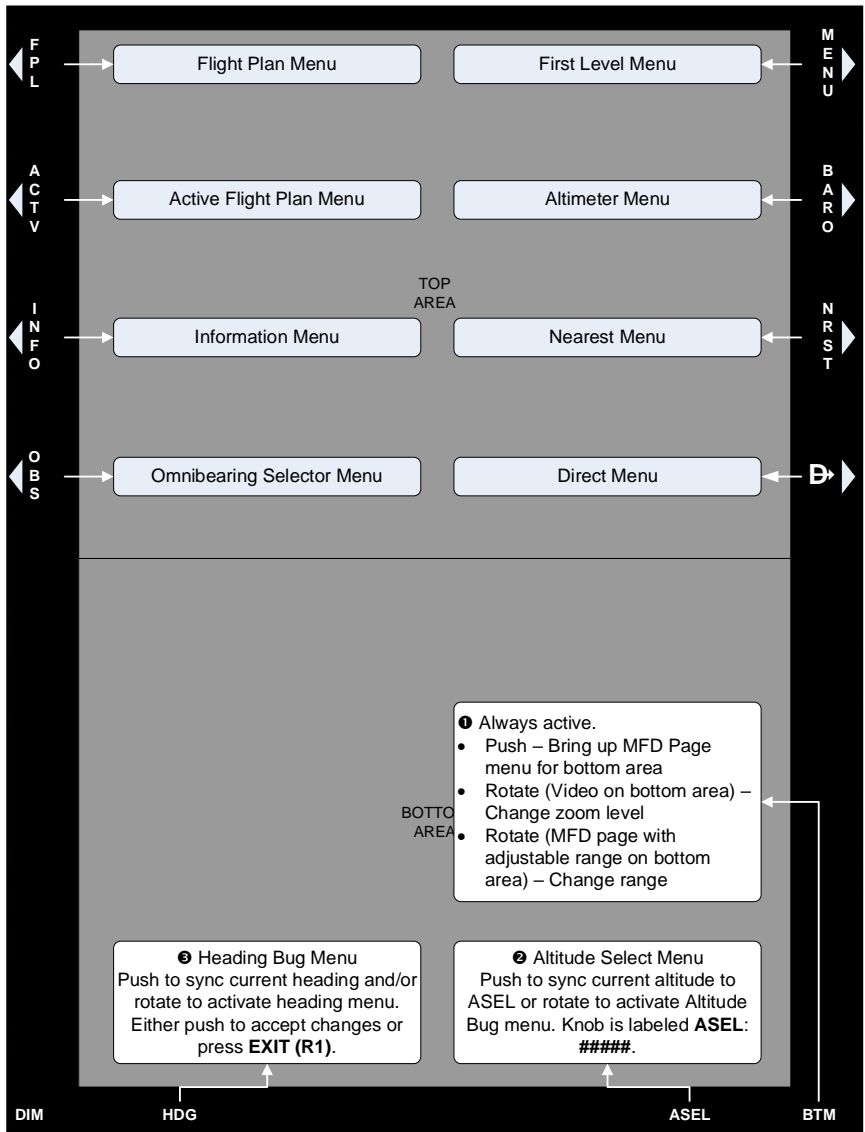


Figure 3-3: PFD Top-Level Menu

### 3.3.2. MFD Normal Mode Top-Level Menu

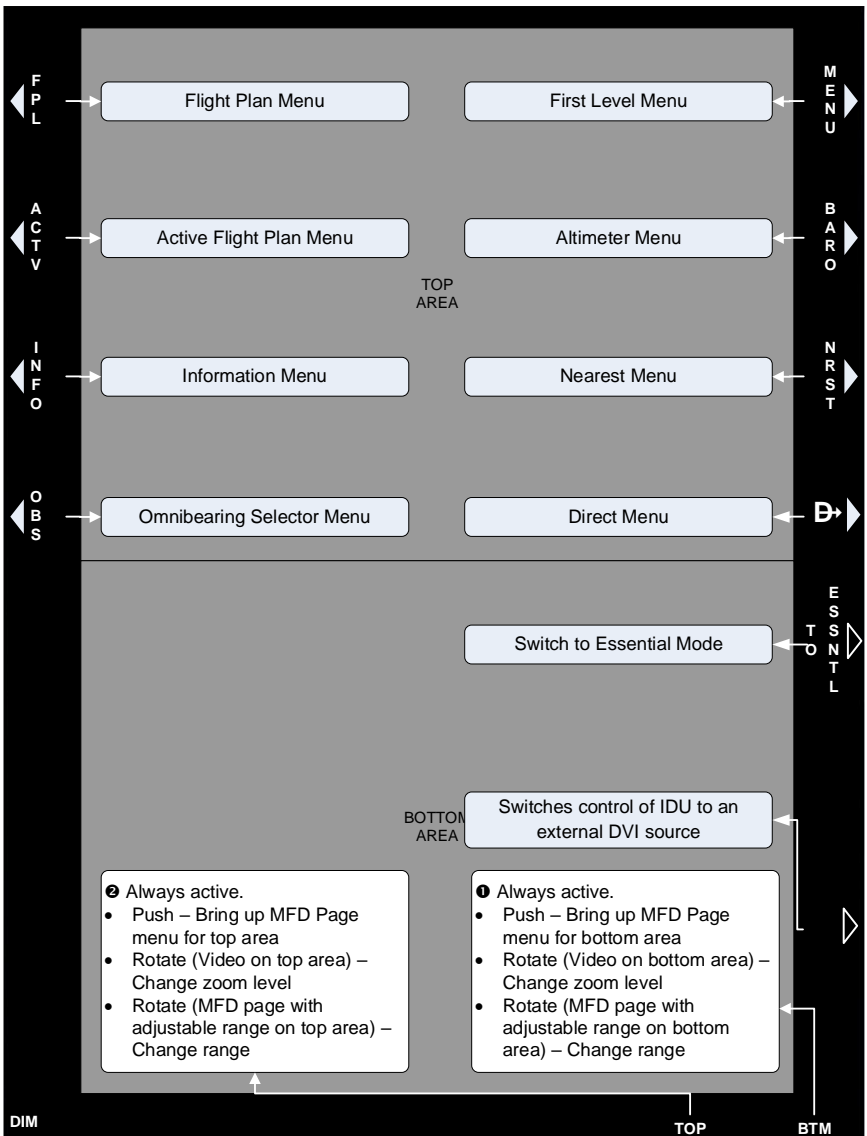


Figure 3-4: MFD Top-Level Menu (Normal Mode)

### 3.3.3. MFD Essential Mode Top-Level Menu

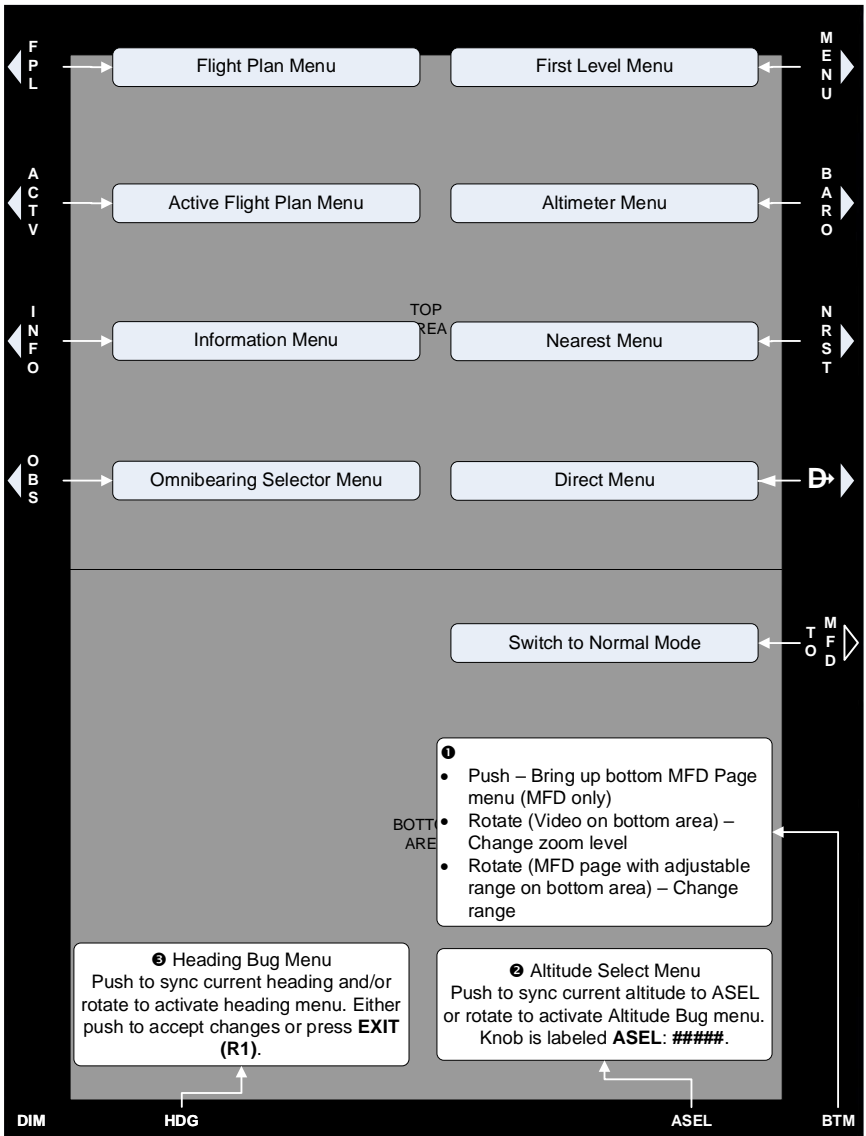


Figure 3-5: MFD Top-Level Menu (Essential Mode)

### 3.4. First-Level Menu

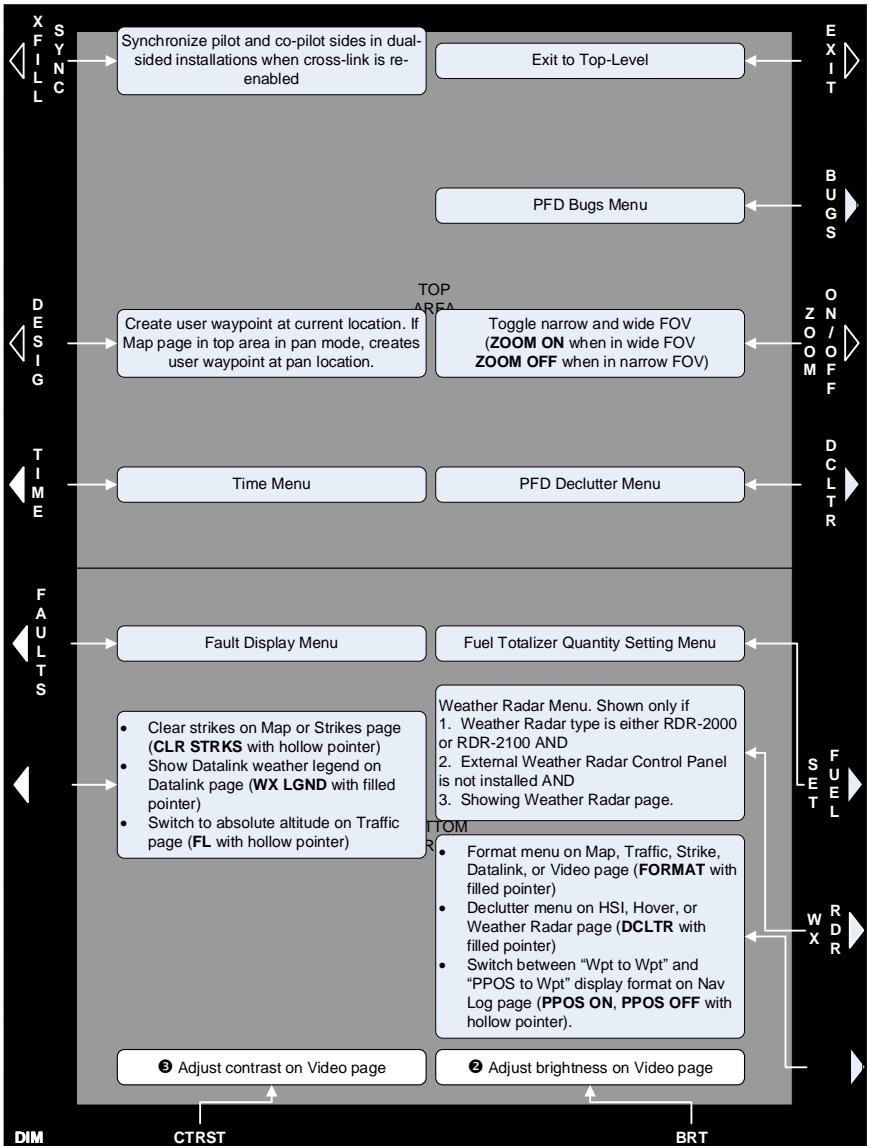


Figure 3-6: PFD First-Level

Top area of the PFD is fixed to the PFI. First-level options are shown adjacent to the top eight buttons. Options may also appear on the bottom eight buttons as appropriate to the MFD page shown in the bottom area. Crossfill status is controlled in the PFD first-level menu.



Table 3-2: Crossfill Inhibit/Arm/Sync Function

Crossfill <sup>(1)</sup>	Flight Plan	Indication (Pilot and Co-pilot)	Action to Synchronize Flight Plans		Result
			Pilot	Co-pilot	
Enabled (Cond.1)	Synchronized	None	None	None	No action required. Pilot and co-pilot sides already synchronized
Enabled (Cond.2)	Not Synchronized <sup>(2)</sup>	<b>XFILL ARM</b>	<b>MENU (R1) XFILL SYNC (L1)</b>	None	Pilot's flight plan is sent to co-pilot side and both sides are synchronized going forward. <b>XFILL ARM</b> is removed from both sides.
			None	<b>MENU (R1) XFILL SYNC (L1)</b>	Co-pilot's flight plan is sent to pilot side and both sides are synchronized going forward. <b>XFILL ARM</b> is removed from both sides.
Inhibited (Cond.3)	Not Synchronized	<b>XFILL INHBT</b>	Enable crossfill <sup>(1)</sup> (proceed to Cond. 2)		<b>XFILL INHBT</b> is removed. <b>XFILL ARM</b> is displayed on both sides.

<sup>(1)</sup> Crossfill is inhibited with the use of a latching (ON) crossfill inhibit switch. Crossfill is enabled by releasing this switch (OFF).

Pilot and co-pilot flight plans can become unsynchronized under the following conditions:

- <sup>(2)</sup>
- 1) Crossfill is inhibited, and pilot and co-pilot flight plans are separately changed before crossfill is re-enabled.
  - 2) Either the pilot or co-pilot side is restarted with an active flight plan on the other side and crossfill enabled.
  - 3) If **XFILL FAIL** condition exists, and any changes are made to either side flight plans.

MFD page first-level options are shown adjacent to the area in which the MFD page resides.

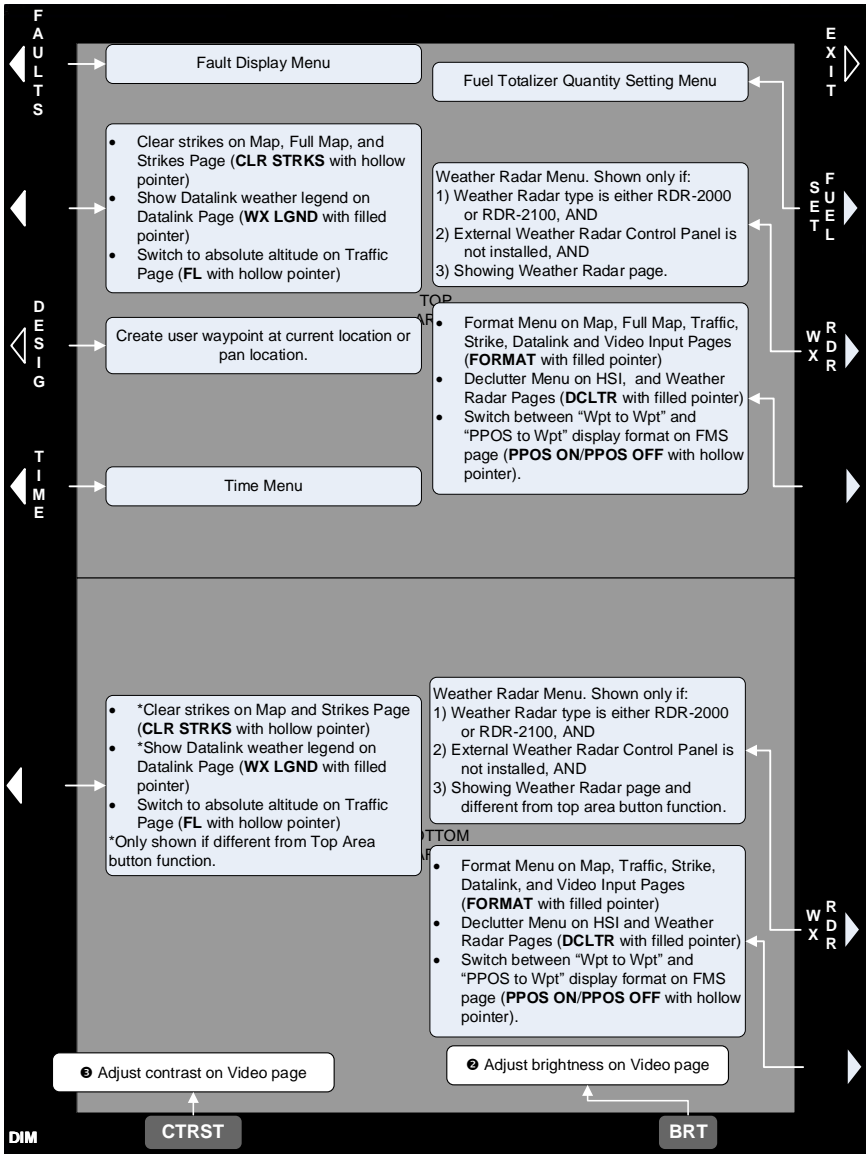


Figure 3-7: MFD First-Level (Normal Mode)

### 3.5. Flight Plan (FPL) Menu

Upon activation of the flight plan menu, the system checks for saved flight plans. If there are no saved flight plans, only **CREATE-EDIT..** knob message


appears. Otherwise, a list of saved flight plans is presented. Upon selection of a saved flight plan, the second waypoint in the flight plan is activated.

**Flight Plan Limits:** Flight plans are stored routes (100 maximum) for repeated use without having to re-enter the waypoints each time. A flight plan consists of at least two waypoints (a start and an end) and may have up to 100 waypoints. Flights requiring more than 100 waypoints are divided into two or more flight plans.



---

**NOTE:**

Locked flight plans (preceded by ) are shown first. Locked flight plans are only created, edited, deleted, or reversed with a ground-based utility and are loaded into the system using a ground maintenance function.

---

### 3.5.1. Flight Planner Page

Perform following types of functions through the flight planner page on PFD or MFD.

- 1) Manage stored flight plans (create, activate, edit, reverse, delete, and rename);
- 2) Manage user waypoints (create, edit, and delete); and
- 3) Perform RAIM predictions.

These operations demand pilot attention and are not a normal operating condition for the IDU. When the flight planner page is in use, it only appears on the bottom area, it takes over the IDUs controls and disables the menu operations described. Normal menu operation and IDU control function are restored upon:

- 1) Exiting the flight planner page; or
- 2) Automatic reversion of the IDU to PFD or essential mode exits the flight planner page and wipes out any changes being performed.



---

**NOTE:**

Unless otherwise noted, the following step-by-step procedures are for the PFD or MFD.

---

Because the flight planner page takes over the IDUs controls, limitations are placed upon access and display of the flight planner page. Selecting the stored flight plan option leads to a list of stored flight plans. Upon selection of a stored flight plan, the second waypoint in the flight plan is activated.

### 3.5.2. Select Flight Plan on PFD (Step-By-Step)

- 1) Press **FPL (L1)**.
- 2) Push **⏏** to **SELECT..**
- 3) Use **⏏** to highlight desired flight plan and then push to enter.

### 3.5.3. CREATE-EDIT Menu Selections (Step-By-Step)

- 1) Press **FPL (L1)**.
- 2) Use **⏏** to highlight **CREATE-EDIT..** and push to enter.
- 3) Use **⏏** to select one of the following options:

#### 3.5.3.1. Create Flight Plan

- 1) Select **CREATE FLIGHT PLAN.**
- 2) Press **ADD (R6)** to create first waypoint.
- 3) Use **⏏** to create first waypoint or press **NRST APT (L6), NRST VOR (L7), NRST NDB (L8), NRST FIX (R6),** or **NRST USR (R7)** to view applicable list.
- 4) If **NRST VOR (L7)** is pressed, rotate **⏏** and push to enter desired VOR as the first VOR in the flight plan.
- 5) A VOR is added, and the highlighted line is advanced to the next position below. Press **ADD (R6)** to create the next waypoint.
- 6) Continue adding waypoints as described in step above and progress up to as many as 100 waypoints.
- 7) When a VOR is added to the flight plan, if there is an associated airway, it is available for selection. Rotate **⏏** to highlight the VOR and press **INSRT (R6)** and then **AIRWAY (R8)**.
- 8) Use **⏏** to highlight desired end point on airway and push to enter.
- 9) Press **SAVE (R8)** to save changes to one of the 100 maximum saved flight plans.

#### 3.5.3.2. Activate Flight Plan PFD or MFD

- 1) Select **ACTIVATE FLIGHT PLAN.**
- 2) Use **⏏** to select desired saved flight plan and push to enter. The selection for activating is accepted. Push to enter.
- 3) Press **EXIT (R1)** to exit menu and restore to last MFD page on the bottom.

#### 3.5.3.3. Edit Flight Plan on PFD or MFD

- 1) Select **EDIT FLIGHT PLAN.**

- 2) Use **1** to highlight desired flight plan requiring editing and push to enter.
- 3) Use **1** to highlight waypoint where another waypoint is to be inserted above and press **INSERT (R6)**.
- 4) Use **1** to enter desired selection and push to enter, or press **NRST APT (L6)**, **NRST VOR (L7)**, **NRST NDB (L8)**, **NRST FIX (R6)**, or **NRST USR (R7)** to view applicable list, rotate **1** to desired selection and push to enter.
- 5) When a VOR is added to the flight plan, if there is an associated airway, it is available for selection. Rotate **1** to highlight the VOR and press **INSRT (R6)** and then **AIRWAY (R8)**.
- 6) Use **1** to highlight end point on airway and push to enter.
- 7) To delete any waypoint, use **1** to highlight desired waypoint. Press **DEL (R7)** to delete waypoint. Push **1** to **CONFIRM DELETE WPT**.
- 8) If flight plan is satisfactory, press **SAVE (R8)** and then **EXIT (R1)** to exit the flight plan menu.

#### **3.5.3.4. Reverse Flight Plan on PFD or MFD**

- 1) Select **REVERSE FLIGHT PLAN**.
- 2) Use **1** to highlight desired flight plan and push to enter.
- 3) If no other flight plan to reverse, press **EXIT (R1)**.

#### **3.5.3.5. Delete Flight Plan**

- 1) Select **DELETE FLIGHT PLAN**.
- 2) Use **1** to highlight desired flight plan to delete and push to enter.
- 3) Push **1** to **CONFIRM DELETE FPL**.
- 4) The next flight plan is highlighted. If no further deletions, press **EXIT (R1)**.

#### **3.5.3.6. Rename Flight Plan**

- 1) Select **RENAME FLIGHT PLAN**.
- 2) Use **1** to highlight flight plan intended to rename and push to enter.
- 3) Use **1** to create a new 12-character name for this flight plan.
- 4) Press **SAVE (R8)** to save changes.
- 5) If no further renaming is required, press **EXIT (R1)**.

#### **3.5.3.7. Create User Waypoint**

User waypoints may be created with three methods:

- 1) Latitude and Longitude
- 2) Radial and Distance
- 3) Overfly/Pan (See Section 6 IFR Procedures)

**NOTE:**

A maximum of 999 user waypoints may be created and stored.

Duplicate flight plan names or user waypoint names are not accepted.

### 3.5.3.8. Create User Waypoint (LAT-LON) on PFD or MFD

To create a user waypoint using latitude and longitude, use the following step-by-step procedure.

- 1) Select **CREATE USER WPT (LAT-LON)**.
- 2) To name a new user waypoint, rotate **⬇** and push to enter up to five-characters and or spaces.
- 3) With new user waypoint name created, push and or rotate **⬇** to proceed through all fields as necessary.
- 4) Approach bearing preloading depends on mode of flight as follows:
  - a) On Ground: Preloaded with current heading
  - b) In Flight: Preloaded with "OFF" value.
  - c) If desired, specify the approach bearing to user waypoint in degrees 1°-360°. "OFF" disables VFR approaches to the user waypoint.
- 5) Once all fields are entered, press **SAVE (R7)** to save user waypoint or press **➔ (R8)** to activate/save waypoint as the active waypoint and begin navigation guidance.
- 6) Changes are saved and user waypoint is saved as one of the 999 user waypoints. EFIS returns to **CREATE FLIGHT PLAN**. Press **EXIT (R1)** to exit menu.

### 3.5.3.9. Create User Waypoint (RAD-DST) on PFD or MFD

- 1) Select **CREATE USER WPT (RAD-DST)**.
- 2) Identifier is automatically named "RD###" where ### is the next available radial distance waypoint number.
- 3) Use **⬇** to enter for reference waypoint and push to enter.
- 4) If multiple search results appear, a list appears. **INFO (R6)** appears to verify each waypoint information.

- 5) Use **1** to highlight desired waypoint and push to enter.
- 6) Use **1** to enter the radial entry and distance from desired waypoint.



**NOTE:**

RADIAL/DIST values, (1-360° and .1NM/KM-200NM/KM).

- 7) Press **SAVE (R7)** to save user waypoint or press **➔ (R8)** to activate/save as the active waypoint and begin navigation guidance.

### 3.5.3.10. Edit User Waypoint on PFD or MFD

- 1) Select **EDIT USER WPT**.
- 2) **EDIT WHICH USER WAYPOINT:** Rotate **1** to desired waypoint to be edited and then push to enter.
- 3) Use **1** to edit all fields and then push to enter.
- 4) Either press **SAVE (R7)** to save edited user waypoint or **➔ (R8)** to begin navigational guidance.
- 5) If no more waypoints to be edited, press **EXIT (R1)**.

### 3.5.3.11. Delete User Waypoint on PFD or MFD

- 1) Select **DELETE USER WPT**.
- 2) Use **1** to highlight desired waypoint to be deleted and push to enter.
- 3) Push **1** to **CONFIRM DEL USER WPT**.
- 4) If no more waypoints to delete, press **EXIT (R1)**.



**NOTE:**

Changes to user waypoint parameters while in flight are not automatically updated to an active flight plan containing that user waypoint.

When changes are made to a user waypoint, and those changes are desired in existing flight plans which use the waypoint, it must be deleted and replaced in the flight plans with the following steps:

- 1) Edit the user waypoint (see § 3.5.3.10).
- 2) Edit the flight plan that uses the user waypoint (see § 3.6.2);
- 3) Delete the existing user waypoint from the flight plan;
- 4) Insert the user waypoint again (if desired);

- 5) Save and exit;
- 6) Reload the flight plan if it was in use.

### 3.5.3.12. RAIM Prediction on PFD or MFD

When selected, the RAIM prediction screen is only shown if the GPS/SBAS receiver can perform a RAIM prediction (not suitable for en route predictions). This requires there be no faults along with a current almanac in memory. Check Faults menu (on PFD or MFD) to determine if the GPS/SBAS receiver can perform a RAIM prediction.

- 1) Select **RAIM PREDICTION**.
- 2) Rotate and push **⬇** enter to the desired waypoint and select **INFO (R6)** to verify the waypoint.
- 3) Rotate and push **⬇** to enter **UTC TIME:** and **UTC DATE:**.
- 4) Press **CALC (R6)** to check RAIM predictive status.
- 5) If another RAIM prediction is necessary, press **START OVER (R6)** or press **EXIT (R1)**.



#### NOTE:

The pilot may perform RAIM prediction at a designated waypoint. The screen has various data entry boxes as follows:

- 1) Designated Waypoint: Enter an identifier for the designated waypoint. If there is a single result from the search, the pilot is advanced to the UTC time entry box. If there is no result from the search, the pilot is re-prompted to enter an identifier. If there are multiple results from the search, a selection list with matching identifiers is presented and, upon selection, the pilot is advanced to the UTC time entry box. **INFO (R6)** gives information for the highlighted results.
- 2) UTC Time Entry: Enter the 24-Hour UTC estimated time of arrival at the designated waypoint.
- 3) UTC Date Entry: Enter the UTC estimated date of arrival at the designated waypoint.
- 4) PRN Mask Entry: Specification of the PRN number of satellites expected to be unavailable at the destination.
- 5) EXIT: Exit the RAIM prediction screen at any time.
- 6) Once a designated waypoint and UTC estimated time of arrival are entered, **CALC (R6)** appears. Press **CALC (R6)** to check the



UTC estimated time of arrival and ensure it is within the current almanac (i.e., <3.5 days from current date and time). If it is, a predictive FDE request message requesting “detection availability” with a required HAL of 0.3NM is sent to the GPS/SBAS receiver. In response, the GPS/SBAS receiver replies with a sequence of predictive FDE response messages. These messages are parsed and used to fill in the RAIM prediction result area at the bottom of the screen. The RAIM prediction result area shows the RAIM prediction results as “OK” or “XX” for ETA ± in 5-minute increments. Once a prediction is complete, press **START OVER (R6)** to perform another prediction (if necessary) without exiting the RAIM prediction menu.

### 3.6. Active Flight Plan (ACTV) Menu

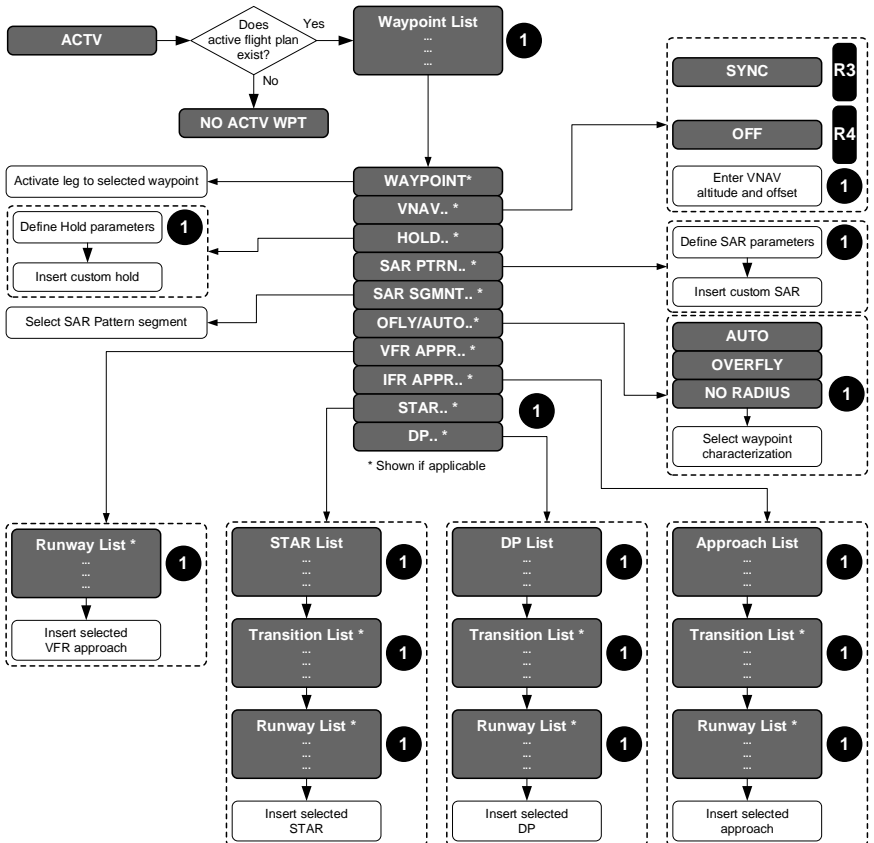


Figure 3-8: Active Flight Plan Main Menu

See Section 6 IFR Procedures for active flight plan description.

The following options allow various modifications for the active flight plan. Upon pressing **ACTV (L2)**, the EFIS checks for the existence of an active waypoint. If there is no active waypoint, **NO ACTIVE WPT** menu message is displayed. Otherwise, a selection list of waypoints in the active flight plan is presented. The waypoint list shows the following:

- 1) Each waypoint identifier and characterization (default is auto otherwise overfly ("OF") or no radius ("OR") is shown as selected);
- 2) A symbol designating waypoint type along with any special attributes;
- 3) VNAV altitudes and offsets associated with each waypoint; and
- 4) Information related to the flight plan path between each waypoint.

VNAV altitudes are presented in feet or meters and VNAV offsets are presented in NM or KM depending upon the setting of the "Speed Units" system limit. In case of an approach with a final approach segment data block, the VNAV offset associated with the missed approach point is the "GPI" to designate distance to the glide path intercept point.

When courses are presented as part of the path information, they are displayed referenced to either magnetic or True North depending upon the status of the Truth North mode selection. When distances are presented as part of the path information, they are displayed in NM or KM.

VNAV altitudes and offsets that come from the navigation database or that have been manually entered are shown in white. VNAV altitudes and offsets that are computed automatically are shown in gray. The current active waypoint is designated by an asterisk and shown in magenta. The active waypoint color turns amber (yellow) in the event of a GPS Loss of Navigation caution. Any suppressed waypoints are designated by brackets.

### 3.6.1. Active Flight Plan (ACTV) Menu Options

The active flight plan menu options are defined in Table 3-3. Searches are conducted for 20 items within 240 NM nearest to the waypoint prior to the insertion point or added at the end. If list is empty, (no items within 240NM), **NO RESULTS** message is displayed.

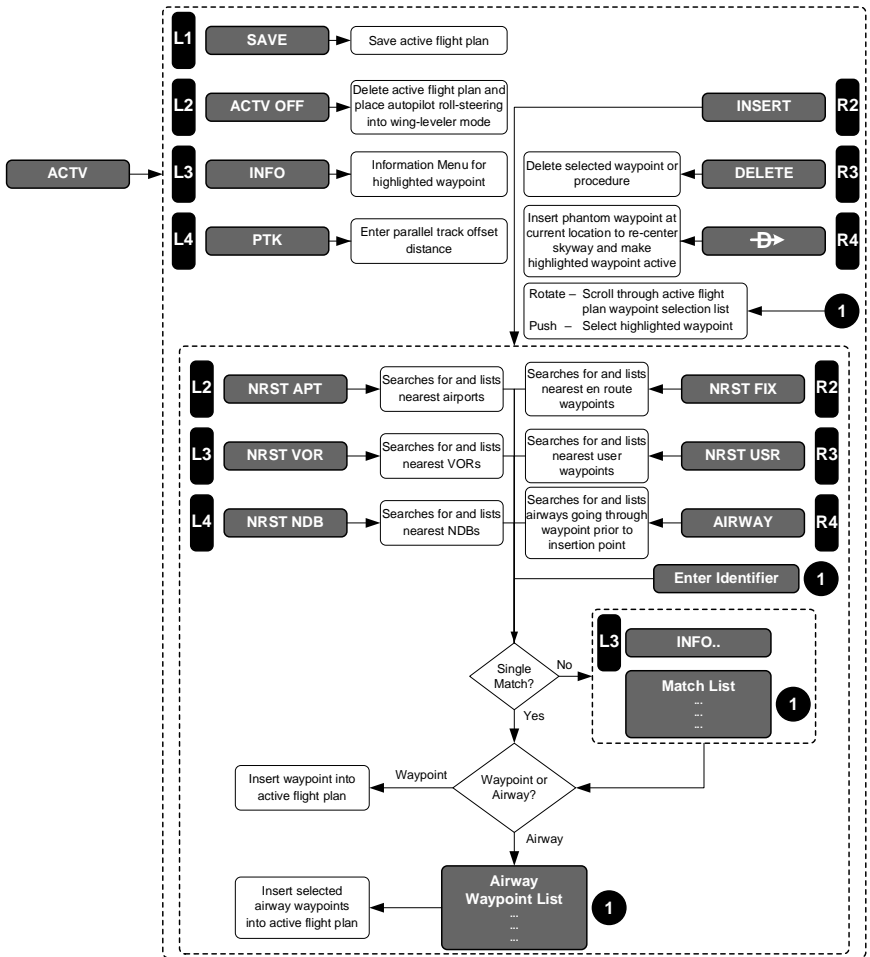


Figure 3-9: Active Flight Plan Menu Options

Table 3-3: Active Flight Plan Menu Options

Menu Options	Action for Active Flight Plan	Limitations
<b>SAVE (L1)</b>	Saves and is part of 100 stored flight plans	Saves without procedures or phantom waypoints. Named by first and last waypoints. For new flight plans with same start and end waypoints but with different routing, a number (1-9) is appended to the name to uniquely identify up to 10 routings with same start and end points.

Table 3-3: Active Flight Plan Menu Options

Menu Options	Action for Active Flight Plan	Limitations
<b>ACTV OFF (L2)</b>	Deletes flight plan	Prompted to confirm deletion.
<b>INFO (L3)</b>	Activates information menu for highlighted waypoint	With no active flight plan, activates information for nearest airport.
<b>PTK (L4)</b>	If active leg is eligible for offset, allows pilot to specify parallel offset distance in nautical miles or kilometers that applies to the active and contiguous legs	The range of parallel offsets is from 20 units left or right of track in 1-unit increments. (NM or KM depending on "Speed Units" system limit.  <b>PTK (L4)</b> is absent if current leg is ineligible for offsetting.
<b>INSERT/ ADD (R2)</b>	Insert or add a waypoint or airway  (See Note below)	<b>ADD:</b> At end of active flight plan. <b>INSERT:</b> Above highlighted waypoint. <b>SEARCH:</b> Requires minimum of two characters. <b>INFO:</b> After adding waypoint, appears to aid in selection. <b>AIRWAY:</b> Search for all airways going through highlighted waypoint. Offers option to select exit waypoint. After selection, all airway waypoints from the waypoint prior to the insertion point to the desired exit point are added to the flight plan.
<b>NRST APT (L2)</b>	Search for airports and heliports	<b>INFO:</b> After adding waypoint, aids in selection.
<b>NRST FIX (R2)</b>	Search for fixes	<b>INFO:</b> Provides information and aids in selection and includes datalinked weather information when available and enabled.
<b>NRST NDB (L4)</b>	Search for NDBs	<b>INFO:</b> Provides information and aids in selection.

Table 3-3: Active Flight Plan Menu Options

Menu Options	Action for Active Flight Plan	Limitations
<b>NRST USR (R3)</b>	Search for nearest user waypoints	<b>INFO:</b> Provides information and aids in selection.
<b>NRST VOR (L3)</b>	Search for nearest VORs	<b>INFO:</b> Provides information and aids in selection.
<b>Identifier Entry Box</b>	Area to enter identifier where knob message would normally appear	Entry of at least two characters and then <b>SEARCH (R4)</b> appears to begin immediate search. Selection list may appear, if there are multiple results, for addition to add to the active flight plan. Highlighted result information may include datalink weather when enabled and available.  <b>INFO:</b> Provides information and aids in selection.
<b>DELETE (R3)</b>	If highlighted waypoint is a non-procedure waypoint, deletes the waypoint after confirmation	If highlighted waypoint is a parallel offset entry or exit waypoint or is part of a procedure, deletes entire procedure after confirmation. Does not appear if highlighted waypoint is a non-procedure and there are only two non-procedure waypoints in active flight plan. Otherwise, deletes the waypoint.  Does not appear if highlighted waypoint is suppressed or one position beyond the end of the active flight plan.
<b>➔ (R4)</b>	Inserts phantom waypoint at the current aircraft position and makes the highlighted waypoint active	Phantom waypoint is a fly-over defined entry waypoint, and leg prior to phantom waypoint is designated a discontinuity. Assures skyway is re-centered for guidance.  Does not appear when highlighted waypoint is suppressed, is one position past the end of the active flight plan, an undrawn waypoint, phantom waypoint, SAR pattern waypoint, dynamic termination waypoint, or parallel offset entry, or entry waypoint.  Otherwise inserts a phantom waypoint at the current aircraft location.

**NOTE:**

To avoid corruption of IFR approaches, STARs, DPs holding patterns, and SAR patterns, **INSERT/ADD** does not appear when the highlighted waypoint is:

- 1) the second or subsequent waypoint of a procedure,
- 2) suppressed airport and the prior waypoint is part of an approach procedure,
- 3) a holding point, or
- 4) a SAR pattern exit waypoint.

When activated, a sub-menu is presented as follows:

For waypoints, if there is a single result, it is inserted or added to the active flight plan. If there is no result, pilot is re-prompted to enter an identifier. If there are multiple results, a list with matching identifiers is presented and, upon selection, the selected waypoint is inserted or added to the active flight plan. **INFO (L3)** aids in selection and gives access to information for the highlighted result.

For airways, this option only appears when an airway transits through the waypoint prior to the insertion point. When activated, a search is performed for all airways going through the highlighted waypoint and matching the entered identifier (i.e., for a list of all Victor airways, Q-routes, and T-routes, enter an identifier string of "V", "Q," "T", etc.). If there is a single result, a list of airway waypoints is shown to select the desired pilot selected exit point. If there are multiple results, a list with matching airway identifiers is presented and, upon selection, a list of airway waypoints is shown to select the desired exit point. Upon selecting the desired exit point, all airway waypoints from the previous waypoint to the desired exit point are inserted or added to the active flight plan. Each active flight plan has a limit of a maximum of 100 waypoints.

### 3.6.2. ACTV Menu (Step-By-Step)

- 1) Press **ACTV (L2)** to view active flight plan. Use **1** to highlight desired waypoint and push to enter.
- 2) Use **1** to highlight desired option (for example, **VNAV..**), push to select, and then enter desired altitude and offset.
- 3) As another option, press **DELETE (R3)** to delete the highlighted waypoint.

4) Push **1** to **CONFIRM DELETE WPT**.

### 3.6.3. ACTV Hold Menu (Step-By-Step)

- 1) With desired flight plan selected and activated, press **ACTV (L2)** to view active flight plan.
- 2) Use **1** to highlight desired waypoint. push to enter.
- 3) Use **1** to highlight desired option (for example **HOLD..**) and push to enter.
- 4) Use **1** to set **COURSE;**, **TURN DIR;**, **LEG DIST;**, or **LEG TIME;**, and push to enter between each entry. (**LEG DIST;** and **LEG TIME;** are mutually exclusive.)
- 5) The active flight plan automatically appears to show changes. Press **SAVE (L1)** to save as another stored flight plan or press **EXIT (R1)** to save changes and close menu.

### 3.6.4. ACTV Nearest Menu (Step-By-Step)

- 1) With active flight plan displayed, use **1** to highlight desired waypoint where a new waypoint is to be inserted above and then press **INSERT (R2)**. Push **1** to enter.
- 2) Press **NRST APT (L2)**, **NRST VOR (L3)**, **NRST NDB (L4)**, **NRST FIX (R2)**, or **NRST USR (R3)** to view applicable list. Rotate **1** to desired selection and then push to insert into active flight plan.

### 3.7. Information (INFO) Menu

The amount and type of information presented depends upon the type of waypoint as in Table 3-4.

Table 3-4: INFO Menu Information

Type	NAVAID	Airports/Heliports
Waypoint Identifier		
Waypoint Type		
Waypoint elevation		Communication frequencies
Long Name	NAVAID Type	Airport runway/Heliport data
Bearing and distance (in NM or KM depending on speed units setting)	Frequency	Airport elevations are in feet or meters depending on speed units setting
Latitude and longitude		
Sunrise/Sunset times		

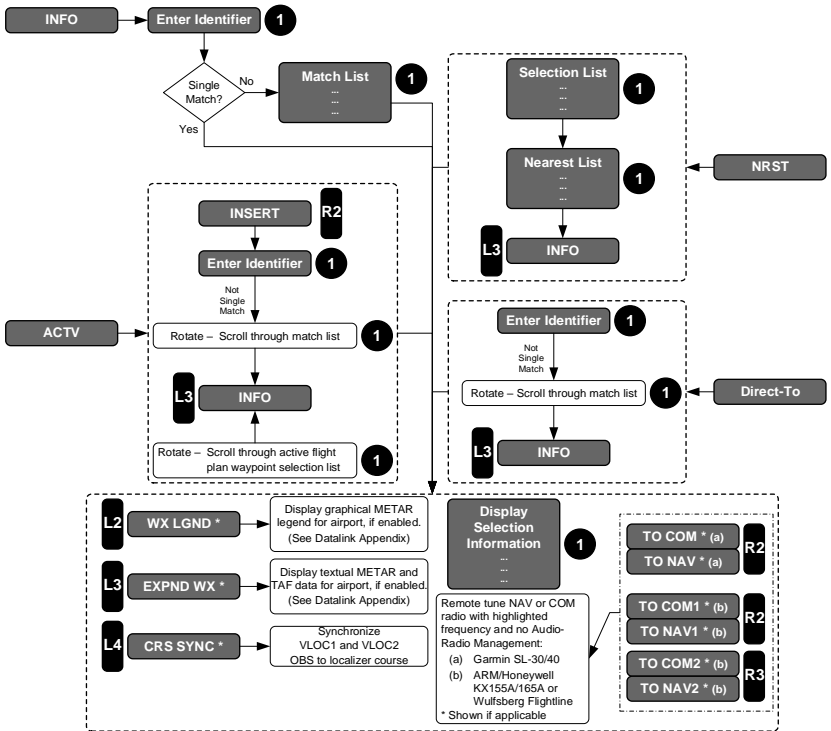


Figure 3-10: Information Menu

Table 3-5: Remote Tuning COM or NAV Radios

	<p>For remote tuning, <b>TO COM1 (R2)</b> and/or <b>TO COM2 (R3)</b> is shown to allow transmission of the frequency to remote radios when frequencies greater than or equal to 118 MHz are highlighted in the INFO block.</p>
	<p><b>TO NAV1 (R2)</b> or <b>TO NAV2 (R3)</b> is shown to allow transmission of the frequency to remote radios when frequencies less than 118 MHz are highlighted in the INFO block.</p>





**NOTE:**

Frequencies are only sent to either com or nav radios in the standby position. It is up to the pilot to swap frequencies to the active position in the applicable radio.

When information presented is for an ILS or localizer waypoint and the VLOC1 or VLOC2 omnibearing selectors are not synchronized with the localizer course, **CRS SYNC (L4)** synchronizes VLOC1 and VLOC2 omnibearing selectors to the localizer course.

**3.7.1. INFO Menu (Step-By-Step)**

- 1) Press **INFO (L3)** to view active waypoint.
- 2) Push **1** to view information.

**3.8. Omnibearing Selector (OBS) Menu (without NAV Preview)**

OBS menu allows for control of the omnibearing selector for showing course deviations. When navigation/HSI source is FMS, **OBS AUTO/OBS MAN (R4)** toggles between automatic and manual OBS settings (see Table 3-6).

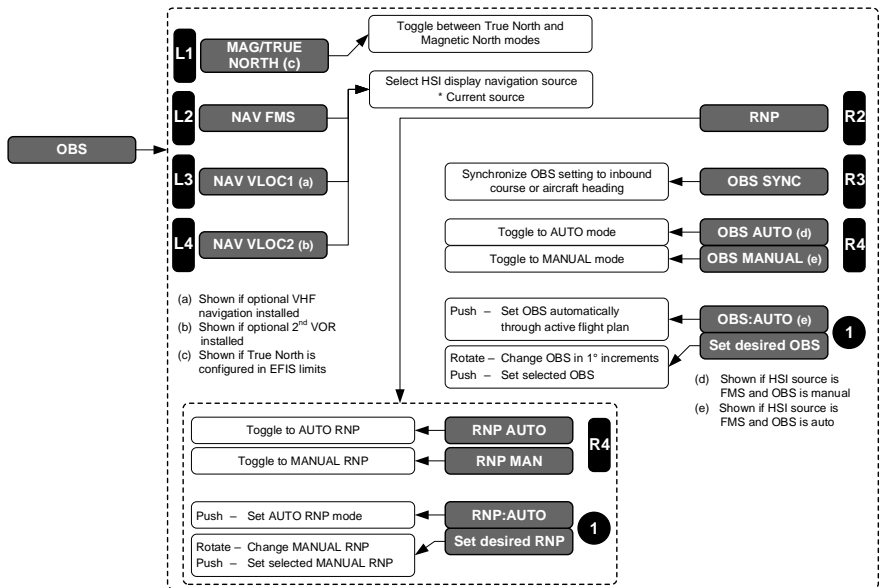


Figure 3-11: Omnibearing Selector Menu (without NAV Preview)

Table 3-6: Omnibearing Selector (OBS) Menu Options

OBS (L4)	OBS SYNC (R3)	OBS MANUAL (R4)	Nav Source and CDI Indication
<b>NAV FMS (L2)</b>	Only available with active waypoint. Synchronizes FMS to inbound course	Only available with active waypoint. Settable in increments of 1° with <b>1</b>	GPS navigation source FMS1 or FMS2
<b>NAV VLOC1 (L3)</b>	Synchronizes VLOC1 or VOR1 to the inbound course or if the inbound course cannot be determined, to aircraft heading.	Settable in increments of 1° with <b>1</b>	LOC1, VOR1, BC1
<b>NAV VLOC2 (L4)</b>	Synchronizes VLOC2 or VOR2 to the inbound course or if the inbound course cannot be determined, to aircraft heading.		LOC2, VOR2, BC2
<b>RNP (R2)</b>	When selected, allows for <b>RNP (R4)</b> <b>OBS AUTO (R4)</b> or <b>OBS MANUAL (R4)</b>	Rotate <b>1</b> to set desired manual RNP value	Manual RNP is selectable between 0.1NM and 15NM.  0.01 increments RNP 0.1-0.3 0.1NM increments RNP 0.3-2.0 1NM increments RNP 2.0-15 (Values always in NM)
<b>TRUE NORTH (L1)</b>	Toggle <b>TRUE NORTH/MAG NORTH (L1)</b> If true north mode is not configured in EFIS limits for external switching, use the OBS menu to toggle between true north and magnetic north modes.		

### 3.8.1. OBS Menu (Step-By-Step)

- 1) Press **OBS (L4)** to view OBS source, change source selection, or change to **OBS MANUAL (R4)**. (There must be an active waypoint selected to use manual OBS.)
- 2) To select manual RNP, press **OBS (L4)** and then press **RNP (R2)**.
- 3) Press **RNP MANUAL (R4)**.
- 4) Use **1** to set desired FSD and then push to enter to view estimate of position uncertainty required in RNP airspace.

### 3.8.2. True North and Magnetic North Menu (Step-by-Step)

- 1) Press **OBS (L4)** to open menu for true north option selection.
- 2) Press **TRUE NORTH (L1)** (or activate switch if a True North switch is configured in EFIS limits) to change heading from magnetic reference to true. Reference is now true north as seen in heading indications and **TRUE NORTH** advisory flag.
- 3) Repeat step 1 and then press **MAG NORTH (L1)** to restore heading reference to magnetic north.

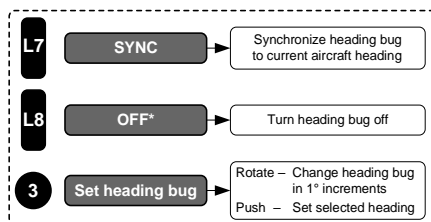
### 3.9. Heading Bug (HDG) Menu

Use the heading bug menu to set the heading bug in increments of 1°, synchronize to current heading, or turn off heading bug. If an integrated autopilot (Genesys Helicopter Autopilot) is installed, it is not possible to turn off the heading bug.



**NOTE:**

With the heading menu open, push **5** to enter heading value and exit heading menu or press **EXIT (R1)**. Heading menu does not automatically close without being confirmed or exited.



PFD (Normal and Essential Modes) (Where applicable)  
MFD (Essential Mode Only)

\* Not available if integrated autopilot installed

Figure 3-12: Heading Bug Menu

### 3.9.1. HDG Menu with Analog Autopilot (Step-By-Step)

- 1) Use **2** to enter heading mode and change heading bug in 1° increments.
  - a) If desired press **SYNC (L7)** to synchronize to current heading.
- 2) Use **2** to select set heading from previous step, or press **EXIT (R1)**, to exit the heading menu.
- 3) To change the HDG sub-mode to HDG with an autopilot enabled, press **HDG (L5)** and the autopilot begins receiving left-right steering commands from the filled HDG bug.
- 4) HDG bug sub-mode is now HDG bug. Press **LNAV (L5)** to return to LNAV sub-mode.

### 3.9.2. HDG Menu without Analog Autopilot (Step-By-Step)

- 1) Use **2** to enter heading mode and change heading bug in 1° increments.
  - a) If desired press **SYNC (L7)** to synchronize to current heading.
- 2) Use **2** to select set heading from previous step, press **EXIT (R1)**, to exit the heading menu, or press **OFF (L8)** to turn off heading bug.

### 3.10. Altitude Bug (ASEL) Menu

Use the altitude bug menu to either synchronize the target altitude to current altitude, turn off the target altitude, or set the target altitude increments of 100 units. ASEL bug is mutually exclusive with the VNAV bug.

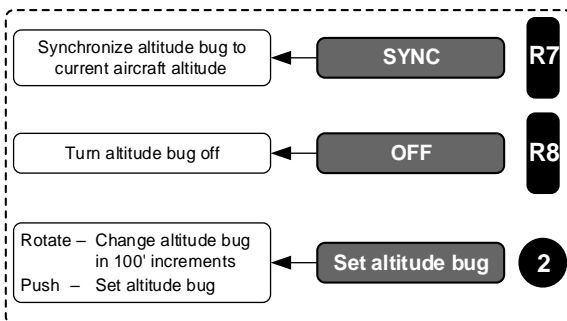


Figure 3-13: Altitude Bug (ASEL) Menu



#### NOTE:

“Target altitude” refers to pre-selected altitude in Genesys Helicopter Autopilot installations.

### 3.10.1. Altitude Bug (ASEL) Menu (Step-By-Step)

Table 3-7: Altitude Bug (ASEL) options

Action	Condition	Results
Push <b>2</b>	Default ASEL menu OFF <b>ASEL</b>	Opens ASEL menu and sets current altitude as target altitude <b>ASEL : 8000</b>
Rotate <b>2</b> and push to enter	Current target altitude <b>ASEL : 7600</b>	Sets new target altitude and displays <b>SYNC (R7)/OFF (R8)</b>
Press <b>SYNC (R7)</b>	ASEL menu open	Synchronize current altitude while climbing or descending to new target altitude
Press <b>OFF (R8)</b>		Turns off current target altitude

### 3.11. Nearest (NRST) Menu

Nearest (NRST) menu options are defined in Table 3-8. Searches are conducted for 20 items within 240 NM. If list is empty, (no items within 240NM), **NO RESULTS** message is displayed. See § 3.7 for Information menu details. See Section 6 IFR Procedures for NRST Menu ILS step-by-step details. See Section 2 Display Symbology for symbology descriptions.

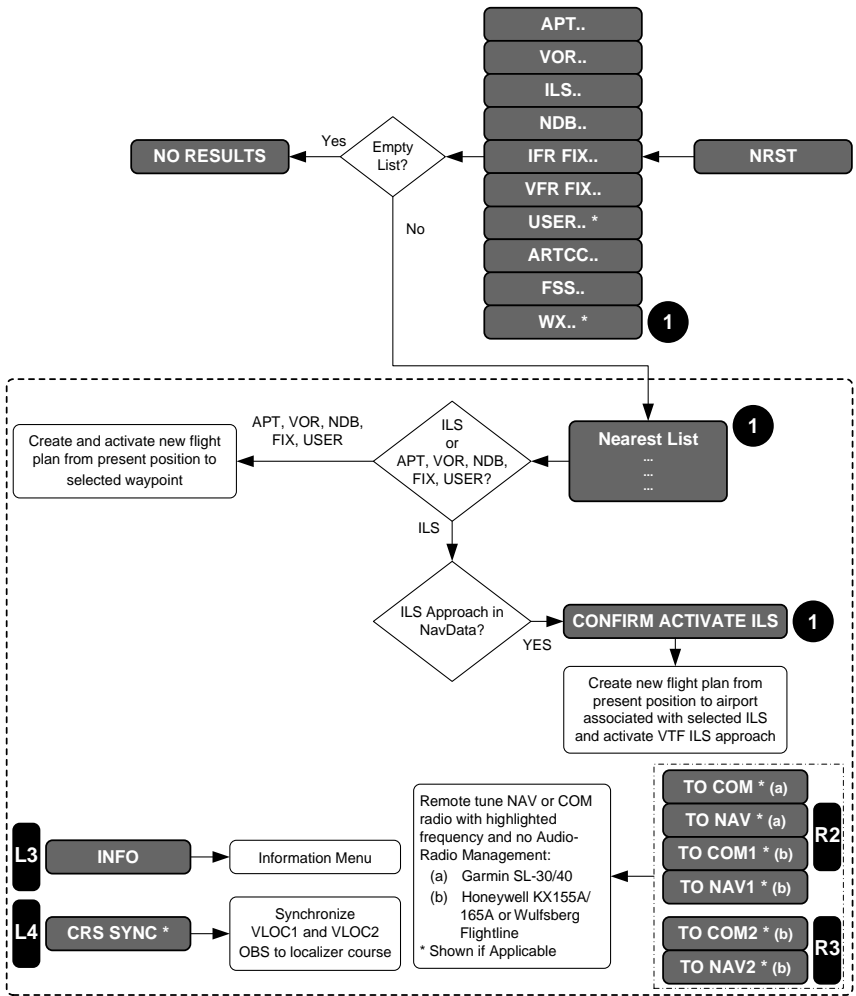


Figure 3-14: Nearest Menu

Table 3-8: Nearest (NRST) Menu Options

Menu	Limitations
<b>APT..</b>	Waypoint symbol airport ID, bearing/distance to airport/heliport, and tower frequency. Actual dimensions are not provided.
<b>VOR..</b>	Waypoint symbol, VOR ID, distance and current radial from VOR, and receiver frequency

Table 3-8: Nearest (NRST) Menu Options

Menu	Limitations
<b>ILS..</b>	ILS, airport identifier, runway, geodetic bearing to active runway threshold and distance, and localizer frequency (See Section 6 IFR Procedures for details.)
<b>NDB..</b>	Waypoint symbol, ID, geodetic bearing/distance to NDB, and frequency
<b>IFR FIX..</b>	Waypoint symbol, fix 5-digit ID, associated airport, and geodetic bearing/distance to fix
<b>VFR FIX..</b>	Waypoint symbol, fix long name, and geodetic bearing/distance to fix
<b>USER..</b>	If existing. Waypoint symbol, assigned name, and geodetic bearing/distance to user waypoint
<b>ARTCC..</b>	RX, TX, or RXTX symbol, facility name, geodetic bearing/distance to antenna, and frequency.
<b>FSS..</b>	RX, TX, or RXTX symbol, facility name, geodetic bearing/distance to antenna, and frequency.
<b>WX..</b>	Type of airport symbol, facility name, and geodetic bearing/distance to airport

Lengths and elevations are in feet.  
Distance is in either NM or KM depending upon EFIS setting limits.

### 3.12. Direct Menu

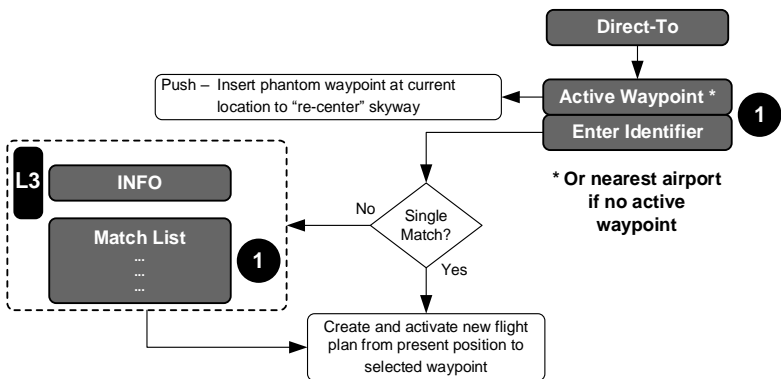


Figure 3-15: Direct Menu

Table 3-9: Direct Menu Options (Default Entry)

	Active Waypoint		Mode	Comments
	Yes	No		
Accepted		✓	Air	New active flight plan created from present position to selected waypoint *
		✓	Ground	A search is conducted for database airport/heliport within 6NM/11KM. If found, a new active flight plan is created from found airport to selected waypoint. **
	✓		Air or Ground	Prompted to confirm active waypoint. HITS are re-centered with direct routing to active waypoint.
Rejected	Enters waypoint characters		Air	EFIS searches for matching characters. If there is a single result, resulting action depends on air or ground mode.*
			Ground	**
No Results	Re-prompted to enter identifier		Air	If multiple results are presented, a selection list with matching identifiers is presented.*
			Ground	**

\* Results when in air mode for accepted entry.

\*\* Results when in the ground mode for accepted entry.

### 3.12.1. Direct Menu (Step-By-Step)

- 1) Press **➔ (R4)** to enter direct menu.
- 2) Active or nearest airport/heliport waypoint appears above **1** for selection as the active waypoint in the new active flight plan.
  - a) If **1** is rotated, a field appears beginning with "A" to enter the identifier for a new waypoint. Rotate and then press **1** to fill in all 5 spaces or press **SEARCH (R4)** after a minimum of 2 characters have been entered to open a list of matching waypoints.
- 3) Use **1** to enter and create a new active flight plan from the present aircraft position.



### 3.13. Time Menu

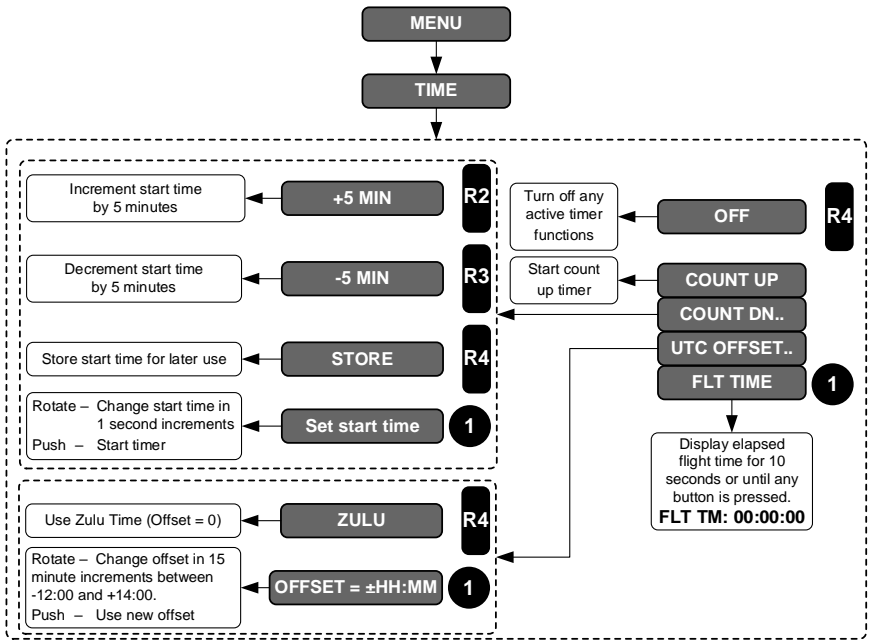


Figure 3-16: Time Menu

#### 3.13.1. Time Menu (Step-By-Step)

- 1) Press **MENU (R1)** and then **TIME (L4)** to enter Time menu.
- 2) Use **1** to select **COUNT UP**, or rotate to and then push to select and enter **COUNT DN..**, **UTC OFFSET..** (Time Zone), or **FLT TIME**.
- 3) If **COUNT UP** is selected, a timer appears on the PFI area below bank scale.
- 4) If **COUNT DN..** is selected, push **1** to enter.
- 5) Use **1** to enter the default 05:00 countdown timer. Press **+5 MIN (R2)** to increase or **-5 MIN (R3)** or decrease by 5-minute increments to set the countdown timer. (Maximum time is 59 minutes and 59 seconds.) Press **STORE (R4)** to store start time for later.
- 6) To set offset for local time, rotate **1** to **UTC OFFSET..** (time zone). Push to enter.
- 7) Rotate **1** to desired offset value (time zone). Push to enter. (This is the only place both Zulu and Local time are shown.) Local time now appears. The local time appears after a power cycle and initialization.



Upon activating the PFD source menu, an option list of sensor sources appears to select/deselect the following items if external switches are not configured through EFIS limits configuration:

- |          |                      |
|----------|----------------------|
| 1) ADC1  | 5) GPS1              |
| 2) ADC2  | 6) GPS2              |
| 3) AHRS1 | 7) Radar Altimeter 1 |
| 4) AHRS2 | 8) Radar Altimeter 2 |

### 3.14.1. Source Selection (Step-By-Step)

- 1) Press **MENU (R1)**, and then press **SOURCE (L2)**.
- 2) Use **⬅** to highlight desired source, push to select, rotate to **DONE** and then push to enter or press **EXIT (R1)**.

### 3.14.2. AHRS Slave/DG/Slew

If a Genesys ADAHRS is the selected AHRS and a DG/Slave input is not configured for that AHRS, **AHRS SLAVE/AHRS DG (R2)** toggles between the two AHRS modes. If in DG mode without slew inputs configured for the selected AHRS, press **AHRS SLEW (R3)** to adjust the DG mode slewing value.

### 3.15. PFD Bugs Menu

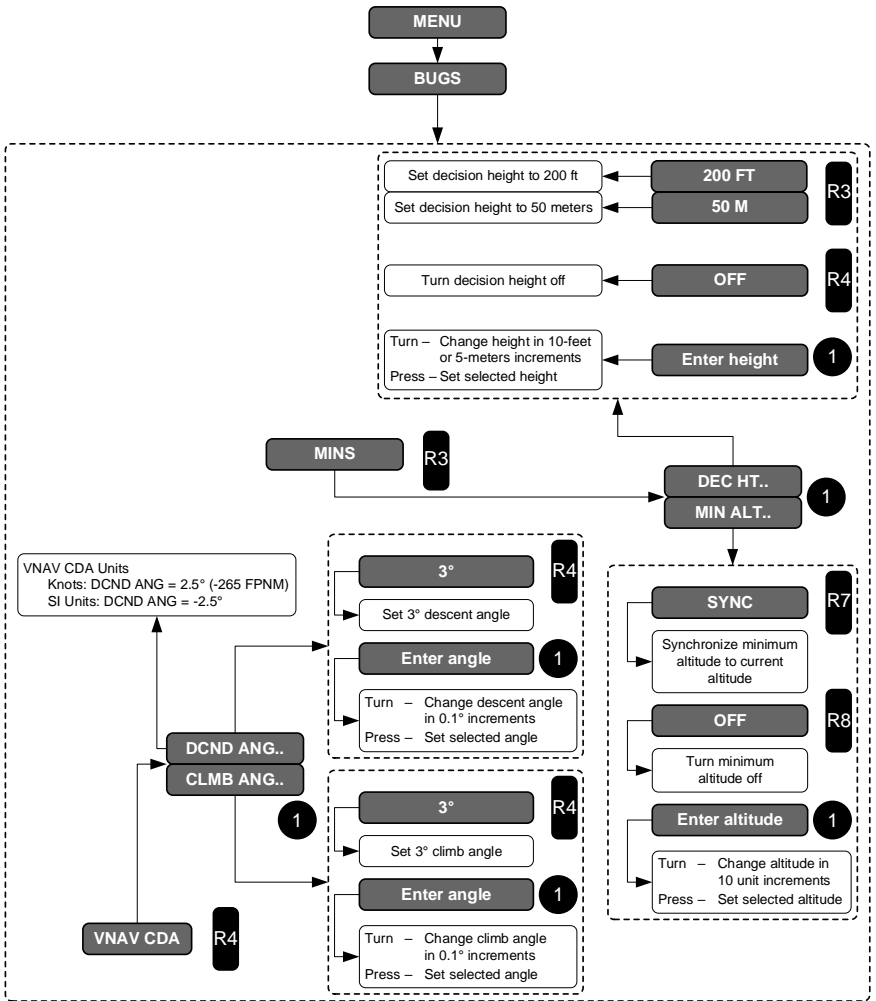


Figure 3-18: PFD Bugs Menu

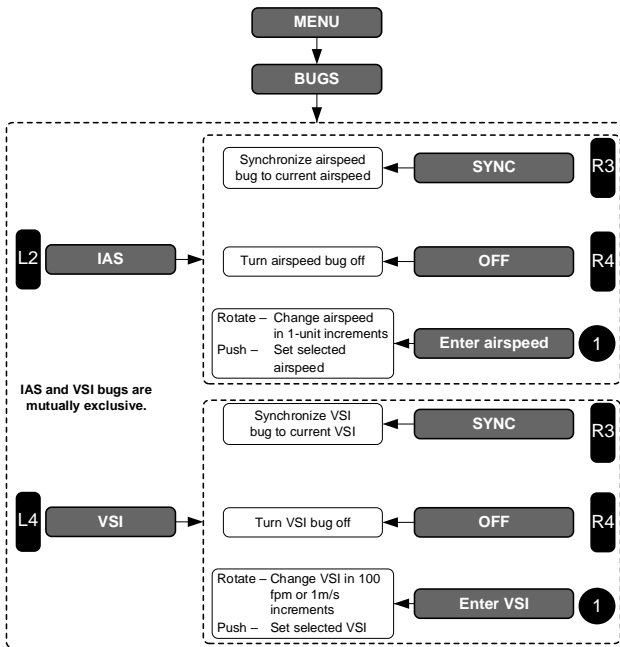


Figure 3-19: PFD Bugs Menu (Continued)


**NOTE:**

IAS and VSI bugs are mutually exclusive. Selecting one turns off the other.

### 3.15.1. PFD BUGS Menu (Step-By-Step)

Press **MENU (R1)**, within 10 seconds, press **BUGS (R2)** to enter the Bugs menu, then select one of the following options:


**NOTE:**

If an optional Remote Bugs Panel (RBP) is installed refer to the RBP appendix for instructions.

#### 3.15.1.1. Minimums

- 1) Press either **MINS (R3)** or **VNAV CDA (R4)**.
- 2) If **MINS (R3)** is pressed, push **1** to select **DEC HT..** or rotate **1** to **MIN ALT..** then push to enter.

- 3) If **DEC HT..** is pushed, rotate **1** to create new decision height in feet or meters in increments of 10 units (as set in EFIS limits) then push to enter.
- 4) Press **OFF (R4)** to turn off DH display.
- 5) If **MINS (R3)** is pressed, rotate **1** to select **MIN ALT..** then push to enter.
- 6) Use **1** to set desired barometric minimum altitude in feet or meters in increments of 10 units then push to enter.
- 7) Press **SYNC (R3)** to synchronize current altitude or **OFF (R4)** to turn off MIN ALT display.

### 3.15.1.2. VNAV Climb and Descent Angle

Selection brings up further action to select either climb angle or descent angle. Selecting either option allows the pilot to set the descent or climb angle in increments of 0.1°.

- 1) If **VNAV CDA (R4)** is pressed, push **1** to select **DCND ANG...** Rotate **1** to create the descent angle (from -0.1° to -20.0°).
- 2) Use **1** to set new descent angle and then push to enter. Press **3° (R4)** to select default or press **EXIT (R1)** to save changes and return to the top menu level.
- 3) If **CLMB ANG..** is pushed, rotate **1** to create the climb angle (from +0.1° to +20.0°), or press **3° (R4)** to set the default value.

### 3.15.1.3. Vertical Speed Bug

- 1) If **VSI (L4)** is pressed, press **SYNC (R3)** to synchronize VSI bug to current rate of climb or descent.
- 2) Press **OFF (R4)** to turn off existing VSI bug or rotate **1** to desired VSI climb or descent rate in fpm in increments of 100 fpm. Push to enter.

### 3.15.1.4. Indicated Airspeed Bug

- 1) Press **IAS (L2)**.
- 2) Press **SYNC (R3)** to synchronize IAS bug to current IAS, press **OFF (R4)** to turn off existing IAS bug, or use **1** to set desired IAS then push to enter.

### 3.16. PFD Declutter (DCLTR) Menu

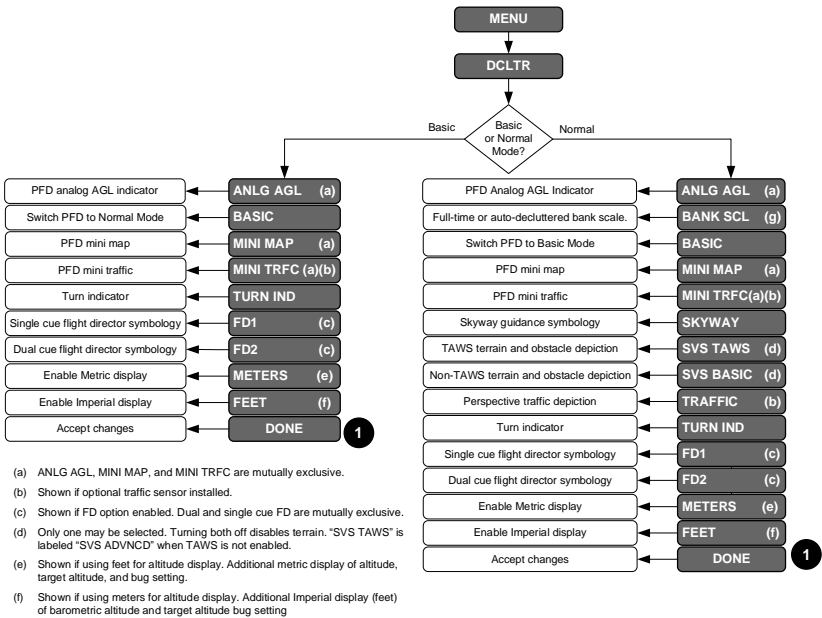


Figure 3-20: PFD Declutter Menu

#### 3.16.1. PFD DCLTR Menu (Step-By-Step)

- 1) Press **MENU (R1)** and then press **DCLTR (R4)** to enter Declutter menu.
- 2) Use **1** to highlight **ANLG AGL**, **ANLG G**, **BANK SCL**, **BASIC**, **MINI MAP**, **MINI TRFC**, **SKYWAY**, **SVS TAWS**, **SVS BASIC**, **TRAFFIC**, **TURN IND**, **FD1**, **FD2**, **FEET** (using meters for altitude), or **METERS** (using feet for altitude). Push to enter.
- 3) After ensuring desired options are checked, press **EXIT (R1)** or rotate **1** to **DONE** and then push to enter.
- 4) With both **SVS TAWS** and **SVS BASIC** deselected, the non-TAWS perspective terrain and obstacle depiction is displayed in the PFI area.
- 5) With **SVS BASIC** selected the PFI area terrain is colored in shades of brown.
- 6) With **SVS TAWS** selected, the PFI area TAWS perspective terrain and obstacle depiction are shown using color to show relationship to aircraft altitude with terrain colored in shades of olive when at or below 100' below the aircraft.
- 7) To save changes and exit menu, rotate **1** to **DONE** then push to enter or press **EXIT (R1)**.

### 3.17. Altimeter (BARO) Menu

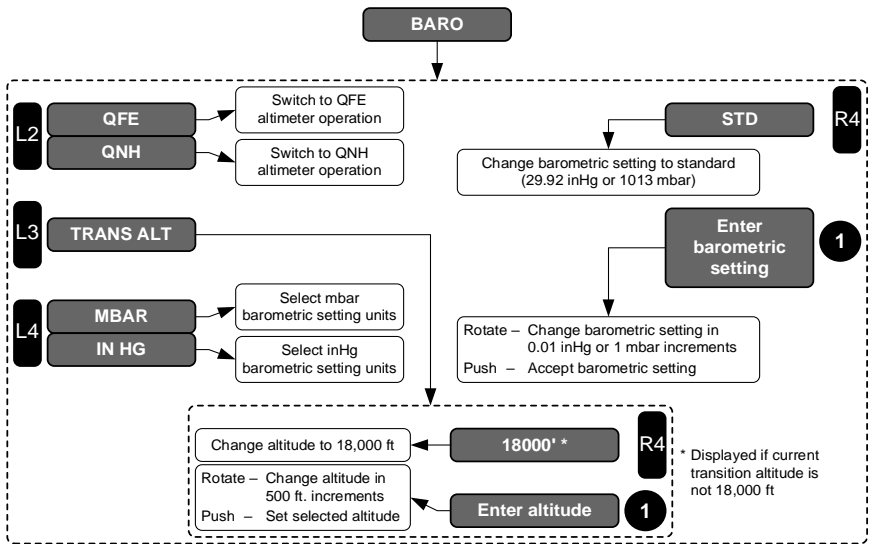



Figure 3-21: Altimeter Menu

#### 3.17.1. BARO Menu (Step-By-Step)

- 1) Press **BARO (R2)** to enter Altimeter menu.
- 2) Use **1** to set proper QNH and push to enter to save changes and return to the top menu level or press **EXIT (R1)**.
- 3) Repeat step 1. Press **TRANS ALT (L3)** to change transition altitude.
- 4) Use **1** to set desired transition altitude in 500' increments then push to enter or press **EXIT (R1)** to enter and exit **BARO** menu. Transition altitude is saved during subsequent shutdown and next initialization.
- 5) If current transition altitude is not 18,000', **18000 (R4)** appears for quick resetting.
- 6) With the **BARO** menu open, press **STD (R4)** to set QNH to standard 29.92 inHg or 1013 mbar then push **1** to accept change and return to the top menu level or press **EXIT (R1)**.





- 7) Readout of the current GPS/SBAS vertical protection level (GPS VPL) in meters.
- 8) Readout of the current GPS/SBAS horizontal figure of merit (GPS HFOM) in nautical miles. This value is an indication of the 95% confidence horizontal position accuracy.
- 9) Readout of the current GPS/SBAS vertical figure of merit (GPS VFOM) in meters. This value is an indication of the 95% confidence vertical position accuracy.
- 10) An indication of whether the GPS/SBAS receiver has a valid almanac in memory (GPS ALMANAC).
- 11) GPS/SBAS loss of navigation due to no valid SBAS message received for 4 seconds or more (SBAS MSG).  

- 12) GPS/SBAS loss of navigation due to insufficient number of SBAS HEALTHY satellites (SBAS HLTH).
- 13) If the WX-500 option is enabled, loss of communications with the WX-500 (WX-500).
- 14) If the traffic option is enabled, loss of communications with the traffic sensor (TRFC).
- 15) If the analog interface option is enabled, loss of communications with the analog interface (AIU).
- 16) If ADS-B datalink/traffic is enabled, an indication of ADS-B position validity (ADSB POSN), an indication of whether maintenance of the ADS-B receiver is required (ADSB MAINT) and an indication of whether the conflict situational awareness algorithm is working (ADSB CSA).
- 17) If weather radar is enabled, an indication of weather radar power/communication status (WXR PWR or WXR PWR OK). Weather radar power/communication status failed (WXR PWR X) reflects that any one of the following conditions are true:
  - a) Loss of weather radar communication not available or not accepted for more than 2 seconds.
  - b) Weather radar mode is OFF.
- 18) If weather radar is enabled, an indication of weather radar fault status (WXR FAULT -, WXR FAULT X, or WXR FAULT OK). When weather radar power/communication status is failed, weather radar fault status indicates that determination of weather radar faults is not possible (WXR FAULT -).

Weather radar fault status failed (WXR FAULT X) reflects that any one of the following conditions are true:

- a) A Cooling Fault Condition exists. Note that for Telephonics RDR-1600, this fault condition is ignored when the commanded mode is TEST.
  - b) For weather radar types ARINC 708-6 or Collins 800/840, a Display or Control Bus Fault Condition exists.
  - c) For weather radar types ARINC 708-6, Collins 800/840 or Honeywell PRIMUS, a Calibration or Air Data Fault Condition exists.
  - d) An Attitude or Range Fault Condition exists. Note that for Telephonics RDR-1600, Attitude Fault condition is indicated by Range Fault condition.
  - e) A Control Fault Condition exists.
  - f) A T/R Fault Condition exists.
- 19) If weather radar is enabled, the weather radar type is RDR-2000, RDR-2100 or RDR-1600 and an external radar control panel is installed, an indication of radar control panel status (WXR RCP X or WXR RCP OK). External radar control panel status failed (WXR RCP X) indicates either loss of communication or a failure status using the same test as invalid data.

### 3.18.1. Faults Menu (Step-By-Step)

Press **MENU (R1)**, within 10 seconds, press **FAULTS (L5) (PFD)/FAULTS (L1) (MFD)** to open the Faults menu to view the status of GPS and equipment parameters.

### 3.19. Fuel Totalizer Quantity Setting (SET FUEL) Menu

The Set Fuel menu allows the pilot to set the fuel totalizer quantity in increments of volume units. If either a fuel totalizer or fuel level sensing is configured in aircraft limits, set emergency and minimum fuel bugs in increments of volume units.

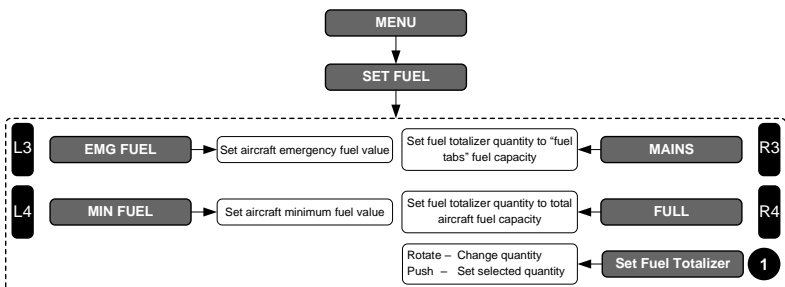


Figure 3-23: Totalizer Quantity Setting Menu



### 3.20. MFD Page Menu

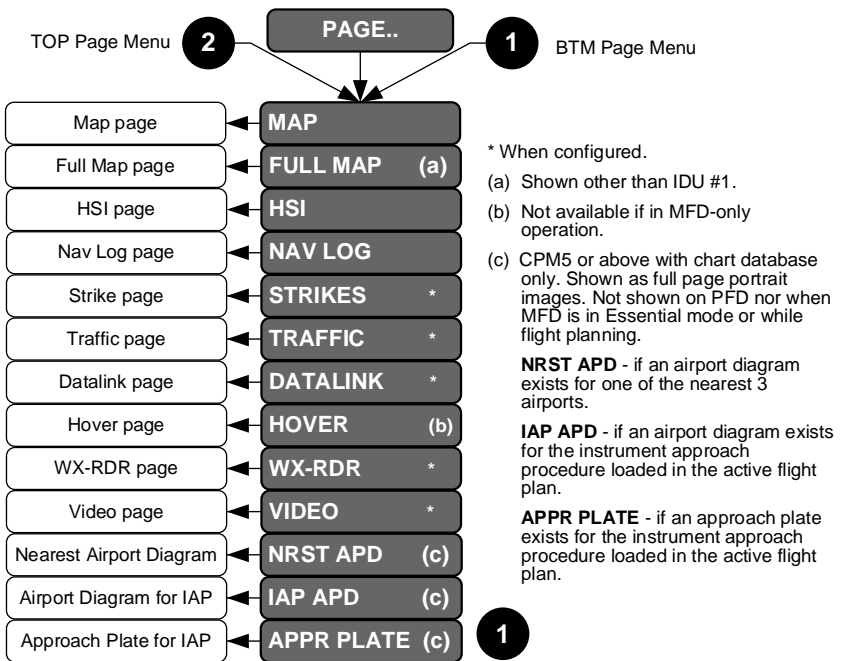


Figure 3-25: MFD Page Menu

#### 3.20.1. MFD Page Menu (Step-By-Step)

- 1) Push **TOP 2** or **BTM 1** to view options for MFD pages.
- 2) Use **2** or **1** to highlight **MAP, HSI, NAV LOG, STRIKES, TRAFFIC, DATALINK, HOVER, WX-RDR, VIDEO, NRST APD, IAP APD, APPR PLATE, or FULL MAP** and then push to enter.

### 3.21. MFD Map Page Format Menu

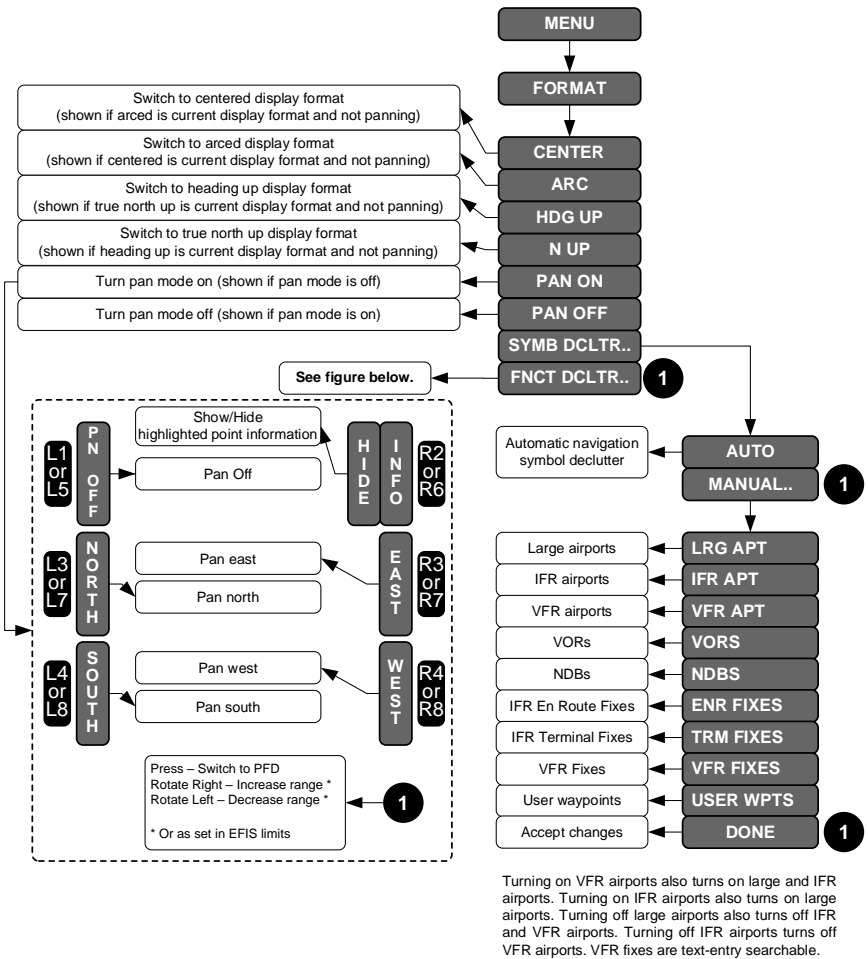


Figure 3-26: Map Page Format Menu

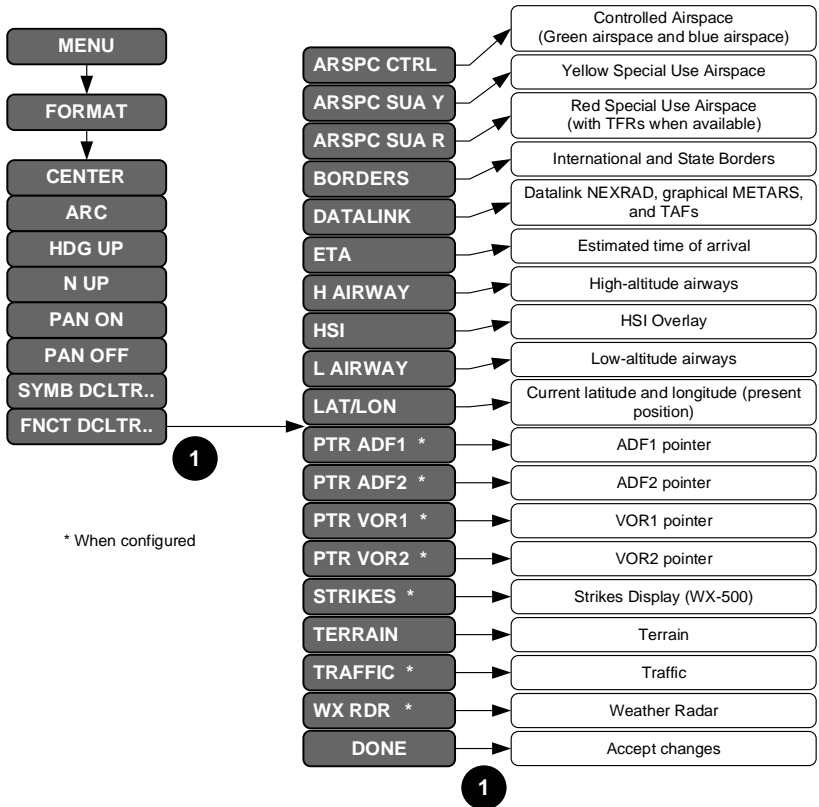


Figure 3-27: Map Page Format Menu (Continued)

### 3.21.1. Map Page Format (Step-By-Step)

#### 3.21.1.1. Changing MFD Page Orientation (PFD or MFD)

- 1) Press **MENU (R1)** and then press **FORMAT (R4)/(R8)**.
- 2) If in arc mode, use **1** to highlight **CENTER** then push to center display.
- 3) If in center mode, use **1** to highlight **ARC** then push to change back to arc mode.
- 4) If in heading up mode, use **1** to highlight **N UP** then push to change display to North Up orientation.
- 5) To enter pan mode, use **1** to highlight **PAN ON** then push to enter.
- 6) Use **NORTH (L3)/(L7)**, **SOUTH (L4)/(L8)**, **EAST (R3)/(R7)**, and **WEST (R4)/(R8)** to move the cursor. Bearing and distance appears when more than 0.5 NM away.

- 7) Press **INFO/HIDE (R2)/(R6)** to view or hide waypoint information.
- 8) To turn off pan mode, either press **PN OFF (L1)/(L5)** or **MENU (R1)**. Press **FORMAT (R4)/(R8)** and then push **1** to select **PAN OFF**.

### 3.21.1.2. Adding LAT/LON to MFD Map Page

- 1) Press **MENU (R1)**, press **FORMAT (R4)/(R8)**.
- 2) Use **1** to highlight **FNCT DCLTR..** then push to enter.
- 3) Use **1** to highlight **LAT/LON** then push to select. Use **1** to create USER WPT name and all fields including **APP BRG** if desired. Either press **SAVE (R7)** to save edited user waypoint or **➔ (R8)** to begin navigational guidance. Press **EXIT (R1)** to exit menu.

### 3.21.2. MFD Full Map Page (Step-By-Step) (MFD Only)

- 1) Push **TOP 2** or **BTM 1** and rotate to **FULL MAP** and then push to enter.
- 2) To format the full map, press **MENU (R1)**, within 10 seconds press **FORMAT (R4)**.



#### NOTE:

The MFD full Map page formatting is identical to the Map page Format menu except arc and center options are not available.

### 3.21.3. MFD Symbol and Function Declutter Options (Step-By-Step)

- 1) Press **MENU (R1)**, within 10 seconds, press **FORMAT (R4)/(R8)**. When on the full map page, only **FORMAT (R4)** appears.
- 2) Use **1** to highlight **FNCT DCLTR..** and push to enter.
- 3) Use **1** to highlight **ARSPC CTRL, ARSPC SUA Y, ARSPC SUA R, BORDERS, DATALINK, ETA, H AIRWAY, HSI, L AIRWAY, LAT/LON, PTR ADF1, PTR ADF2, PTR VOR1, PTR VOR2, STRIKES, TERRAIN, TRAFFIC,** or **WX RDR** then push to select.
- 4) To save changes and exit menu, use **1** to highlight **DONE** then push to enter, or press **EXIT (R1)** to save changes and exit menu.



### 3.21.4. MFD HSI Declutter (DCLTR) Menu

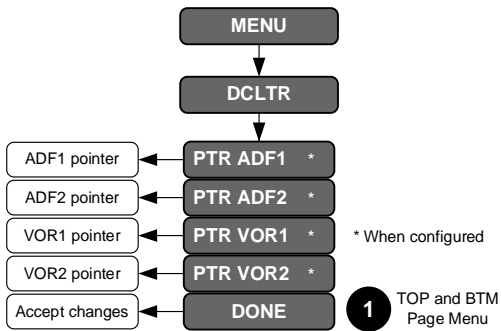


Figure 3-28: MFD HSI Declutter Menu

#### 3.21.4.1. DCLTR Menu (Step-By-Step)

- 1) Press **MENU (R1)**, within 10 seconds, and then press **DCLTR (R4)/(R8)** to enter Declutter menu.
- 2) Use **1** to highlight **PTR ADF1**, **PTR ADF2**, **PTR VOR1**, or **PTR VOR2** and then push to select. Rotate **1** to **DONE** and then push to enter or press **EXIT (R1)** to save changes and exit menu.

### 3.22. NAV LOG Page (PFD or MFD)

See Section 2 Display Symbology for more information.

#### 3.22.1. NAV LOG (Step-By-Step) (PFD or MFD)

- 1) Push **TOP 2** or **BTM 1** and rotate to **NAV LOG** and push to enter.
- 2) With NAV Log displayed, press **MENU (R1)**, within 10 seconds, and then press **PPOS OFF (R8)** to turn present position off.
- 3) Repeat step 1, press **PPOS ON (R8)** to turn on.
- 4) When the NAV Log is on the top area of an MFD, press **PPOS OFF/PPOS ON (R4)** to toggle.

### 3.23. Hover Page

See Section 2 Display Symbology for hover vector details.

#### 3.23.1. Hover Page (Step-By-Step) (PFD or MFD)

- 1) On the PFD push **BTM 1**. Rotate to **HOVER** and push to enter.
- 2) On the MFD, to view hover vector page on top, push **TOP 2** and rotate to **HOVER** and then push to enter.

- 3) On the MFD, to view hover vector page on the bottom, push **BTM 1** and rotate to **HOVER** and then push to enter.

### 3.24. Electronic Charts Page (MFD Only)

- 4) This option is available in certain areas with charts database loaded and a CPM-5 or above. With an instrument approach procedure loaded in the active flight plan, push **TOP 2** or **BTM 1** and then rotate **1** to **NRST APD**, **IAP APD**, or **APPR PLATE** and then push to enter.

## Section 4 Warning/Caution/Advisory System

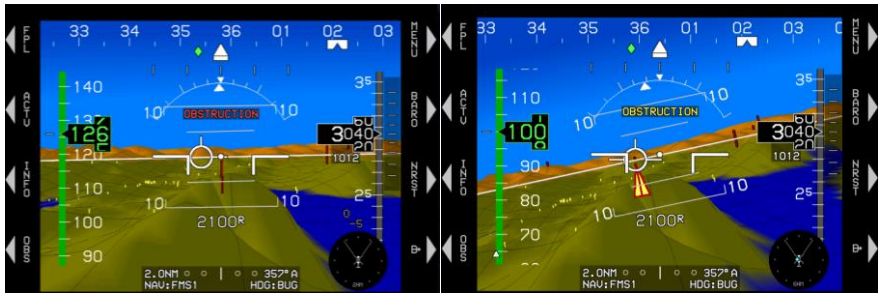
### 4.1. Warning/Caution/Advisory System

The IDU has an integrated audio/visual warning system, which monitors a wide variety of parameters and provides alerts for conditions that demand pilot action or awareness:

- 1) Warning Alerts
- 2) Time-Critical Warning Alerts
- 3) Time-Critical Caution Alerts
- 4) Master Visual and Audible/Voice Alerts
- 5) Caution Alerts
- 6) Advisory Alerts

All warnings, including time-critical warnings, activate the warning (red) light and master caution light. All cautions, including time-critical cautions, activate the caution (yellow) light and master caution light. Once acknowledged, the flashing behavior stops, the audio alert is interrupted, and the outputs are deactivated (as set in EFIS limits).

#### 4.1.1. Time-Critical Warning and Caution Alerts



Time-Critical Warning

Time-Critical Caution

Figure 4-1: Time-Critical Warning and Caution Alerts

Time-critical warning and caution alerts trigger the following elements (Table 4-1) and display in the pilot's primary field of view with a shaded background (Figure 4-1). EFIS limits may have enabled the option for time-critical alerts to illuminate a master warning/master caution push button annunciator when equipped.



#### NOTE:

The following examples show shaded backgrounds on sky and terrain backgrounds for readability.

Table 4-1: Time-Critical Warning and Caution Alerts in Primary Field of View





Alert Type	Text Color	Flash Rate	Audio Alert at Full Volume
 	Red	2 Hz	Repeated until acknowledged
 	Amber (Yellow)	1 Hz	Plays only once

Table 4-2: Time-Critical Warning and Caution Alerts








Visual Alert	Voice Alert	Condition ** No time delay
 	"Warning Obstruction, Warning Obstruction"	Obstruction within TAWS FLTA warning envelope. Half-second time delay.
 	"Warning, Terrain, Warning Terrain"	Terrain cell within HTAWS FLTA warning envelope. Half-second time delay.
 	"Terrain, Terrain, Pull Up, Pull Up"	Terrain cell within TAWS FLTA warning envelope. Half-second time delay. Within GPWS Mode 2 warning envelope. Half-second time delay.
	"Pull Up, Pull Up"	Within GPWS Mode 1 warning envelope. Half second time delay.
 	"Glide Slope, Glide Slope"	Within GPWS Mode 5 warning envelope. Half-second time delay.
 	"Traffic, Traffic"	Resolution advisory. Not given if own aircraft at or below 400' AGL nor if target is at or below 200' AGL (ground target). Audio not generated with TCAS-II. **
 	"Check Gear, Check Gear"	If enabled in EFIS limits, activates if aircraft is below or 150' AGL, is descending, and any landing gear is not down. 2-second time delay.
 	"Caution Terrain, Caution Terrain"	Terrain cell within TAWS FLTA caution envelope. Half-second time delay.
		Within GPWS Mode 2 caution envelope. Half-second time delay.
 	"Sink Rate, Sink Rate"	Within GPWS Mode 1 caution envelope. Half-second time delay.

Table 4-2: Time-Critical Warning and Caution Alerts

Visual Alert	Voice Alert	Condition ** No time delay
	"Too Low Terrain, Too Low Terrain"	Within GPWS Mode 3 envelope. Half-second time delay.
	"Too Low Gear, Too Low Gear"	Within GPWS Mode 4-1 "Too Low Terrain" envelope. Half-second time delay.
	"Glide Slope, Glide Slope"	Within GPWS Mode 5 caution envelope. Half-second time delay.
	"Caution Obstruction, Caution Obstruction"	Obstruction within TAWS FLTA caution envelope. Half-second time delay.
	"Traffic, Traffic"	Not given if own aircraft below 400' AGL nor if target is below 200'AGL (ground target). Audio not generated with TCAS-II system. **
	—	Horizon synchronization function is engaged. This annunciation does not flash or illuminate a master visual alert, because it is not really a caution but instead is a pilot selection annunciation.

Time-critical warning and caution alerts are prioritized so only one alert at a time is active.

- |                        |  |
|------------------------|--|
| 1) GPWS Mode 1 Warning | 10) GPWS Mode 2 Caution                      |
| 2) GPWS Mode 2 Warning | 11) GPWS Mode 3                              |
| 3) TAWS FLTA Warning   | 12) GPWS Mode 5 Warning                      |
| 4) Obstruction Warning | 13) GPWS Mode 5 Caution                      |
| 5) TAWS FLTA Caution   | 14) Check Gear                               |
| 6) Obstruction Caution | 15) Traffic Warning (Resolution<br>Advisory) |
| 7) GPWS Mode 4-1       | 16) Traffic Caution (Traffic Advisory)       |
| 8) GPWS Mode 4-2       |  |
| 9) GPWS Mode 1 Caution |  |

On IDU #0 (MFD only), the following time-critical warning and caution alerts appear in the lower left corner. See Table 4-2 for conditions and voice alerts.

- |                       |                       |
|-----------------------|-----------------------|
| 1) <b>OBSTRUCTION</b> | 7) <b>OBSTRUCTION</b> |
| 2) <b>TERRAIN</b>     | 8) <b>TRAFFIC</b>     |
| 3) <b>PULL UP</b>     | 9) <b>TERRAIN</b>     |
| 4) <b>GLIDESLOPE</b>  | 10) <b>SINK RATE</b>  |
| 5) <b>TRAFFIC</b>     | 11) <b>TOO LOW</b>    |
| 6) <b>CHECK GEAR</b>  | 12) <b>GLIDESLOPE</b> |

#### 4.1.2. Warning Alerts

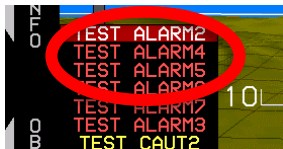


Figure 4-2: Warning Alerts

Table 4-3: Warning Alert Elements

Type Alert	Location	Flash Rate	Audio Alert
<b>WARNING</b> <b>WARNING</b>	PFD lower left corner of transmit-enabled IDU	2 Hz	Repeated until acknowledged
Master Visual Alert	Amber (Yellow) warning light	1 Hz	Repeated until acknowledged

Table 4-4: Warning Alerts

Visual Alert	Voice Alert	Condition ** No time delay
<b>LOW FUEL</b>	"Fuel Low, Fuel Low"	<p>One of the following conditions is true:</p> <ol style="list-style-type: none"> <li>1) A low fuel warning is active (EFIS limits)</li> <li>2) One of the sensed fuel tank quantities is below its low fuel warning threshold</li> <li>3) Total aircraft fuel is below the pilot-set emergency fuel threshold</li> </ol> <p>1-minute time delay.</p>

### 4.1.3. Caution Alerts



Figure 4-3: Caution Alerts

Table 4-5: Caution Alert Elements

Type Alert	Location	Flash Rate	Audio Alert
<b>CAUTION</b> <b>CAUTION</b>	PFD lower left corner of transmit-enabled IDU	1 Hz	Plays only once at full volume

Table 4-6: Caution Alerts

Visual Alert	Voice Alert/ Alert Tone	Condition
--------------	----------------------------	-----------

\*\* No time delay

[1] Only active in dual-sensor installation with neither sensor in failure condition

[2] Only active in two-sided system (pilot and co-pilot)

[3] Only active when single-pilot mode configuration not asserted

[4] Only active when CAUTION mode is enabled

<b>TAWS AUTOROT</b>	Alert Tone	TAWS autorotation mode activated through external switch. **
<b>ADC1 FAIL</b> <b>ADC2 FAIL</b> <b>ADC1/2 FAIL</b>	Alert Tone	Indicates no valid IAS, pressure altitude, nor VSI received from numbered ADC(s) for more than 1 second. ** [1]
<b>ADS-B FAIL</b>	Alert Tone	Mode-S transponder indicates bad ADS-B out status. 2-second time delay. Also, set by audio/radio interface with NGT-9000R transponder. 2-second time delay.
<b>ADS-B DGRD</b>	Alert Tone	ADS-B Out Degraded is active when audio-radio is configured. Indicates the ADS-B Out functionality of the interfaced transponder is degraded. Active when interfaced transponder supports ADS-B, transponder communication is not failed and the transponder status indicates ADS-B Out is degraded. 5-minute time delay.

Table 4-6: Caution Alerts

Visual Alert	Voice Alert/ Alert Tone	Condition
<p>** No time delay</p>		
<p><sup>[1]</sup> Only active in dual-sensor installation with neither sensor in failure condition</p>		
<p><sup>[2]</sup> Only active in two-sided system (pilot and co-pilot)</p>		
<p><sup>[3]</sup> Only active when single-pilot mode configuration not asserted</p>		
<p><sup>[4]</sup> Only active when CAUTION mode is enabled</p>		
		<p>When interfaced with a dual transponder, the feedback received from the currently selected transponder is used for indicating the failure.</p> <p>ADS-B Datalink Degraded is active when the installed ADS-B Datalink System indicates invalid position data or receiver maintenance required. 5-second time delay. Invalid position data is ignored during and for 10 seconds after unusual attitude mode (position failure is expected during unusual attitudes due to antenna blocking).</p> <p><b>ADS-B FAIL</b> or <b>XPDR FAIL</b> caution has priority over this message.</p>
<p><b>AHRS1 FAIL</b> <b>AHRS2 FAIL</b> <b>AHRS1/2 FAIL</b></p>	<p>Alert Tone</p>	<p>Indicates no valid bank, pitch, nor heading received from enumerated AHRS(s) for more than 1 second. Inhibited during and for 10 seconds after unusual attitude mode. ** <sup>[1]</sup></p>
<p><b>AIU FAIL</b></p>	<p>Alert Tone</p>	<p>Only active when Aux Sensor Caution Split is not asserted in EFIS limits. No valid message received from installed Analog Interface System for more than 2 seconds. Sensor status also displayed in FAULTS menu. 5-second time delay.</p>
<p><b>AUX SENSOR</b></p>	<p>“Auxiliary Sensor Failure, Auxiliary Sensor Failure”</p>	<p>Only active when Aux Sensor Caution Split is not asserted in EFIS limits. AUX SENSOR is a collector message for the following:</p> <ol style="list-style-type: none"> <li>1) AIU Failure;</li> <li>2) Data Link Failure (non-ADS-B);</li> <li>3) Strikefinder Failure;</li> <li>4) TCAD/TAS System Failure; and</li> </ol>



Table 4-6: Caution Alerts

Visual Alert	Voice Alert/ Alert Tone	Condition
<p>** No time delay</p>		
<p><sup>[1]</sup> Only active in dual-sensor installation with neither sensor in failure condition</p>		
<p><sup>[2]</sup> Only active in two-sided system (pilot and co-pilot)</p>		
<p><sup>[3]</sup> Only active when single-pilot mode configuration not asserted</p>		
<p><sup>[4]</sup> Only active when CAUTION mode is enabled</p>		
		<p>5) Weather Radar Failure.</p> <p>“Collector message” means that when the conditions for any of the above messages are met, this message will appear instead. Status of the above auxiliary sensors can be viewed in the Faults menu. 5-second time delay.</p>
<p><b>BEEP FAIL</b></p>	<p>Alert Tone</p>	<p>Only when Genesys Helicopter Autopilot is configured. Indicates beep trim failed. **</p>
<p><b>PLT1 OVRTMP</b> <b>PLT2 OVRTMP</b> <b>PLT3 OVRTMP</b> <b>PLT4 OVRTMP</b> <b>CPLT1 OVRTMP</b> <b>CPLT2 OVRTMP</b> <b>CPLT3 OVRTMP</b> <b>CPLT4 OVRTMP</b></p>	<p>Alert Tone</p>	<p>IDU core temperature greater than 95°C. 2-second time delay.</p>
<p><b>PLT MISCOMP</b> <b>CPLT MISCOMP</b></p>	<p>Alert Tone</p>	<p>Only when fresh intra-system monitor messages are received. Indicates critical parameters used by displays on the indicated side exceed miscompare thresholds. Compares the following critical parameters:</p> <ol style="list-style-type: none"> <li>1) Attitude (pitch and roll)</li> <li>2) Heading</li> <li>3) Pressure altitude</li> <li>4) Indicated airspeed</li> <li>5) Localizer (both inputs)</li> <li>6) Glide slope (both inputs)</li> <li>7) Radar altitude</li> </ol>

Table 4-6: Caution Alerts

Visual Alert	Voice Alert/ Alert Tone	Condition
** No time delay		
<sup>[1]</sup> Only active in dual-sensor installation with neither sensor in failure condition		
<sup>[2]</sup> Only active in two-sided system (pilot and co-pilot)		
<sup>[3]</sup> Only active when single-pilot mode configuration not asserted		
<sup>[4]</sup> Only active when CAUTION mode is enabled		
		8) Latitude 9) Longitude 10) Track 11) Ground speed  3-second time delay. Inhibited during and for 10 seconds after unusual attitude mode. <sup>[2]</sup>
<div style="border: 1px solid black; padding: 2px; text-align: center;"><b>PLT RANGE</b></div> <div style="border: 1px solid black; padding: 2px; text-align: center;"><b>CPLT RANGE</b></div>	"Check Range, Check Range"	Based on flight plan in use on indicated side, less than 30 minutes buffer (at current ground speed) between calculated range and distance to: <ol style="list-style-type: none"> <li>1) last waypoint if it is active; or</li> <li>2) airport if on a missed approach; or</li> <li>3) along-route distance to destination.</li> </ol> Not activated in climbing flight nor if below 60 knots ground speed. 5-minute time delay.
<div style="border: 1px solid black; padding: 2px; text-align: center;"><b>GPS1 FAIL</b></div> <div style="border: 1px solid black; padding: 2px; text-align: center;"><b>GPS2 FAIL</b></div> <div style="border: 1px solid black; padding: 2px; text-align: center;"><b>GPS1/2 FAIL</b></div>	Alert Tone	Indicates no valid message received from numbered GPS/SBAS for more than 5 seconds. ** Inhibited during and for 10 seconds after unusual attitude mode.
<div style="border: 1px solid black; padding: 2px; text-align: center;"><b>ALT MISCOMP</b></div>	Alert Tone	Indicates pressure altitude difference between ADCs is beyond limits. 10-second time delay. Inhibit for 5 minutes after ground-startup. <sup>[1]</sup>
<div style="border: 1px solid black; padding: 2px; text-align: center;"><b>ATT MISCOMP</b></div>	Alert Tone	Indicates pitch or roll difference between AHRS is beyond limits (6°). 10-second time delay. Inhibit for 5 minutes after ground-startup. <sup>[1]</sup>

Table 4-6: Caution Alerts

Visual Alert	Voice Alert/ Alert Tone	Condition
** No time delay		
<sup>[1]</sup> Only active in dual-sensor installation with neither sensor in failure condition		
<sup>[2]</sup> Only active in two-sided system (pilot and co-pilot)		
<sup>[3]</sup> Only active when single-pilot mode configuration not asserted		
<sup>[4]</sup> Only active when CAUTION mode is enabled		
<b>PLT1 SCC</b> <b>PLT2 SCC</b> <b>PLT3 SCC</b> <b>PLT4 SCC</b> <b>CPLT1 SCC</b> <b>CPLT2 SCC</b> <b>CPLT3 SCC</b> <b>CPLT4 SCC</b>	Alert Tone	Indicates personality module for designated IDU (side and IDU #) could not be read upon power-up. Internal limits are in use by the system. Only active on the ground.
<b>PLT1 TAWS</b> <b>PLT2 TAWS</b> <b>PLT3 TAWS</b> <b>PLT4 TAWS</b> <b>CPLT1 TAWS</b> <b>CPLT2 TAWS</b> <b>CPLT3 TAWS</b> <b>CPLT4 TAWS</b>	Alert Tone	Indicates on the designated IDU (side and IDU #), aircraft is currently beyond extent of terrain database, or a failure condition is preventing TAWS FLTA function from operating. Half-second time delay. Inhibited during and for 10 seconds after unusual attitude mode.
<b>COOLING FAN</b>	Alert Tone	Triggered when external cooling fan is commanded by EFIS limits, but the cooling fan status indicates the cooling fan is not rotating. 1-minute time delay.
<b>FUEL SPLIT</b>	Alert Tone	Compares volume of fuel designated left wing tank fuel vs. right wing tank fuel to fuel split caution threshold. Issued if the difference exceeds fuel split caution threshold. Only performed if the fuel split caution threshold is non-zero and both left and right wing tank fuel is monitored and valid. 1-minute time delay.
<b>LOW FUEL</b>	"Fuel Low, Fuel Low"	Low fuel warning is not active and one of the following conditions is true: 1) One of the low fuel caution inputs (as set in EFIS limits) is active.

Table 4-6: Caution Alerts

Visual Alert	Voice Alert/ Alert Tone	Condition
<p>** No time delay</p>		
<p><sup>[1]</sup> Only active in dual-sensor installation with neither sensor in failure condition</p>		
<p><sup>[2]</sup> Only active in two-sided system (pilot and co-pilot)</p>		
<p><sup>[3]</sup> Only active when single-pilot mode configuration not asserted</p>		
<p><sup>[4]</sup> Only active when CAUTION mode is enabled</p>		
		<p>2) A sensed fuel tank quantity is below its low fuel caution threshold.</p> <p>3) Total aircraft fuel is below the pilot-set minimum fuel threshold.</p> <p>1-minute time delay.</p>
<p><b>GPS MISCOMP</b></p>	<p>Alert Tone</p>	<p>Indicates position, track, or ground speed difference between GPS/SBAS units is beyond the following limits:</p> <p>Position:</p> <p style="padding-left: 40px;">En route Mode 4NM</p> <p style="padding-left: 40px;">Terminal Mode 2NM</p> <p style="padding-left: 40px;">Departure Mode .6NM</p> <p style="padding-left: 40px;">IFR Approach Mode .6NM</p> <p style="padding-left: 40px;">VFR Approach Mode .6NM</p> <p>Track: If ground speed is greater than 30 kts, miscompare if difference is more than 4°.</p> <p>Ground speed: If difference between GPS#1 and GPS#2 miscompare is more than 10 kts.</p> <p>10-second time delay. Inhibited during and for 10 seconds after unusual attitude mode. <sup>[1]</sup></p>
<p><b>GS MISCOMP</b></p>	<p>Alert Tone</p>	<p>Indicates at least one glide slope is receiving a signal within 1 dot of center and difference between glide slope signals is beyond limits (0.25 dots). 10-second time delay. <sup>[1]</sup></p>
<p><b>HDG FAIL</b></p> <p><b>HDG1 FAIL</b></p> <p><b>HDG2 FAIL</b></p> <p><b>HDG1/2 FAIL</b></p>	<p>Alert Tone</p>	<p>“HDG FAIL” applicable to single AHRS installation. “HDG# FAIL” applicable to dual AHRS installation. Indicates heading is invalid, but other AHRS data parameters are</p>

Table 4-6: Caution Alerts

Visual Alert	Voice Alert/ Alert Tone	Condition						
** No time delay								
<sup>[1]</sup> Only active in dual-sensor installation with neither sensor in failure condition								
<sup>[2]</sup> Only active in two-sided system (pilot and co-pilot)								
<sup>[3]</sup> Only active when single-pilot mode configuration not asserted								
<sup>[4]</sup> Only active when CAUTION mode is enabled								
		normal (i.e., attitude is not Red-X'd). Half-second time delay. <sup>[1]</sup>						
<b>HDG MISCOMP</b>	Alert Tone	With neither AHRS failed nor in DG mode, indicates heading difference between AHRS is beyond the heading miscompare threshold limit. 10-second delay. Inhibited during and for 10 seconds after unusual attitude mode. Inhibit for 5 minutes after ground-startup. <sup>[1]</sup>						
<b>IAS MISCOMP</b>	Alert Tone	With neither ADC failed, indicates IAS difference between ADCs is beyond limits. 10-second time delay. Inhibit for 5 minutes after ground-startup. <sup>[1]</sup>						
<b>LOC MISCOMP</b>	Alert Tone	Indicates at least one localizer is receiving a signal within 1 dot of center and difference between localizer signals is beyond limits (0.25 dots). 10-second time delay. <sup>[1]</sup>						
<b>RALT MISCOMP</b>	Alert Tone	Only in dual-radar altimeter installation with neither failed. Indicates radar altitude difference between radar altimeters is beyond the following limits: <table style="margin-left: 20px;"> <tr> <td>≥ 500' AGL</td> <td>Δ14%</td> </tr> <tr> <td>100 – 500' AGL</td> <td>Δ10%</td> </tr> <tr> <td>&lt; 100' AGL</td> <td>Δ10'</td> </tr> </table> 10-second time delay. <sup>[1]</sup>	≥ 500' AGL	Δ14%	100 – 500' AGL	Δ10%	< 100' AGL	Δ10'
≥ 500' AGL	Δ14%							
100 – 500' AGL	Δ10%							
< 100' AGL	Δ10'							
<b>OAT FAIL</b>	Alert Tone	OAT FAIL applicable to single ADC installation. OAT# FAIL applicable to dual ADC installation. Indicates OAT indication is invalid but other air data parameters are normal (i.e., air data is not red-X'd). Half-second time delay. <sup>[1]</sup>						
<b>OAT1 FAIL</b>								
<b>OAT2 FAIL</b>								
<b>OAT1/2 FAIL</b>								

Table 4-6: Caution Alerts

Visual Alert	Voice Alert/ Alert Tone	Condition
** No time delay [1] Only active in dual-sensor installation with neither sensor in failure condition [2] Only active in two-sided system (pilot and co-pilot) [3] Only active when single-pilot mode configuration not asserted [4] Only active when CAUTION mode is enabled		
<b>RALT FAIL</b> <b>RALT1 FAIL</b> <b>RALT2 FAIL</b> <b>RALT1/2 FAIL</b>	Alert Tone	RALT FAIL applicable to single-radar altimeter installation. RALT# FAIL applicable to dual radar altimeter installation. For analog radar altimeter, indicates aircraft is below 2000' AGL in air mode without a valid radar altimeter reading. 2-second time delay. [1]
<b>SAME ADC</b>	Alert Tone	Indicates both sides are operating from same ADC source. ** [1][4]
<b>SAME AHRS</b>	Alert Tone	Indicates both sides are operating from same AHRS source. ** [1][4]
<b>SAME DME</b>	Alert Tone	Indicates both sides are operating from same DME source ** [1][3][4]
<b>SAME GPS</b>	Alert Tone	Indicates both sides are operating from same GPS/SBAS source. **[1][2][3][4]
<b>SAME NAV</b>	Alert Tone	Indicates both sides are operating from same navigation source. **[1][2][3][4]
<b>SAME RALT</b>	Alert Tone	Indicates both sides are operating from same radar altimeter source. **[1][2][3][4]
<b>SSEC FAIL</b> <b>SSEC1 FAIL</b> <b>SSEC2 FAIL</b> <b>SSEC1/2 FAIL</b>	Alert Tone	SSEC FAIL applicable to single ADC installation. SSEC# FAIL applicable to dual ADC installation. Indicates that either: 1) Genesys Aerosystems ADC is not transmitting SSEC-corrected data on an airframe that requires SSEC; or 2) There is a mismatch greater than or equal to 50µmHg between the SSEC being calculated by the IDU and the SSEC being used by the ADC.  Inhibited if the related ADC is in a failed condition. 1-minute time delay.
<b>STRK FAIL</b>	Alert Tone	Only active when Aux Sensor Caution Split is asserted. No valid message received from

Table 4-6: Caution Alerts

Visual Alert	Voice Alert/ Alert Tone	Condition
** No time delay		
<sup>[1]</sup> Only active in dual-sensor installation with neither sensor in failure condition		
<sup>[2]</sup> Only active in two-sided system (pilot and co-pilot)		
<sup>[3]</sup> Only active when single-pilot mode configuration not asserted		
<sup>[4]</sup> Only active when CAUTION mode is enabled		
		installed Strikefinder system for more than 4 seconds. Sensor status also displayed in FAULTS menu. 5-second time delay.
<b>TAWS INHBT</b>	Alert Tone	TAWS inhibited through use of external switch. **
<b>TCAS FAIL</b>	Alert Tone	Only with ARINC 735A-1 TCAS-II, TCAS-I, or TAS. Indicates lack of communications with system or failure indication from system. **
<b>TRFC FAIL</b>	Alert Tone	Only active when Aux Sensor Caution Split is asserted. No valid message received from installed RS-232 TCAD/TAS System or ADS-B TIS-B System for more than 2 seconds. Sensor status also displayed in FAULTS menu. 5-second time delay.
<b>WXR FAIL</b>	Alert Tone	Only active when Aux Sensor Caution Split is asserted. Weather radar faults received from installed weather radar. Weather radar status not received from installed weather radar for more than 2 seconds. Radar control panel faults received from installed weather radar for more than 2 seconds. Sensor status also displayed in FAULTS menu. 5-second time delay.
<b>TOTALZR QTY</b>	Alert Tone	Compares volume of sensed fuel to fuel totalizer calculation. Issued if difference exceeds totalizer mismatch caution threshold. Only performed if: <ol style="list-style-type: none"> <li>1) Totalizer mismatch caution threshold is non-zero;</li> <li>2) Fuel totalizer is enabled;</li> <li>3) Unmonitored fuel flag is false;</li> <li>4) Fuel totalizer has a valid value; and</li> </ol>

Table 4-6: Caution Alerts

Visual Alert	Voice Alert/ Alert Tone	Condition
** No time delay		
<sup>[1]</sup> Only active in dual-sensor installation with neither sensor in failure condition		
<sup>[2]</sup> Only active in two-sided system (pilot and co-pilot)		
<sup>[3]</sup> Only active when single-pilot mode configuration not asserted		
<sup>[4]</sup> Only active when CAUTION mode is enabled		
		5) Fuel levels are valid. 1-minute time delay.
<b>XFILL FAIL</b>	Alert Tone	Only active in dual-side system (pilot and co-pilot) when single-pilot mode is not enabled in EFIS limits. Indicates lack of inter-system communications. 32-second time delay <sup>[2][3]</sup>
<b>XPDR FAIL</b>	Alert Tone	Only applies to the Collins TDR-94 Mode-S Transponder. Indicates the interfaced transponder reports internal failure.

#### 4.1.4. Side-Specific Caution Alerts

Side-specific caution alerts are displayed on all IDUs on the side that detects the failure.

Table 4-7: Side-Specific Caution Alerts

Visual Alert	Alert Tone	Condition ** No time delay
<b>CHECK IDU1</b>	Alert Tone	IDU status has not been received from another same-side IDU in the last second ±0.1 seconds. # indicates which IDU is failing the check. **
<b>CHECK IDU2</b>		
<b>CHECK IDU3</b>		
<b>CHECK IDU4</b>		

#### 4.1.5. Advisory Alerts



Figure 4-4: Advisory Alerts



Table 4-8: Advisory Alert Elements

Type Alert	Location	Appearance	Audio Alert
<b>ADVISORY</b>	PFD lower left corner of transmit-enabled IDU	While condition persists	Single advisory chime played at 80% volume

Table 4-9: Advisory Alerts

Visual Alert	Alert Tone	Condition
--------------	------------	-----------

\*\* No time delay

<sup>[1]</sup> Only active in dual-sensor installation with neither sensor in failure condition

<sup>[2]</sup> Only active in two-sided system (pilot and co-pilot)

<sup>[3]</sup> Only active when single-pilot mode is not enabled in EFIS limits

<sup>[4]</sup> Only active when CAUTION mode is not enabled

<b>ADC INIT</b>	Chime	"ADC INIT" applicable to single ADC installation. "ADC# INIT" applicable to dual ADC installation. Indicates ADC not at full accuracy during warm-up. ** <sup>[1]</sup>
<b>ADC1 INIT</b>		
<b>ADC2 INIT</b>		
<b>ADC1/2 INIT</b>		
<b>AHRS1 DG</b>	Chime	Indicates numbered AHRS in DG mode. ** <sup>[1]</sup>
<b>AHRS2 DG</b>		
<b>AHRS1/2 DG</b>		
<b>PLT1 PWR</b>		
<b>PLT2 PWR</b>	Chime	Indicates a dual redundant power supply within the designated IDU (side and IDU #) is not functioning correctly. Only active on the ground. 1-minute time delay. <sup>[2]</sup>
<b>PLT3 PWR</b>		
<b>PLT4 PWR</b>		
<b>CPLT1 PWR</b>		
<b>CPLT2 PWR</b>		
<b>CPLT3 PWR</b>		
<b>CPLT4 PWR</b>		
<b>FPM INHBT</b>		
<b>BARO MISCOMP</b>	Chime	Indicates mismatch of altimeter settings or altimeter modes between sides. 10-second time delay. <sup>[2][3]</sup>
<b>TAWS LOW ALT</b>	Chime	TAWS low altitude mode activated through use of external switch input. **
<b>SAME ADC</b>	Chime	Indicates both sides are operating from same ADC source. ** <sup>[1][4]</sup>
<b>SAME AHRS</b>	Chime	Indicates both sides are operating from same AHRS source. ** <sup>[1][4]</sup>

Table 4-9: Advisory Alerts

Visual Alert	Alert Tone	Condition
** No time delay [1] Only active in dual-sensor installation with neither sensor in failure condition [2] Only active in two-sided system (pilot and co-pilot) [3] Only active when single-pilot mode is not enabled in EFIS limits [4] Only active when CAUTION mode is not enabled		
<b>SAME DME</b>	Chime	Indicates both systems are operating from same DME source ** [1][3][4]
<b>SAME GPS</b>	Chime	Indicates both sides are operating from same GPS/SBAS source. ** [1][2][3][4]
<b>SAME NAV</b>	Chime	Indicates both sides are operating from same navigation source. ** [1][2][3][4]
<b>SAME RALT</b>	Chime	Indicates both sides are operating from same radar altimeter source. ** [1][2][3][4]
<b>TAS INHBT</b>	Chime	TAS audible inhibited through activation of TCAS/TAS audio inhibit EFIS limits. **
<b>TAWS GS CNX</b>	Chime	Class A TAWS and Enhanced HTAWS only. TAWS glide slope cancel (GPWS Mode 5) activated through external switch input. **
<b>TCAS STBY</b>	Chime	Only with TCAS-II. Indicates system is in standby or executing functional test in flight. **
<b>TA ONLY</b>	Chime	Only with TCAS-II. Indicates TCAS-II is unable to display resolution advisories. **
<b>TCAS TEST</b>	Chime	Only with TCAS-II. Indicates system is in functional test on ground. **
<b>XFILL ARM</b>	Chime	Only in dual-sided system with good inter-system communications and crossfill not inhibited. Indicates sides are not synchronized and synchronization function is available. ** [2][3]
<b>XFILL INHBT</b>	Chime	Only in dual-sided system with good inter-system communications. Indicates crossfill is manually inhibited through external switch input. ** [2][3]

#### 4.1.6. Side-Specific Advisory Alerts

Side-specific advisory alerts have the same characteristics as advisory alerts except they always appear in the lower-left corner of the transmit-enabled IDU PFI (PFI showing) or lower-left corner of the transmit-enabled IDU bottom area (MFD in reversionary mode with PFI not showing).

These types of alerts are used where the pilot and co-pilot systems can generate different alerts, such as when the pilot and co-pilot systems are not crossfilled and are operating on different FMS flight plans.

Table 4-10: Side-Specific Advisory Alerts

Visual Alert	Alert Tone	Condition ** No time delay
<b>CHK BARO</b>	Chime	Ascending through transition level: Altimeter not set to 29.92 inHg or 1013 mbar. Descending through transition level: Altimeter set to 29.92 inHg or 1013 mbar. Descent warning times out in 10 seconds. Disabled during QFE operation. 2-second time delay.
<b>ANP: 0.01</b>	Chime	GPS/SBAS actual navigation performance based upon current GPS/SBAS HPL. **
<b>ANP: 15.0</b>		
<b>RNP: 0.10A</b>	Chime	GPS/SBAS automatic required navigation performance as acquired from navigation database. **
<b>RNP: 15.0A</b>		
<b>RNP: 0.10M</b>	Chime	GPS/SBAS manual required navigation performance as set manually if it is less than or equal to the RNP associated with the current airspace. **
<b>RNP: 15.0M</b>		
<b>DR 00:00</b>	Chime	GPS/SBAS in dead reckoning mode with valid ADC and AHRS data. Timer shows time since loss of position (mm:ss) to indicate quality of DR solution. Valid range is from 00:00 to 59:59. Inhibited during and for 10 seconds after unusual attitude mode. **
<b>DR 01:23</b>		
<b>LNAV APPR</b>	Chime	GPS/SBAS in LNAV approach mode. **
<b>LNV/VNV APPR</b>	Chime	GPS/SBAS in LNAV/VNAV approach mode. **
<b>LP APPR</b>	Chime	GPS/SBAS in LP approach mode. **
<b>LPV APPR</b>	Chime	GPS/SBAS in LPV approach mode. **
<b>SUSPEND</b>	Chime	Automatic waypoint sequencing is suspended under any of the following conditions:  1) Pilot has selected a manual GPS/SBAS OBS.  2) Active waypoint is the missed approach waypoint, and missed approach procedure has not been armed (ARM) nor initiated (MISS).

Table 4-10: Side-Specific Advisory Alerts

Visual Alert	Alert Tone	Condition ** No time delay
		3) Aircraft is in a published or manually created holding pattern, and pilot has not chosen to continue (CONT) out of the holding pattern.  4) Leg following active waypoint is a manual termination leg, and the pilot has not chosen to resume (RESUME) to the waypoint following the manual termination.  5) Aircraft is in a repeating SAR pattern (see SAR appendix), and the pilot has not chosen to continue out of the SAR pattern. **
<b>TERMINAL</b>	Chime	GPS/SBAS in terminal mode. **
<b>VFR APPR</b>	Chime	GPS/SBAS in VFR approach mode. **
<b>VECTORS</b>	Chime	GPS/SBAS in vectors to final approach mode prior to sequencing FAWP. **
<b>PTK = L 1NM</b>	Chime	GPS/SBAS parallel offset path advisory. ## is nautical miles, or kilometers, left (L) or right (R) of main path. PTK ENDING if within the parallel offset distance from a parallel offset exit waypoint. **
<b>PTK = L 20KM</b>		
<b>PTK = R 1NM</b>		
<b>PTK = R 20KM</b>		
<b>PTK ENDING</b>		
<b>FLTA INHBT</b>	Chime	Appears when FLTA function is automatically inhibited during normal operation. <b>TAWS INHBT</b> has priority. **
<b>TRUE NORTH</b>	Chime	System operating in true north mode. **

#### 4.1.7. Audio-Only Caution and Advisory Alerts

Audio-only caution alerts trigger a single audible alert that plays at full volume selected in the aircraft limits and audio-only advisory alerts play at 80% of full volume. A repeating audible alert is played until acknowledged by activating the warning/caution acknowledge button/switch (as configured).

Table 4-11: Audio-Only Caution and Advisory Alerts




Caution or Advisory Alert	Voice Alert/ Alert Tone	Condition ** No time delay
Minimum Altitude Caution Alert	“Minimums, Minimums”	Deviation from above to below minimum altitude bug. Minimum altitude readout turns amber (yellow) and flashes. **
Selected Altitude Deviation Caution Alert	“Altitude, Altitude”	Deviation greater than 150’ from selected altitude after capture (within 100’ of altitude). 2-second time delay.
VNAV Altitude Deviation Caution Alert	“Altitude, Altitude”	If not on a descending VNAV profile, deviation greater than 150’ from altitude of the current or prior VNAV waypoint after capture (within 100’ of altitude). 2-second time delay.
Decision Height Caution Alert	“Decision Height”	Deviation from above to below decision height bug. Decision height readout turns amber (yellow) and flashes. **
GBS/SBAS Failure Caution Alert	Alert Tone	No valid position data available from selected GPS/SBAS for more than 5 seconds and dead reckoning not available. Inhibited during and for 10 seconds after unusual attitude mode. Loss of position data is obvious from symbology changes associated with reversionary modes.**
GPS/SBAS Loss of Integrity Caution Alert	Alert Tone	GPS/SBAS loss of integrity caution. Inhibited during and for 10 seconds after unusual attitude mode. LOI indication is integrated with lateral deviation indicator. ** 
GPS/SBAS Loss of Navigation Caution Alert	Alert Tone	GPS/SBAS loss of navigation caution. Inhibited during and for 10 seconds after unusual attitude mode. LON indication is integrated with lateral deviation indicator. ** 
Loss of Vertical Navigation Caution Alert	Alert Tone	Loss of vertical navigation caution. Inhibited during and for 10 seconds after unusual attitude mode. VLON indication is integrated with vertical deviation indicator. ** 
Countdown Timer Chime	Chime	Sounds when countdown timer reaches 00:00:00. **

Table 4-11: Audio-Only Caution and Advisory Alerts

Caution or Advisory Alert	Voice Alert/ Alert Tone	Condition ** No time delay
Level-off Advisory Alert	Altitude Alert Tone	Within the greater of 500' or 50% of VSI from uncaptured selected or VNAV waypoint altitude. Inhibited in approach procedures. **

#### 4.1.8. Voice Alerts and Muting

Only the highest priority (in criticality and recency), unacknowledged voice alert is played at any given time. Any playing audio message is immediately muted by activating the warning/caution acknowledge switch.

#### 4.1.9. Visual Alert Prioritization and Declutter

Visual alerts are visually prioritized, so warnings are displayed above cautions, which are displayed above advisories. Within categories, visual alerts are stacked in chronological order, so the most recent alert appears on top.

The maximum number of visual alerts that can be simultaneously displayed in the standard location is 11.

Only the highest priority (in criticality and recency), unacknowledged audible annunciation is played at a time. In addition, to further minimize cockpit confusion, annunciations are grouped and prioritized so only one annunciation is active.

In addition, flags are decluttered from all IDUs, which are not transmit-enabled. Flags only appear on these IDUs if they are IDU-specific (i.e., CHECK IDU #).

## Section 5 Reversionary Modes

### 5.1. Reversionary Modes

The equipment has eight reversionary modes as follows:

- Mode 0: GPS/SBAS, ADC, and AHRS normal.
- Mode 1: GPS/SBAS failed; ADC and AHRS normal.
- Mode 2: ADC failed; GPS/SBAS and AHRS normal.
- Mode 3: AHRS failed; GPS/SBAS and ADC normal.
- Mode 4: GPS/SBAS and ADC failed; and AHRS normal.
- Mode 5: GPS/SBAS and AHRS failed; and ADC normal.
- Mode 6: ADC and AHRS failed; and GPS/SBAS normal.
- Mode 7: GPS, ADC, and AHRS failed.

Review the following tables and notes to determine what feature or function is affected by one or more of the three sensors failed conditions. Examples follow with the displays in various configurations with a table breaking down the affected functions.

Not all possible display configurations or format combinations are represented here. All eight modes of system operation are represented for description purposes.

Table 5-1: Reversionary Mode Status (PFD)

PFD Functions	Mode							
	0	1	2	3	4	5	6	7
Airspeed	OK	OK	19	OK	19	OK	19	19
Altimeter	OK	OK	19	OK	19	OK	19	19
Altimeter Set Display	OK	OK	-	OK	-	OK	-	-
Bank Scale	OK	OK	OK	-	OK	-	-	-
CDI	OK	1 + 20	OK	OK	20	20	OK	20
Runway	OK	1	25	-	-	-	-	-
Waypoint Pointer	7	1	7	7	-	-	7	-
Heading Scale	7	7	7	7	7	-	7	-
AGL Ind.	OK	2	4	OK	11	11	4	-
Flight Path Marker	OK	1 + 14	-	-	-	-	-	-
Hover Vector	OK	-	-	-	-	-	-	-
Ground Track	7	1	7	7	-	-	7	-
Heading Indicator	7	7	7	-	7	-	-	-
Horizon	OK	OK	OK	-	OK	-	-	-

Table 5-1: Reversionary Mode Status (PFD)

PFD Functions	Mode							
	0	1	2	3	4	5	6	7
Mini Map	7	1	7	7	-	-	7	-
Pitch Scale	OK	OK	OK	-	OK	-	-	-
Highway in the Sky	OK	1 + 15	-	-	-	-	-	-
Terrain/Obstructions	OK	-	25	-	-	-	-	-
Clock Functions	OK	OK	OK	OK	OK	OK	OK	OK
VSI	OK	OK	-	OK	-	OK	-	-
Waterline Symbol	22	22	5	13	5	13	13	13
Waypoint Symbol	OK	1	-	-	-	-	-	-
Waypoint Brg./Dist.	OK	1	OK	OK	-	-	OK	-
Traffic Perspective	OK	OK	OK	-	-	-	-	-
Mini Traffic	OK	OK	OK	OK	OK	OK	OK	OK
Speed Trend	OK	OK	-	-	-	-	-	-

Table 5-2: Reversionary Mode Status (PFD)

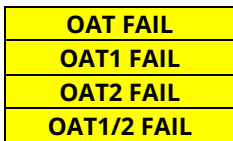
Map Functions	Mode							
	0	1	2	3	4	5	6	7
Aircraft Position	OK	1	OK	OK	-	-	OK	-
Special Use Airspace	9	1	6	9	-	-	6 + 9	-
Waypoint Pointer	9	1	9	9	-	-	9	-
Active Flight Plan Path	9	1	9	9	-	-	9	-
Ground Speed	OK	1	OK	OK	-	-	OK	-
Ground Track	9	1	9	9	-	-	9	-
Heading Indicator	9	9	9	-	9	-	-	-
Navigation Symbols	9	1	9	9	-	-	9	-
Outside Air Temp.	OK	OK	-	OK	-	OK	-	-
Projected Path	OK	1	OK	-	-	-	-	-
Traffic Perspective	OK	OK	OK	OK	OK	OK	OK	OK
Terrain/Obstructions	OK	-	25	OK	-	-	25+9	-
Clock Functions	OK	OK	OK	OK	OK	OK	OK	OK
Waypoint Brg./Dist.	OK	1	OK	OK	-	-	OK	-
Wind	21	3	-	-	-	-	-	-
WX-500 Data	OK	OK	OK	OK	OK	OK	OK	OK
Compass Rose	9	9	9	9	9	-	9	-
Fuel Totalizer Functions	23	24	23	23	12	12	12	12
True Airspeed	OK	OK	-	OK	-	OK	-	-
Density Altitude	OK	OK	-	OK	-	OK	-	-
OAT/ISA Display	OK	OK	-	OK	-	OK	-	-



- Note 1: Presented using inertial dead-reckoning based on last known wind information. If unable to dead-reckon (e.g., heading is failed or true airspeed cannot be calculated) then function is disabled.
- Note 2: Only radar altitude presented when available.
- Note 3: Last known wind is saved during GPS/SBAS failure.
- Note 4: Either radar altitude or geodetic altitude less database elevation.
- Note 5: N/A
- Note 6: Special use airspace boundaries are drawn with bold lines due to lack of aircraft altitude data.
- Note 7: In heading-only failure mode or AHRS failure mode, heading scale aligned with aircraft track and heading indication is removed. In heading-only failure mode or AHRS failure mode combined with GPS failure, heading scale is replaced with a red-X.
- Note 8: N/A
- Note 9: In heading-only failure mode or AHRS failure mode, compass rose aligned with aircraft track and heading indication is removed when in heading up mode. In heading-only failure mode or AHRS failure mode combined with GPS failure, compass rose is removed.
- Note 10: Presenting using last-known wind information and aligned with aircraft track in heading up mode.
- Note 11: Only radar altitude presented when available.
- Note 12: Assuming valid fuel flow information, endurance is presented.
- Note 13: Large attitude bars presented and X'd out.
- Note 14: Flight Path Marker grayed after one minute to indicate degraded operation.
- Note 15: Highway in the Sky removed after one minute.
- Note 16: N/A
- Note 17: Defaults to AIR unless Weight on Wheel/Weight on Ground configuration in EFIS limits is active.
- Note 18: Only DH function (with valid AGL altitude) in this mode.
- Note 19: Red-X in place of scale.
- Note 20: VLOC CDI always available if optional VOR symbology enabled.

- Note 21: Function removed during heading-only failure mode.
- Note 22: Full-time large attitude bars and do not show the waterline symbol.
- Note 23: N/A
- Note 24: Assuming valid fuel flow information, both range and endurance are presented using inertial dead-reckoning based on last known wind information. If the pilot is unable to dead-reckon due to loss of heading, or if true airspeed cannot be calculated, then endurance only information is presented.
- Note 25: Inhibited in accordance with the conditions specified in TAWS automatic inhibit function (abnormal operation).

### 5.1.1. OAT Sensor Failure Mode



With the OAT sensor failed, display of wind, OAT, and density altitude on MFD pages is disabled.

Figure 5-1: OAT Sensor Fail

### 5.1.2. Heading Failure Mode

With heading failed, the PFD heading scale and MFD compass rose align with track (if available) or are removed and replaced with a red-X.



In this failure mode, the PFD heading scale includes “GPS TRK” around the track marker to clearly delineate the failure mode.

Figure 5-2: GPS TRK

### 5.1.3. PFD Auto Reversion

For IFR approval in aircraft, flight instrument information essential to safety of flight remains available to the pilot without additional action after a failure. To accommodate this, MFDs can sense when the PFD has failed and take over the PFD function automatically. Therefore, when an MFD (IDU #2) becomes the transmit-enabled IDU, the MFD automatically switches to essential mode showing PFI in the top area. To change the MFD back to normal mode after the automatic switch, press **TO MFD (R5)**.

### 5.1.4. GPS Failure




GPS degrades or fails resulting from loss of satellite information or GPS equipment failure. When SBAS provides the integrity,


the EFIS provides a loss of integrity (LOI) caution within two seconds if the current horizontal protection level (HPL) exceeds the horizontal alert level (HAL). The LOI caution appears when there is no integrity monitoring and disappears when it is restored.

Figure 5-3: Loss of Integrity (LOI)

Further GPS degradation causes the EFIS to lose GPS updating of aircraft position, ground speed, and ground track, and the ability to calculate the wind information.

- 1)  (Loss of Integrity) displayed with no time delay.
- 2)  $HPL > HAL$  for the phase of flight. Position is still presented based upon a GPS navigation solution.



- 3)  Loss of Navigation (LON) displayed with no time delay of the onset of the following:
  - a) The absence of power;
  - b) Equipment malfunction or failure;
  - c) The presence of a condition lasting five seconds or more where there are an inadequate number of satellites to compute position solution;
  - d) Fault detects a position failure that cannot be excluded within time-to-alert when integrity is provided by FDE;
  - e)  $HPL > HAL$  on the final approach segment: EFIS does not transition to DR navigation at this stage. A GPS navigation solution is still presented; and
  - f) Where  $HPL > HAL$  on the final approach segment, this position may still be satisfactory for GPS navigation. For example, an HPL of 0.31NM exists, which means as soon as a transition to terminal mode occurs, all alerts would disappear. This is significantly important during a wind change if the system had been in a DR mode.



#### NOTE:

At any time, view HFOM on the faults menu to see the system-reported accuracy.

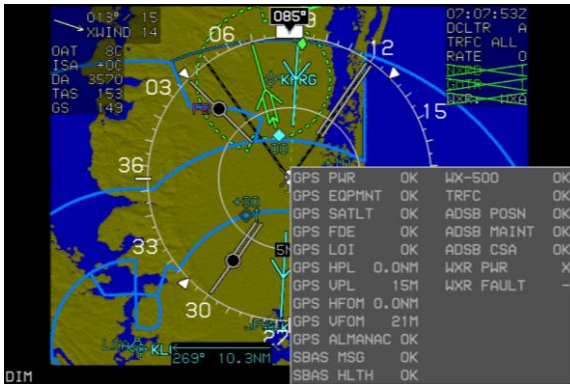


Figure 5-4: Faults Menu

4) Dead Reckoning (DR)



If a GPS position cannot be calculated, a dead reckoning solution is provided with a timer. This solution is calculated from heading and TAS derived from the AHRS and ADC.

Figure 5-5: Dead Reckoning

5) Loss of Vertical Navigation (VLON)



In the event the navigation equipment is no longer adequate to conduct or continue the LNAV/VNAV approach, "VLON" appears within one second (as shown) of the onset of any of the following conditions:

Figure 5-6: Loss of Vertical Navigation

- a) The absence of power;
- b) Equipment malfunction or failure;
- c) The presence of a condition where fault detection detects a position failure that cannot be excluded;
- d) There are an insufficient number of SBAS HEALTHY satellites;
- e) The horizontal protection level exceeds the alert limit as follows for LNAV/VNAV approaches:
  - i) Prior to sequencing, the FAWP - HAL should be 556m (0.3NM) with no limit on VAL.
  - ii) After sequencing the FAWP - HAL 556m (0.3NM) and VAL 50m.


When in LNAV mode, the fault detection function detects positioning failures within ten seconds after the onset of the positioning failure.

### **5.2. PFD and MFD Failure Mode Examples**

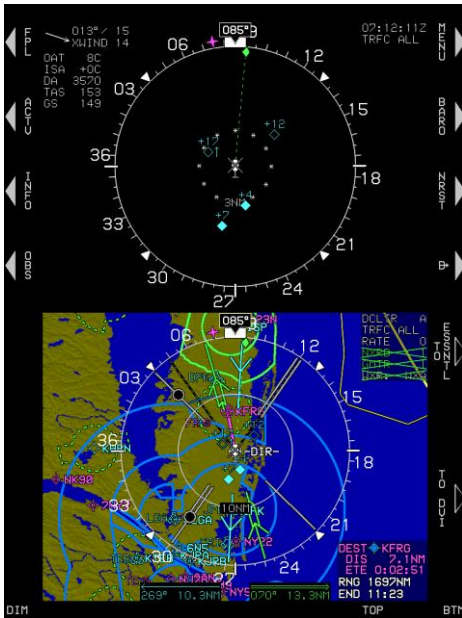All PFD examples are in Normal mode and there is no Essential mode.

GPS failure results in the EFIS operating in dead reckoning mode. The EFIS continues to provide navigational position, ground speed, and ground track information, based upon the last known wind, current air data, and heading. The PFD and MFD are affected as shown in the following images:





Normal Mode




Essential Mode

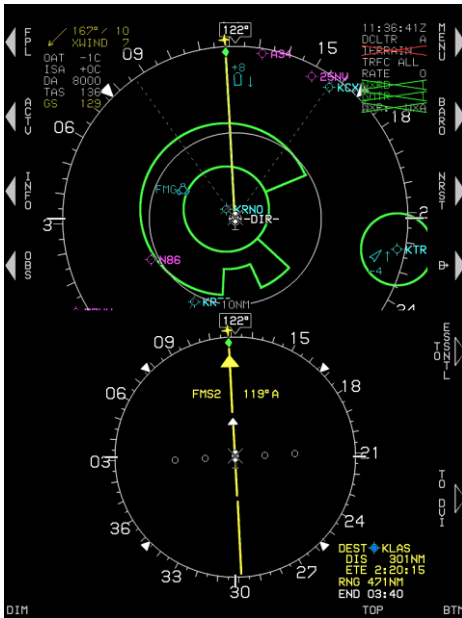
Figure 5-8: MFD Failure Mode 0  
GPS, ADC and AHRS Normal







Normal Mode

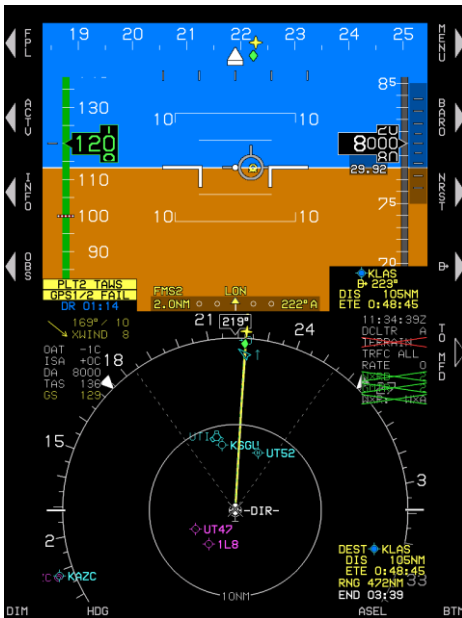

Essential Mode

Figure 5-10: MFD Failure Mode 1  
GPS/SBAS Failed, ADC and AHRS Normal

5.2.3. Failure Mode 2


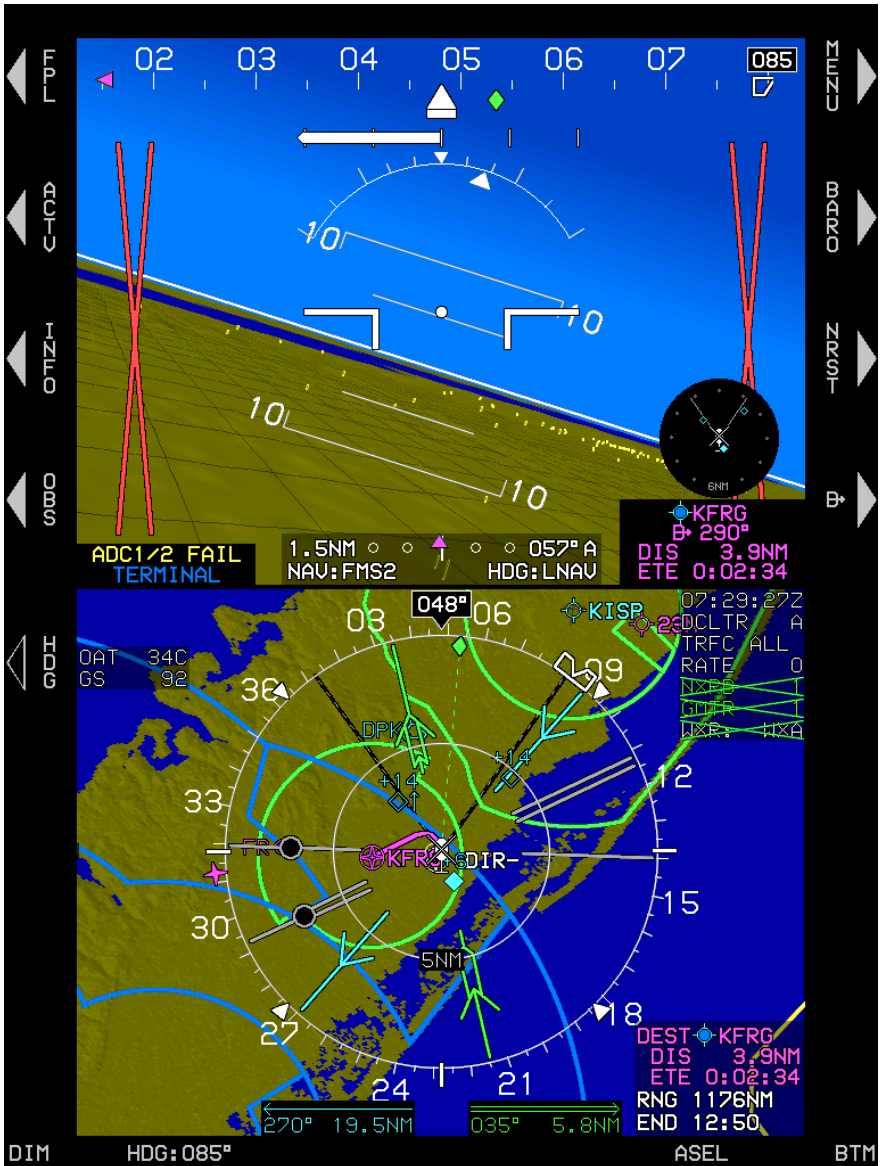


Figure 5-11: PFD Mode 2  
ADC Failed, GPS/SBAS and AHRS Normal

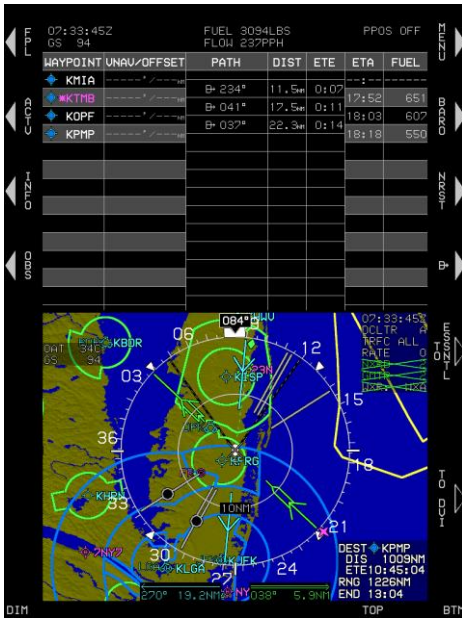

Normal Mode



Essential Mode

Figure 5-12: MFD Failure Mode 2  
ADC Failed, GPS/SBAS and AHRS Normal

5.2.4. Failure Mode 3


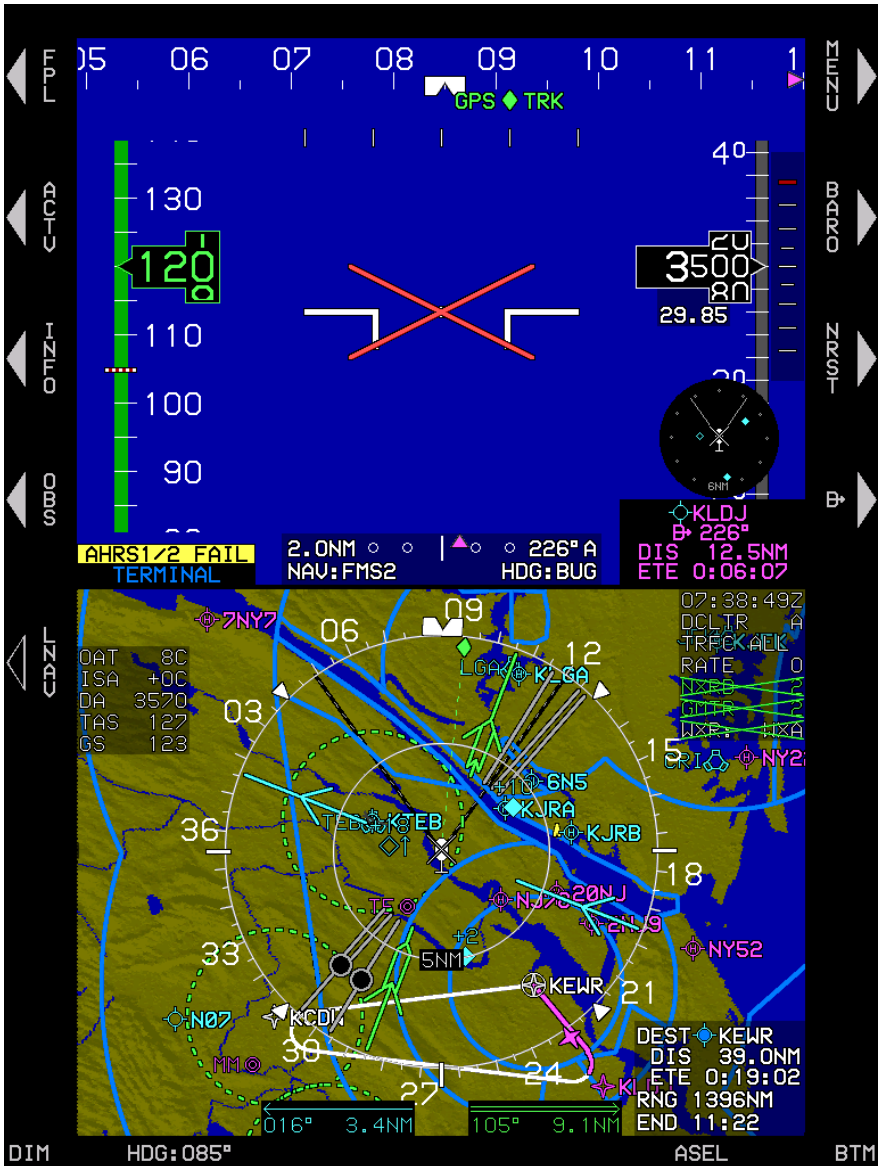


Figure 5-13: PFD Failure Mode 3  
AHRs Failed, GPS/SBAS and ADC Normal

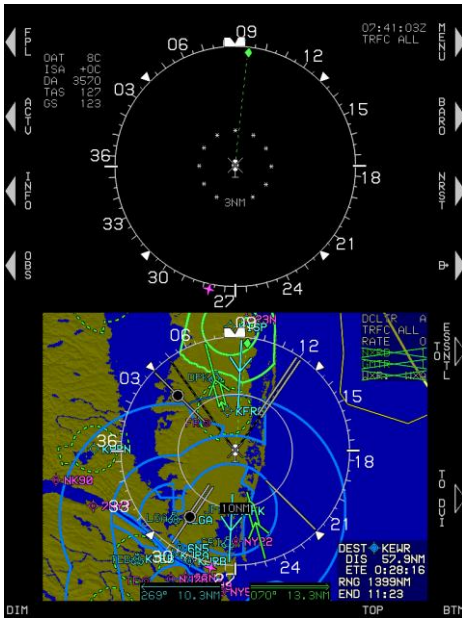

Normal Mode



Essential Mode

Figure 5-14: MFD Failure Mode 3  
AHRS Failed, GPS/SBAS and ADC Normal





5.2.6. Failure Mode 5



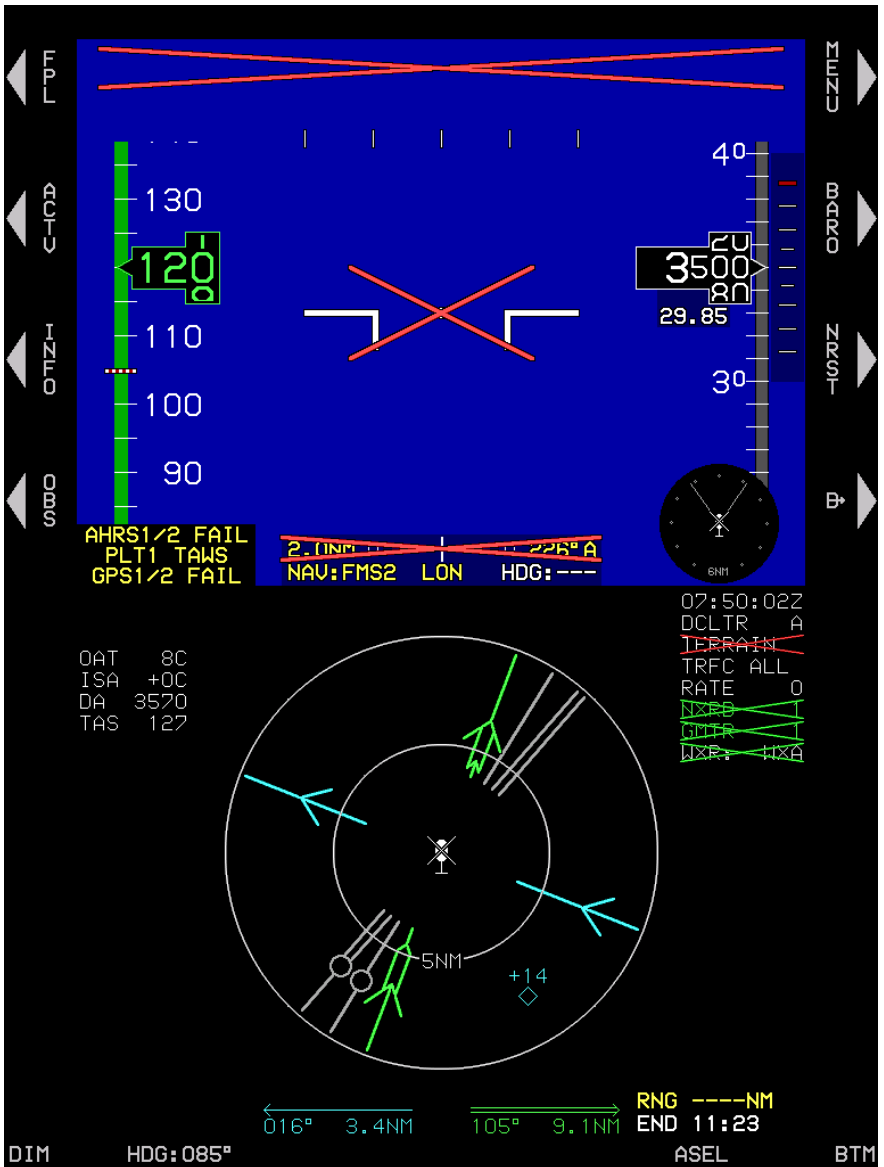


Figure 5-17: PFD Failure Mode 5  
GPS/SBAS and AHRS Failed, ADC Normal

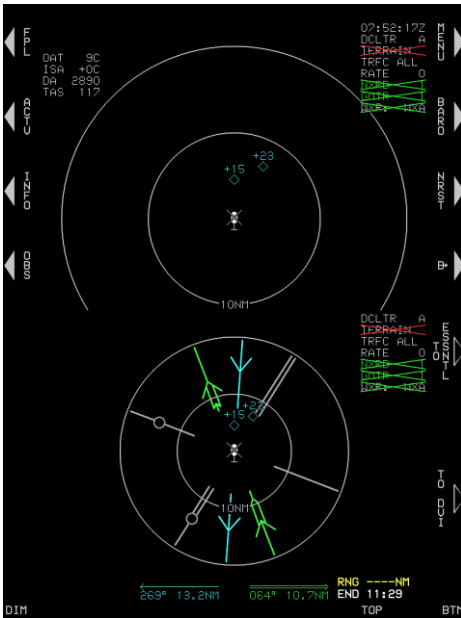

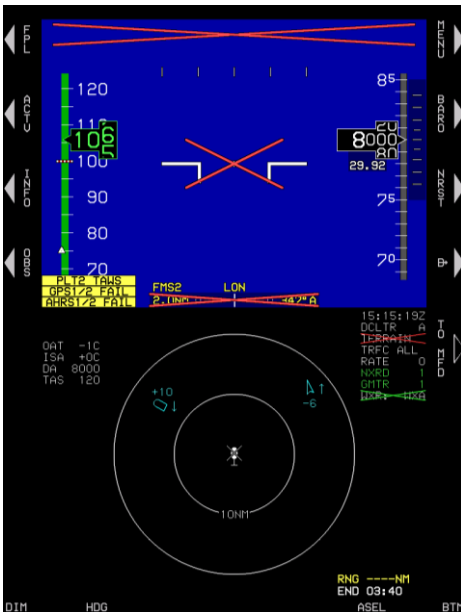

Normal Mode



Essential Mode

Figure 5-18: MFD Failure Mode 5  
GPS/SBAS and AHRS Failed, ADC Normal

5.2.7. Failure Mode 6


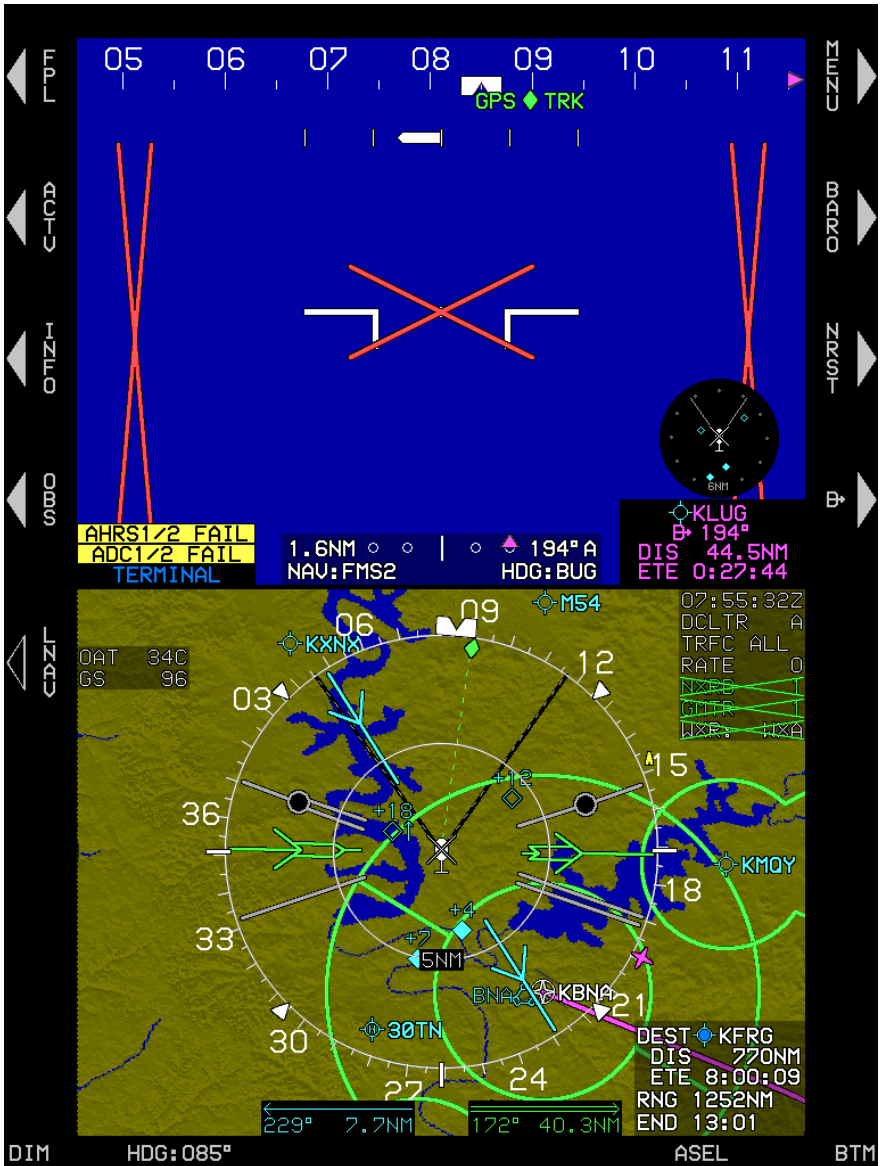


Figure 5-19: PFD Failure Mode 6  
ADC and AHRs Failed, GPS/SBAS Normal

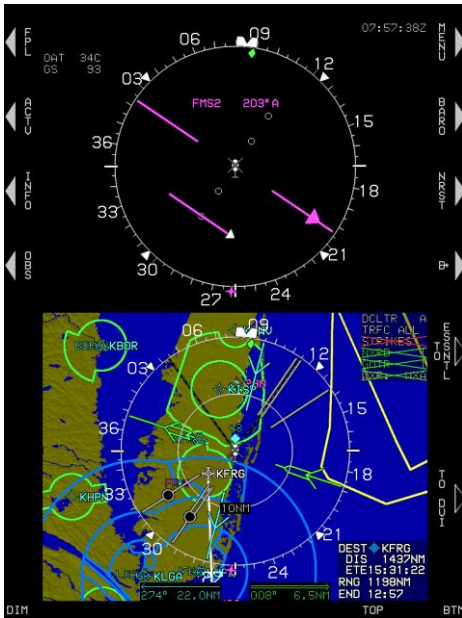

Normal Mode



Essential Mode

Figure 4 21: MFD Failure Mode 6  
ADC and AHRs Failed, GPS/SBAS Normal

5.2.8. Failure Mode 7

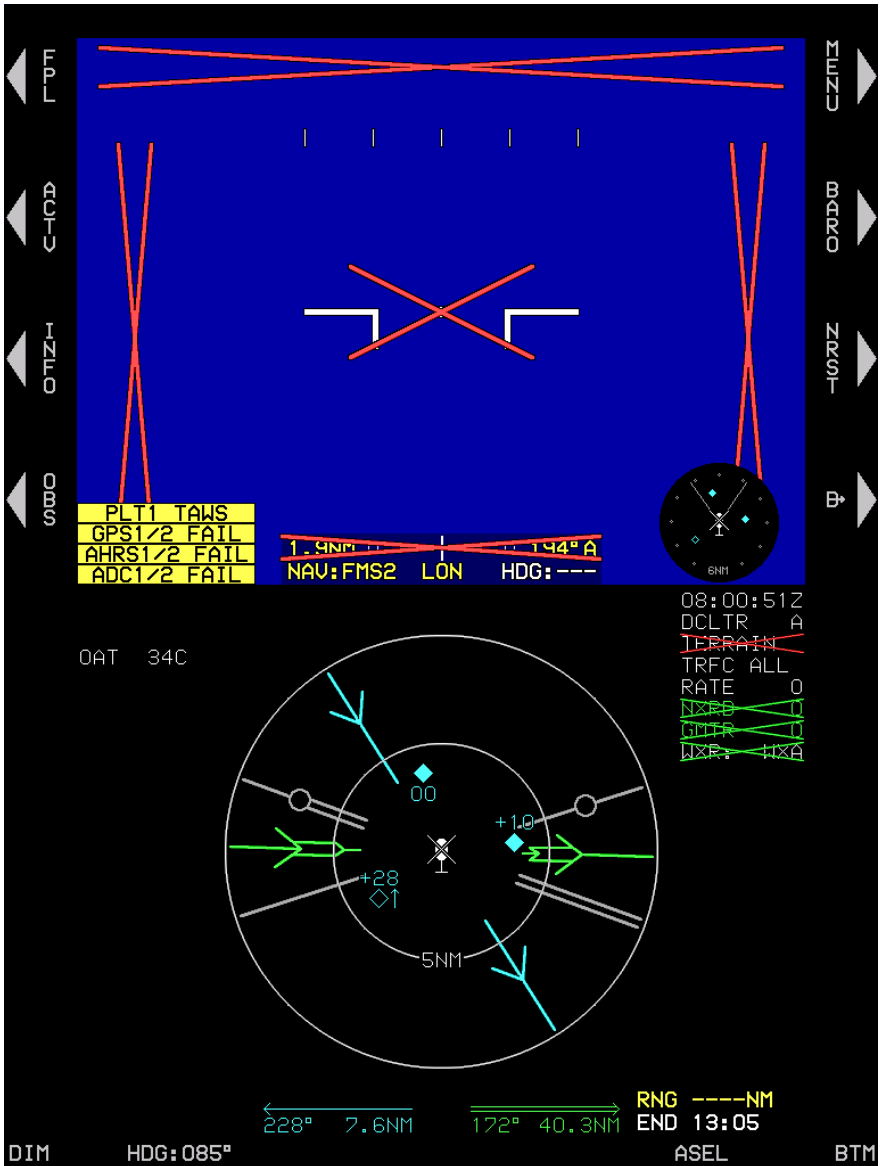


Figure 5-20: PFD Failure Mode 7  
GPS/SBAS, ADC and AHRS Failed



## Section 6 IFR Procedures

### 6.1. EFIS Navigation Operational Capabilities

The installed Genesys Aerosystems EFIS, receives GPS/SBAS satellite data from the Genesys Aerosystems TSO-C145c GPS Beta 3 sensor, meets TSO-C146c Class 3, and complies with AC 20-138D for navigation using GPS and GPS/SBAS (within the coverage of a satellite-based augmentation system complying with ICAO Annex 10) for en route, terminal area, non-precision approach, and approach procedures with vertical guidance operations. Non-precision approach operations include those based on conventional navigation aids with “or GPS” in the title and those with “GPS” and “RNAV (GPS)” in the title to “LNAV” and “LP” minimums. Approach procedures with vertical guidance includes “RNAV (GPS) to “LNAV/VNAV” and “LPV” minimums.

Navigation information is referenced to the WGS-84 reference system and should only be used where the Aeronautical Information Publication (including electronic data and aeronautical charts) conform to WGS-84 or equivalent.

### 6.2. Active Flight Plan

Before using the Genesys EFIS navigation system to fly any part of an instrument procedure in VMC or IMC, always compare each leg of the applicable and current published charted procedure to the flight plan displayed on the map. This EFIS and FMS may not support some specific navigation leg types. All pilots must understand how each leg is depicted and navigated prior to conducting the procedure. Not all airport diagrams or instrument approach plates are supported by the navigation/charts database.

After updating the navigation database and planning to fly an instrument procedure, practice in the **RUN DEMONSTRATOR/TRAINING PROGRAM** to view how each leg is depicted.

If navigation planning includes manual sequencing of any leg in a procedure, verify what specific navigation guidance the EFIS provides. When any procedure includes ARINC-424 legs defined by headings, or that terminate at a specific altitude, the pilot must understand how the EFIS behaves and how system behavior can affect coupled autopilot operations.

The application checks for an active waypoint upon opening the active flight plan menu. If there is no active waypoint, **NO ACTIVE WPT** appears. Otherwise, a Nav log of waypoints in the active flight plan appears with the following:

- 1) Waypoint identifier and characterization (default, overfly [OF], or no radius [/OR]);

- 2) Symbol designating waypoint type and what type of procedure (if any) the waypoint is associated with;
- 3) VNAV altitudes presented in feet or meters and offsets associated with each waypoint in nautical miles or kilometers; and
- 4) Information related to flight plan path between each waypoint.

In the case of an approach with a final approach segment data block, the VNAV offset readout associated with the missed approach point is "GPI" to designate distance to the glide path intercept point. When courses are presented as part of the path information, they are displayed referenced to either magnetic or true north depending on status of true north as configured in EFIS limits. If referenced to magnetic north, the course is indicated with the degree (°) symbol. Otherwise, a stylized true north (T) symbol appears.

VNAV altitudes and offsets from the navigation database or have been manually entered are white, and those computed automatically are gray. The active waypoint is designated by an asterisk and is magenta (See Section 1 System Introduction and Overview for color conventions) but turns amber (yellow) in the event of a GPS LON caution.

Table 6-1: VNAV Altitudes and Offsets

Input Source	Color		
Navigation database or manually entered	MYNN	3900' /---	067° 50.0NM
	*MYEH	2000' /---	129° 22.2NM
	MYEM	3000' / -1	169° 24.9NM
	MYER	2500' / -3	
Computed automatically	-DIR-	3900' /---	-DISCONT-
	IP	3900' /---	143° 12.0NM
	*FI 14	1698' /---	143° 5.0NM
	RW14	67' /---	
Failed FMS source	KMIA	-----M/---	201° 20.5KM
	*KTMB	-----M/---	035° 32.6KM
	KOPF	-----M/---	031° 41.3KM
	KPMP	-----M/---	

A suppressed waypoint (designated by brackets) is an airport associated with an IFR or VFR approach procedure. After an approach procedure is activated, the associated airport is no longer part of the active flight plan for guidance purposes. However, the associated airport is still shown in the ACTV menu for

it to be highlighted for information or to activate other procedures to the airport.



**NOTE:**

Adding a STAR procedure with neither an instrument approach nor a SID does not suppress the airport waypoint. Adding a STAR to a different airport in the active flight plan does not change the original suppressed waypoint airport.



Figure 6-1: Suppressed Waypoint

It is possible to add a departure procedure to another airport within an active flight plan and have two suppressed waypoints within the same active flight plan.

WAYPOINT	UNAU/OFFSET	PATH	DIST	ETE	ETA	FUEL
X -DIR-	3500' / ---					
Faf *BORDA	2000' / ---	B+ 083°	7.7 <sub>nm</sub>	0:04	08:04	997
RW24	167' / ---	B+ 240°	5.8 <sub>nm</sub>	0:03	08:09	972
-ALT-	800' / ---	240° 800'	2.0 <sub>nm</sub>	0:01	08:12	958
ARD	3000' / ---	B+ 043°	13.6 <sub>nm</sub>	0:07	08:13	954
ARD	3000' / ---	289°	4.7 <sub>nm</sub>	0:02	08:21	921
<KPNE>	---	---	---	---	---	---
<KFRG>	---	---	---	---	---	---
DP RW32	111' / ---	-DISCONT-	---	---	---	---
DP -ALT-	580' / ---	325° 580'	1.5 <sub>nm</sub>	0:00	09:02	731
DP -MAN-	580' / ---	009° -MAN-	---	---	09:03	727
DP DEEZZ	580' / ---	-DISCONT-	---	---	---	---
DP HEERO	580' / ---	B+ 295°	15.6 <sub>nm</sub>	0:08	09:18	658
					09:27	621

Figure 6-2: Active Flight Plan with Two Suppressed Waypoints

**6.2.1. Skipped Waypoint**

A skipped waypoint is a waypoint associated with a dynamic termination leg with a zero length. These are either:



- 1) An altitude termination leg when current aircraft altitude is above the termination altitude; or
- 2) System-created (i.e., not NavData® specified) intercept to a "Course to a Fix" leg where there is insufficient distance to calculate an intercept heading.

### 6.2.2. Waypoint

To add a waypoint to the end of the active flight plan, rotate through each waypoint of the flight plan to one position past the end.

Upon selection of a waypoint from the selection list, the EFIS checks whether the selected waypoint meets the criteria for waypoint activation, manual VNAV parameter entry, custom holding pattern entry, manual overfly characterization, VFR approach entry, IFR approach entry, STAR entry, or DP entry. If it does, a list is presented as follows:

- 1) **WAYPOINT:** If valid, this option allows the pilot to activate the flight plan leg to the waypoint. Option valid for any waypoint except:
  - a) Suppressed waypoint;
  - b) Skipped waypoint;
  - c) A waypoint following a discontinuity; or
  - d) The first waypoint.
- 2) **VNAV..:** If valid, this option allows the pilot to enter a manual VNAV altitude and offset at the selected waypoint using altitude in feet or meters and distance in NM or KM as set in the EFIS limits. Option valid for any waypoint except:
  - a) Suppressed waypoint
  - b) Skipped waypoint;
  - c) A manual termination waypoint;
  - d) A waypoint that is part of an IFR or VFR approach;
  - e) A SAR pattern exit waypoint;
  - f) A parallel offset entry or exit waypoint; or
  - g) One of the following types of termination legs:
    - i) Dynamic;
    - ii) Altitude;
    - iii) DME;
    - iv) Radial; or
    - v) Intercept
- 3) **HOLD..:** If valid, this option allows the pilot to enter a manual holding pattern at the selected waypoint using altitude in feet or meters and distance in NM or KM as set in the EFIS limits. Option valid for any waypoint except:

- a) Suppressed waypoint;
  - b) Skipped waypoint;
  - c) A manual termination waypoint;
  - d) The missed approach waypoint;
  - e) A waypoint that is part of a VFR approach;
  - f) A holding pattern waypoint;
  - g) A SAR pattern exit waypoint;
  - h) A waypoint that begins with a departure procedure;
  - i) A parallel offset entry or exit waypoint; or
  - j) One of the following dynamic termination waypoints:
    - i) Altitude;
    - ii) DME;
    - iii) Radial; or
    - iv) Intercept
- 4) **SAR PTRN..**: If SAR patterns are enabled in the EFIS limits, and valid, this option allows the pilot to create and enter a SAR pattern at the selected waypoint using altitude in feet or meters and distance in NM or KM as set in the EFIS limits (as defined in the SAR appendix). This option is valid for any waypoint except:
- a) Suppressed waypoint;
  - b) Skipped waypoint;
  - c) A manual termination waypoint;
  - d) A waypoint that is part of an IFR or VFR approach;
  - e) A holding waypoint;
  - f) A SAR pattern exit waypoint;
  - g) A waypoint that begins a departure procedure;
  - h) A parallel offset entry or exit waypoint; or
  - i) One of the following dynamic termination waypoints: Altitude, DME, Radial, or Intercept.
- 5) **SAR SGMNT..**: This option allows the pilot to select which segment within the SAR pattern should be active for navigation guidance. If the selected waypoint is the active waypoint and is one of the following types of SAR patterns:
- a) Expanding square;
  - b) Rising ladder; or
  - c) Sector search
- 6) **OFLY/AUTO..**: If the selected waypoint is neither suppressed, skipped, a manual termination, or a parallel offset entry or exit waypoint, change the waypoint's overfly characterization. The choices are:
- a) **AUTO**: Reset automatic overfly characterization by FMS.

- b) **OVERFLY:** Force the characterization to be an overfly adjust-exit waypoint and force the inbound course to go directly to the waypoint regardless of the amount of course change required.
- c) **NO RADIUS:** Manually force the turn radius at the waypoint to be zero. This forces the inbound course and outbound course to go directly to and from the waypoint regardless of the amount of course change required.



---

**NOTE:**

It is not possible to track a “NO RADIUS” path perfectly, but the FMS path guidance quickly recaptures the outbound course after resuming automatic waypoint sequencing. Designating a waypoint as a “NO RADIUS” waypoint affects the turn radius used to calculate procedure turn and holding pattern leg paths.

---

- 7) **VFR APPR..:** If selected waypoint is a user waypoint with an approach bearing, a VFR approach to the user waypoint based on the approach bearing is created, then the user waypoint becomes suppressed.

If the selected waypoint is a VFR airport or an IFR airport with surveyed runways, the pilot is presented with a list of runways. After selecting a runway, a VFR approach to the runway is created, and then the airport waypoint becomes suppressed. Activating a VFR approach deletes (after pilot confirmation) any pre-existing IFR or VFR approaches. If a heading bug is not active; activating a VFR approach activates the heading bug on current aircraft heading and is used to define the course intercept angle.

- 8) **IFR APPR..:** If selected waypoint is an airport with an IFR approach, the pilot is presented with a list of available approaches including, if applicable, the five-digit channel number, followed by a list of available transitions (if there are more than one), and a list of runways (if there are surveyed runways at the airport). After selection, the appropriate IFR approach is created, and the airport waypoint is suppressed. Activating an IFR approach deletes any pre-existing IFR or VFR approaches. If there is a pre-existing STAR to the airport, the IFR approach waypoints are inserted after the STAR waypoints. If a heading bug is not active and the activated transition is “Vectors to Final,” activating an IFR approach activates the heading bug on current aircraft heading for purposes of defining the course intercept angle.
- 9) **STAR..:** If selected waypoint is an airport with a STAR, the pilot is presented with a list of available STARs, followed by a list of available transitions (if there are more than one) and a list of runways (if there are surveyed runways at the airport). After selection, the appropriate STAR is created.

Activating a STAR automatically deletes any pre-existing STAR. If there is a pre-existing approach (IFR or VFR) to the airport, STAR waypoints are inserted prior to the approach waypoints.

- 10) **DP..:** If selected waypoint is an airport with a DP, the pilot is presented with a list of DPs, followed by a list of available transitions (if there are more than one) and a list of runways (if there are surveyed runways and more than one runway authorized for the DP). After selection, the appropriate DP is created, and upon activation, deletes any pre-existing DPs after pilot confirmation. This option is invalid if the selected waypoint is a holding pattern waypoint or SAR pattern exit waypoint. (This forces a pilot to deactivate a manual holding pattern or SAR pattern prior to activating an IFR approach).

### 6.3. Operations Outside a GPS/SBAS Coverage Area

When outside of a GPS/SBAS service provider's coverage area, the GPS receivers can revert to using FDE for integrity. The GPS receiver uses GPS/SBAS integrity or FDE; whichever provides the best protection level. GPS/SBAS equipment does not have any limitations in oceanic and remote areas provided the operator obtains an FDE prediction program.

### 6.4. IFR Procedures

Pilots operating in a radar environment are expected to associate departure headings or an RNAV departure advisory with vectors or the flight path to the planned route or flight. Use of both types of departure procedures; Obstacle Departure Procedures (ODP), which are printed either textually or graphically, and Standard Instrument Departure procedures (SIDs), which are always printed graphically. All DPs, either textual or graphic may be designed using either conventional or RNAV criteria. RNAV procedures have RNAV printed in the title.

ODPs are not found in the navigation database, and therefore the climb angle found in the PFD bugs menu should be set to comply with the steeper than normal climb gradient during the departure until established on the en route structure.

Approach minima are never coded in NavData®. On some approaches, the altitude coded at the MAP for a non-precision approach coincides with an MDA (normally where the final approach course does not align with the runway), but more often the coded altitude is some height above the threshold.

### 6.5. Overview of Procedures and Instrument Approaches

This Genesys Aerosystems EFIS provides 3D GPS precision and non-precision instrument approach guidance using a system integral TSO C146c BETA 3 GPS receiver with GPS and augmented GPS with SBAS (Satellite Based Augmentation

System) commonly referred to as WAAS (Wide Area Augmentation System). In order to support full integration of RNAV procedures into the National Airspace System (NAS), a charting format for instrument approach procedures (IAPs) designed to avoid confusion and duplication of instrument approach charts was created.

Use of this GPS receiver provides a level of certified service supporting RNAV (GPS) approaches to LNAV, LP, LNAV/VNAV, and LPV lines of minima within system coverage. Some locations close to the edge of the coverage may have lower availability of vertical guidance.

The Genesys Aerosystems EFIS guides the pilot through every step of the approach procedure with Highway In The Sky (HITS) 3D symbology. The system defines a desired flight path based upon the active flight plan. The current position of the aircraft is determined relative to the desired path to determine deviation for display on the GPS/SBAS CDI and VDI. The EFIS auto-sequences from one waypoint to the next in accordance with the flight plan along the flight path with the following exceptions:

- 1) Pilot selected a manual GPS/SBAS OBS (**SUSPEND** shown).
- 2) Active waypoint is the missed approach waypoint, and missed approach procedure has not been armed (**ARM**) nor initiated (**MISS**) (**SUSPEND** shown).
- 3) Aircraft is in a published or manually created holding pattern, and pilot has not chosen to continue (**CONT**) out of the holding pattern (**SUSPEND** shown).
- 4) Active waypoint is the last waypoint of the active flight plan (no flag shown).
- 5) Active waypoint has a manual termination, and the pilot has not chosen to resume (**RESUME**) to the waypoint following the manual termination (**SUSPEND** shown).
- 6) Aircraft is in a repeating SAR pattern (racetrack, sector search, or orbit) and the pilot has not chosen to continue out of the SAR pattern (**SUSPEND** shown). (See SAR appendix.)

### 6.5.1. Waypoint Sequencing

When automatic waypoint sequencing is suspended due to reasons 1, 2, or 4 in § 6.5, the EFIS switches from "TO" to "FROM" operation when appropriate. If not suspended, automatic waypoint sequencing occurs in following conditions:

- 1) Bearing to the transition point (turn bisector for fly-by waypoint, active waypoint for fly-over waypoint) is more than 90° from the current course (i.e., transition from "TO" to "FROM" operation);

- 2) Aircraft location is within two turn diameters (based upon current true airspeed and 15° angle of bank) of the active waypoint location; and
- 3) Aircraft heading is within 90° of the current course (i.e., generally pointed in the correct direction).

The desired flight path is created from a sequence of straight, left turning, and right turning leg segments designed to provide smooth skyway, GPS/SBAS CDI, and lateral autopilot guidance. Each leg between waypoints is composed of up to nine segments. Where a "Fixed-Radius Transition" is defined by the navigation database for a waypoint, that turn radius is used for the turning segment.

Otherwise, radius for turning segments (other than DME arc or radius to a fix segments) are calculated with the parameter speed determined as follows:

- 1) If the waypoint is part of a DP or STAR and within 30NM of the departure/arrival runway, speed is the pre-programmed procedure speed.
- 2) If the waypoint is part of an IFR or VFR approach procedure, or holding pattern, speed is the preprogrammed procedure speed.
- 3) If the waypoint is part of a holding pattern, speed is the pre-programmed holding speed.
- 4) Within a SAR pattern, speed is the lower of holding speed or procedure speed.
- 5) Where a fixed-radius transition (FRT) is defined by the navigation database for a waypoint, that turn radius is used for the turning segment. FRT is used in en route flight to save the number of waypoints and to provide a smoother transition. The RF leg can only be used in a SID or in a STAR. It is the flight plan leg stored in the navigation database, which is defined by constant radius turns around a given fix.
- 6) Otherwise, speed is the current true airspeed or procedure speed, whichever is higher.

In all cases, if NavData® derived speed limit is associated with the waypoint, speed is the lower of the NavData® derived speed limit or the speed determined above. Radius for DME arc or radius to a fix segments comes from NavData®.

### 6.5.2. Fly-Over Waypoints

To create the desired flight path, each waypoint is designated as a fly-over or a fly-by waypoint. Waypoints are further subdivided into waypoints with a defined entry heading and waypoints with a defined exit heading. Waypoint auto-sequencing for fly-by waypoints occurs at the bisector of the turn. Waypoint auto-sequencing for fly-over waypoints occurs over the waypoint.

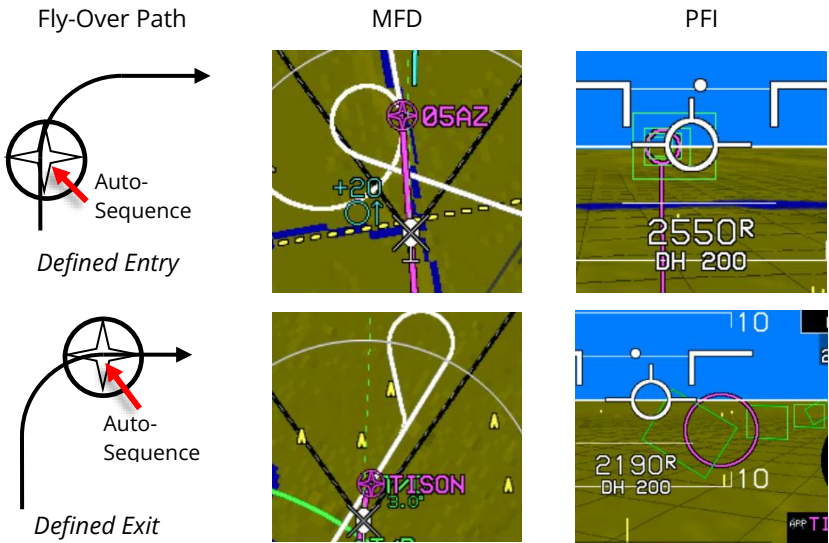


Figure 6-3: Fly-Over Waypoints

### 6.5.2.1. Fly-Over with Defined Entry Heading

These waypoints are type fly-over with defined entry heading:

- 1) Waypoint leading into discontinuity;
- 2) Waypoints which are marked as overfly in the navigation database or menu system;
- 3) Exit from holding pattern;
- 4) Exit from SAR pattern;
- 5) Exit from procedure turn;
- 6) Entry into holding pattern;
- 7) Missed approach point;
- 8) Phantom waypoint (created by inserting a waypoint into the active flight plan or performing Direct-To function within the active flight plan – avoids S-turns);
- 9) Last waypoint;
- 10) Reference (takeoff runway end) waypoint of a DP; and
- 11) Altitude, DME, or radial termination legs (ARINC-424 path types CA, FA, VA, CR, VR, CD, FD, and VD; see Table 6-2).

Table 6-2: RNAV Path Terminator Leg Type

Path	Designator		Terminator
Constant DME arc	A	A	Altitude
Course to	C	C	Distance
Direct Track	D	D	DME Distance
Course from a Fix to	F	F	Fix
Holding Pattern	H	I	Next Leg
Initial	I	M	Manual Termination
Constant Radius	R	R	Radial Termination
Track Between	T		
Heading To	V		

Examples: CF= Course to Fix, and FM= Course from a Fix to a Manual Termination, etc.

### 6.5.2.2. Fly-Over with Defined Exit Heading

These waypoints are type fly-over with defined exit heading:

- 1) Entry into procedure turn; and
- 2) Waypoint exiting a discontinuity with the exception of phantom waypoints or DP reference waypoints;
- 3) First waypoint except for phantom or DP reference waypoints
- 4) Course to a fix legs that are not to the FAF/FAWP are fly-by with defined entry heading. All other waypoints are fly-by with defined exit heading.
- 5) Entry into SAR pattern.

### 6.5.3. Fly-By Waypoints

Course to fix legs that are not to the FAF/FAWP are fly-by with defined entry heading. All other waypoints are fly-by with defined exit heading. Leg segments for paths are constructed by the EFIS (see Figure 6-4).



#### NOTE:

Entry adjustments should be expected anytime a turn exceeds 120°. Turns greater than 120° should not be used in conjunction with RNP routes. (RNP standards specifically exclude such turns from RNP requirements.)



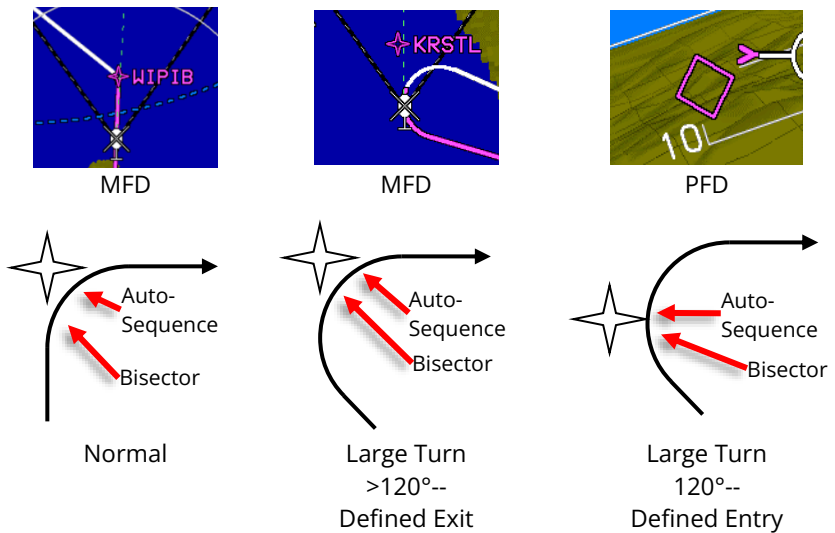


Figure 6-4: Fly-By Waypoints

Table 6-3: Leg Segments for Paths Constructed by EFIS

Path Type	Waypoint		# of Segments and Description
	Entry	Exit	
Straight Leg, DME Arc or Radius to a Fix	Fly-By	Fly-By	2nd half of fly-by turn at entry waypoint. WGS-84 geodesic or arc path from entry to exit turns. 1st half of fly-by turn at exit waypoint.
Straight Leg, DME Arc or Radius to a Fix	Fly-By	Fly-Over Defined Exit Heading	2nd half of fly-by turn at entry waypoint. WGS-84 geodesic or arc path from entry to exit turns. Turn to exit heading prior to exit waypoint.
Straight Leg, DME Arc or Radius to a Fix	Fly-By	Fly-Over Defined Entry Heading	2nd half of fly-by turn at entry waypoint. WGS-84 geodesic or arc path from entry turn to exit waypoint.
Straight Leg, DME Arc or	Fly-Over Defined Exit Heading	Fly-By	WGS-84 geodesic or arc path from entry waypoint to exit turn.

Table 6-3: Leg Segments for Paths Constructed by EFIS

Path Type	Waypoint		# of Segments and Description
	Entry	Exit	
Radius to a Fix			1st half of fly-by turn at exit waypoint.
Straight Leg, DME Arc or Radius to a Fix	Fly-Over Defined Exit Heading	Fly-Over Defined Exit Heading	WGS-84 geodesic or arc path from entry waypoint to exit turn. Turn to exit heading prior to exit waypoint.
Straight Leg, DME Arc or Radius to a Fix	Fly-Over Defined Exit Heading	Fly-Over Defined Entry Heading	WGS-84 geodesic or arc path from entry waypoint to exit waypoint.
Straight Leg, DME Arc or Radius to a Fix	Fly-Over Defined Entry Heading	Fly-By	Turn from entry heading after entry waypoint. WGS-84 geodesic or arc path from entry to exit turns. 1st half of fly-by turn at exit waypoint.
Straight Leg, DME Arc or Radius to a Fix	Fly-Over Defined Entry Heading	Fly-Over Defined Exit Heading	Turn from entry heading after entry waypoint. WGS-84 geodesic or arc path from entry to exit turns. Turn to exit heading prior to exit waypoint.
Straight Leg, DME Arc or Radius to a Fix	Fly-Over Defined Entry Heading	Fly-Over Defined Entry Heading	Turn from entry heading after entry waypoint. WGS-84 geodesic or arc path from entry turn to exit waypoint.
Straight Leg, DME Arc or Radius to a Fix	Fly-By	Fly-By	2nd half of fly-by turn at entry waypoint. WGS-84 geodesic or arc path from entry to exit turns. 1st half of fly-by turn at exit waypoint.
Procedure Turn	Fly-Over Defined Exit Heading	Fly-Over Defined Entry Heading	WGS-84 geodesic path from entry waypoint on outbound heading for 30 seconds.

Table 6-3: Leg Segments for Paths Constructed by EFIS

Path Type	Waypoint		# of Segments and Description
	Entry	Exit	
			Turn to procedure turn heading (45°). Outbound on procedure turn heading for 72 seconds. Turn to inbound heading (135°). WGS-84 geodesic path to exit waypoint. Entry waypoint and exit waypoint are same point.
Holding Pattern	Fly-Over Defined Entry Heading	Fly-Over Defined Entry Heading	Turn to proper entry procedure heading. This heading varies. For a parallel entry, it is 180° from the holding course. For direct and teardrop entries, it is the heading required to get to entry of inbound turn. WGS-84 geodesic path to entry of inbound turn. Inbound turn. Degree of turn varies depending upon entry procedure and heading. WGS-84 geodesic path to holding fix for direct and teardrop entries. WGS-84 geodesic path to entry of turn to holding pattern heading for parallel entries. Turn to holding pattern heading for parallel entries. This leg is not used for direct and teardrop entries. Turn to holding pattern outbound leg (180°). Holding pattern outbound leg (length based upon either time

Table 6-3: Leg Segments for Paths Constructed by EFIS

Path Type	Waypoint		# of Segments and Description
	Entry	Exit	
			or distance as specified by navigation database). Turn to holding pattern inbound leg (180°). Holding pattern inbound leg (length based upon either time or distance as specified by navigation database).

#### 6.5.4. Create a User Waypoint Overfly/Pan (Step-By-Step)

- 1) When flying (or in pan mode) over intended waypoint, press **MENU (R1)**, within 10 seconds press **DESIG (L3)** on PFD or MFD.
- 2) A user waypoint is created at the present position and automatically named "OF####" (overfly) or PN#### (pan mode), where ### is the next available sequence user waypoint number.
- 3) Edit user waypoint to change the waypoint name or characteristics (see Section 3 Menu Functions and Step-By-Step Procedures).

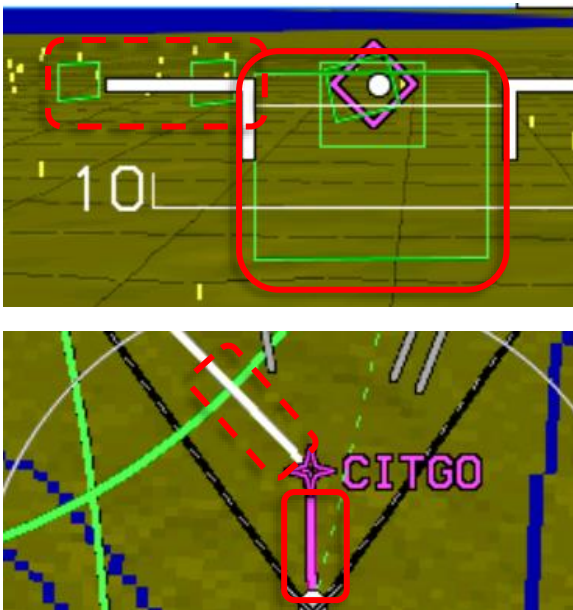


#### NOTE:

If configured in EFIS limits, "Remote User Waypoint Designate switch" may be used to easily create a user waypoint.

#### 6.5.5. Highway in the Sky (Skyway)

When not decluttered, the EFIS displays the active FMS navigation route or manual FMS OBS course in a 3D manner with a series of skyway boxes, which overlay the flight plan route at a desired altitude and provide lateral and vertical guidance. Skyway boxes conform to the VNAV requirements of GPS/SBAS receiver requirements (TSO-C-146C). The top and bottom of the boxes are parallel to the horizon on straight leg segments and dynamically tilt with respect to the horizon on turning leg segments based on leg segment turn radius and ground speed.



5 HITS boxes  
appearing on active  
and next legs



Figure 6-5: Highway in the Sky Five Boxes

When the active route is in view, up to five boxes are shown with the dimensions being a constant 400 feet wide ( $\pm 200$  feet from the desired lateral path) by 320 feet tall ( $\pm 160$  feet from the desired vertical path) and spaced horizontally 2000 feet.

Table 6-4: Highway in the Sky Configuration

Type HITS Lines	Fully Integrated Autopilot	Partially Integrated Analog Autopilot	Un-Integrated Autopilot or No Autopilot
Dashed	Not coupled to skyway		Always Solid
Solid	Coupled to Skyway	Coupled to skyway. Autopilot is either in HDG mode with LNAV heading/roll-steering sub-mode engaged or in NAV/APR mode with FMS1 or FMS2 as the selected navigation source.	

Skyway boxes (when not manually deselected) are drawn using the hidden surface removal techniques of the terrain and obstruction rendering, so a skyway box behind terrain appears to be so. Skyway boxes disappear in basic

mode and unusual attitude mode. In reversionary mode 1 (GPS failure), skyway boxes disappear after one minute to indicate degraded navigation performance.

Skyway box altitude is controlled by VNAV altitude, aircraft altitude, climb performance, and climb/descent angle setting in PFD BUGs menu (outside of the FAF when an instrument approach is loaded). If no VNAV altitude is set, the skyway boxes describe the desired lateral flight path at the aircraft's current altitude.

With a VNAV altitude set, the boxes provide both lateral and vertical guidance. Climb and descent angle settings are controlled individually with a resolution of 0.1°.

When no VNAV altitudes associated with a waypoint exist, and a target altitude is set, HITS box altitudes emanate from the current aircraft altitude and indicate a climb or descent, as appropriate, until reaching the target altitude. When a climb is shown, the HITS boxes are drawn at the higher of actual climb angle or the dynamic climb angle setting. When a descent is shown, the HITS boxes are drawn at an angle corresponding to the descent angle setting in the PFD BUGs menu.



---

**NOTE:**

This symbology emulates an altitude pre-selector and provides guidance to climb or descend real-time as if being issued an assigned altitude from ATC.

---

When at least one VNAV altitude associated with a waypoint exists, HITS boxes are guided by VNAV waypoints determined by VNAV altitude and VNAV offsets from flight plan waypoints. The two sources for VNAV altitudes come from the navigation database or are manually input through the ACTV menu. VNAV altitudes are automatically computed by the system using “look-ahead” rules if not coming from the navigation database or manually input.

When “look-ahead” finds a further VNAV altitude constraint above the previous VNAV altitude constraint (climb commanded), then an automatic VNAV altitude is continuously calculated for the waypoint based upon an immediate climb to the altitude constraint at the dynamic climb angle.

When “look-ahead” finds a further VNAV altitude constraint below the previous VNAV altitude constraint (descent commanded), then an automatic VNAV altitude is calculated for the waypoint based upon a descent to reach the VNAV altitude constraint at the associated waypoint using the descent angle setting. If no further VNAV altitude constraints are found, then the automatic VNAV altitude is set to the last valid altitude constraint.

When a VNAV climb is desired, the HITS boxes are drawn at a vertical position that is the higher of the following:

- 1) The dynamic climb angle emanating from the aircraft's present position (aircraft-referenced) (Figure 6-6);
- 2) The dynamic climb angle emanating from the next waypoint VNAV altitude (geo-referenced forward) (Figure 6-7); OR
- 3) The climb angle setting emanating from the previous waypoint VNAV altitude (geo-referenced backward) (Figure 6-8).



**NOTE:**

The geo-referenced backward calculation is only considered when the current leg is part of a procedure and is designed to provide pilot awareness if a specified climb angle gradient is not being met.

Once the HITS boxes intercept the VNAV altitude, further boxes are drawn with a zero angle to show a level-off followed by a level segment. Since five HITS boxes are shown, the level-off depiction becomes a compelling anticipatory cue for the pilot.

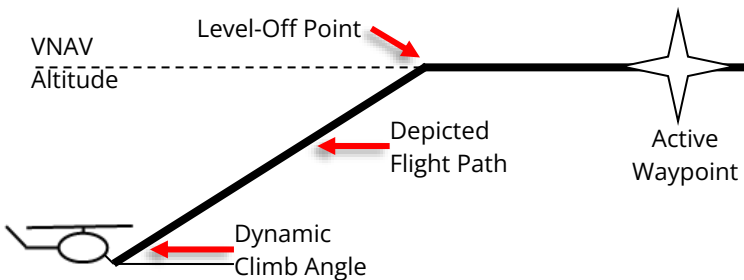


Figure 6-6: Highway in the Sky (Aircraft Referenced)

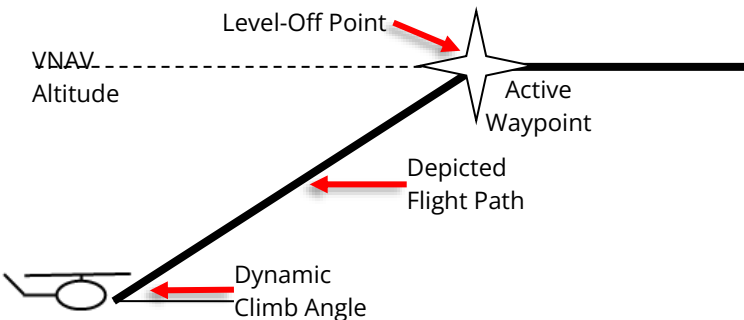


Figure 6-7: Highway in the Sky (Geo-Referenced Forward)

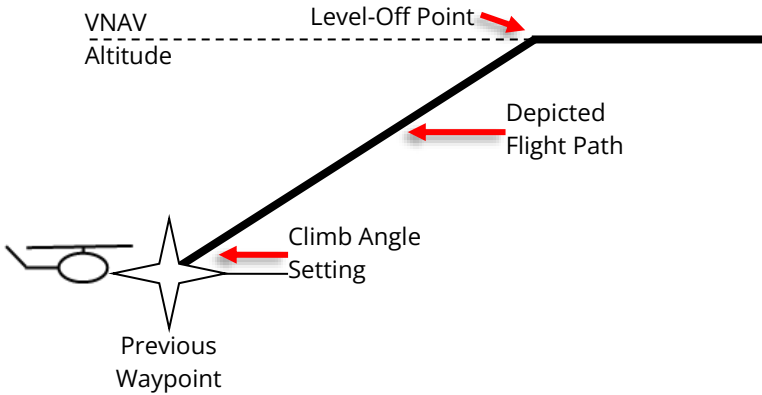


Figure 6-8: Highway in the Sky (Geo-Referenced Backward)

When a VNAV descent is desired, boxes are drawn with a zero angle until reaching a descent point. Further boxes are drawn downward at an angle corresponding to the descent angle setting. The descent point is defined by the intercept of a line emanating upward from the subsequent VNAV waypoint at the descent angle setting and a line representing level flight at the previous VNAV altitude. On the final approach segment of an IFR approach, descent angle and VNAV waypoint are defined in Table 6-5.

Table 6-5: Final Segment of IFR Approach, Descent Angle and VNAV Waypoint

Condition	VNAV Waypoint	Descent Angle
IFR approach with valid final approach segment data block containing a non-zero glide path angle	Glide Path Intercept Point (GPIP) as defined in final approach segment data block	Descent angle as defined in final approach segment data block
Absent or invalid final approach segment data block, or final approach segment data block glide path angle is set to 0°  No intermediate waypoints exist between FAF and MAP	Missed approach point location	Straight line from FAF to MAP location and altitudes
Absent or invalid final approach segment data block, or final approach	Missed approach point location	Steepest descent angle based upon straight lines from FAF and



Table 6-5: Final Segment of IFR Approach, Descent Angle and VNAV Waypoint

Condition	VNAV Waypoint	Descent Angle
segment data block glide path angle is set to 0°		subsequent intermediate waypoints to MAP location and altitudes
Intermediate waypoints exist between FAF and MAP		



Figure 6-9: Highway in the Sky Final Approach Segment


On the final approach segment of a VFR approach procedure, the higher of the descent angle setting or 3° is used.

Because five boxes are shown, the descent point depiction is an anticipatory cue. Figure 6-9 depicts descent guidance and creates an easily understood, yet safe, VNAV paradigm to meet the VNAV requirements current guidance.

The VNAV paradigm scheme creates an easily understood, yet safe, method to meet certification requirements. Simplicity is the primary objective and this paradigm is biased towards keeping the aircraft at the highest altitude possible for the longest time. The climb paradigm automatically compensates for an aircraft's ability to climb more steeply than specified and warns of being below a desired climb gradient when the aircraft is unable to meet the specified climb angle. Furthermore, this descent paradigm encourages flying stabilized, and continuous descent profiles.

Furthermore, the paradigm is biased towards keeping the aircraft at the highest altitude possible for the longest period. The climb paradigm compensates for an aircraft's ability to climb more steeply than specified and warns of being below a desired climb gradient when the aircraft is unable to meet the specified climb angle. The descent paradigm encourages flying stabilized approaches.

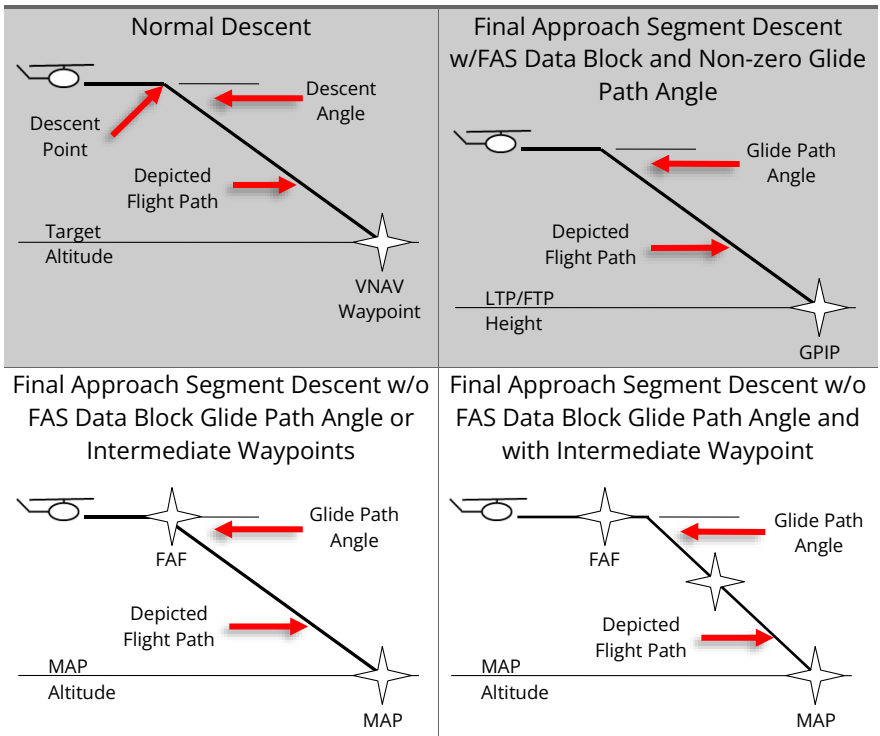Table 6-6: VNAV Paradigm



## 6.6. Direct-To

If the EFIS generates a WGS-84 geodesic path to a designated "To" fix, the aircraft captures this path without "S-turning" or undue delay. Where the selected "To" fix is in the active flight plan, the required transition is created as follows:

- 1) A phantom waypoint is created at the current aircraft location.
- 2) Waypoints prior to the phantom waypoint are automatically decluttered from the flight plan.
- 3) Phantom waypoint is designated a fly-over defined entry heading waypoint where entry heading is current aircraft track.

### 6.6.1. Direct-To Unnamed Waypoints inside Procedures

The following identifiers are implemented for unnamed waypoints inside a published procedure and are found on the map or inside the active flight plan.

- 1) -ALT- for altitude terminations

- |   |                                     |
|---|-------------------------------------|
| 2) -DIR- for waypoints that begin a Direct-To leg | 4) -INT- for intercept terminations |
| 3) -DME- for distance or DME terminations         | 5) -RAD- for radial terminations    |
|   | 6) -MAN- for manual terminations    |

## 6.7. Discontinuities

When the EFIS is unable to construct a smooth flight path, due to active flight plan waypoint spacing (i.e., spacing too close for turn radius), a discontinuity is placed between the waypoints. When a discontinuity exists, no path nor skyway is drawn between the waypoints. The pilot cannot activate the waypoint exiting the discontinuity, as it is not possible to provide path guidance to this waypoint.

Attempts to activate the waypoint exiting the discontinuity activates the next waypoint or, if there is no next waypoint (i.e., end of active flight plan), activation of the waypoint leading into the discontinuity.

### 6.7.1. Manual Termination Legs

Manual termination legs (ARINC 424 path types FM and VM) are a special case and are handled as follows:

- 1) The manual termination leg is rendered as a path on the database course/heading for 10NM beyond either:
  - a) the previous waypoint (manual leg not active); or
  - b) the nearest on-path point (manual leg active);
- 2) Rendering of the manual termination leg does not terminate with a waypoint symbol;
- 3) The manual termination leg is followed by a discontinuity;
- 4) Waypoint sequencing is suspended on the manual termination leg;
- 5) Once on the manual termination leg, **RESUME (L6)** appears;
- 6) When ready to end manual navigation and resume a path to the waypoint following the manual termination leg, press **RESUME (L6)** to create and activate a Direct-To path to the waypoint.



---

#### NOTE:

If the manual termination leg is not followed by another waypoint (other than a suppressed waypoint), **RESUME (L6)** does not appear, because there is no waypoint-to-waypoint sequencing to resume.

---

## 6.8. Magnetic Course

The source of magnetic variation, used for paths defined using magnetic course, is in accordance with the following:

- 1) If the leg is part of a database terminal area procedure and the magnetic variation is specified by the State for that procedure, the magnetic variation to be used is the value specified.
- 2) If the leg is not part of a procedure and the active fix is a VOR, the magnetic variation to be used is the published station declination for the VOR.
- 3) If the leg is not part of a procedure and the terminating fix is not a VOR, the magnetic variation to be used is defined by the system using an internal model.

The EFIS computes magnetic variation at any location within the region where flight operations may be conducted using magnetic north reference. The assigned magnetic variation is calculated with the NIMA GEOMAG algorithm and World Magnetic Model appropriate to the five-year cycle.

### 6.8.1. AHRS Modes for Heading Source

AHRS Slaved—EFIS Magnetic North: Standard mode of operation. Everything displayed relative to magnetic north drift free.

AHRS Slaved—EFIS True North: Everything displayed relative to true north with drift free heading. The preferred way to operate in areas where navigation is done relative to true north. (See Section 8 Appendix for limitations on Earth's magnetic flux horizontal field.)

AHRS Free/"DG"—EFIS Magnetic North: Use when operating around significant magnetic disturbances in areas where navigation is done relative to magnetic north. Ensure the compass rose is slewed to a magnetic north value.

AHRS Free/"DG"—EFIS True North: Method of operation in high-latitude areas where navigation is accomplished relative to true north. Heading is not drift free and requires periodic correction. This mode may also be used when operating around significant magnetic disturbances in areas where navigation is done relative to true north. Ensure the compass rose is slewed to a true north value.

### 6.8.2. EFIS True North Mode

True north mode is selectable either through **OBS (L4), TRUE NORTH (L1)** or an external switch, if configured in EFIS limits. This mode is intended to address aircraft requirements during high or low latitude operations and should be used when the AHRS has been set to free-gyro mode. See Section 2 Display Symbology for true north mode symbology examples.



The parallel offset function is not available nor applies to:

- 1) Legs that are part of approach procedures (IFR and VFR); or
- 2) Legs with complex geometries or that begin or end with dynamic terminations (ARINC 424 path types other than CF, DF, or TF or any leg where the starting waypoint is not a fixed position); or
- 3) Legs that begin at an aircraft starting position (reference waypoint in a DP or Phantom waypoints created by the Direct-To function).

Parallel offset functions do not propagate through the following:

- 1) Any waypoint at the beginning or end of a route discontinuity; or
- 2) Any waypoint at the beginning or end of a prohibited leg type; or
- 3) A waypoint with an unreasonable path geometry (defined as a turn greater than 120°).

When the parallel offset function begins or ends within a flight plan due to the above constraints, parallel offset entry (PTK+) or exit (PTK-) waypoints are inserted into the flight plan. **PTK ENDING** appears in sufficient time to alert the pilot to return to the original path. Discontinuities precede parallel offset entry waypoints and follow parallel offset exit waypoints. This allows the pilot to navigate to and from the parallel offset as required.



Figure 6-11: Parallel Offset PTK-

The EFIS provides guidance to parallel tracks at a selected offset distance. When executing a parallel offset, the navigation mode and all performance requirements of the original route in the active flight plan are applicable to the offset route. The EFIS provides for entry of offset distance in NM or KM

(depending upon setting of “speed Units” in EFIS limits) in increments of 1 unit left or right of course and is capable of offsets of at least 20 units. Offset mode is indicated with an advisory flag, for example, **PTK = L 20NM**/**PTK = L 20KM**. When in offset mode, the EFIS provides reference parameters (e.g., cross-track deviation, distance-to-go, time-to-go) relative to the offset path and offset reference points.

Once a parallel offset is activated, the offset remains active for all flight plan route segments until removed automatically (transitioning through a parallel track exit waypoint), until the flight crew enters a “Direct-To” routing or activates a new flight plan route, or until (manual) cancellation.


**NOTE:**

If a parallel offset is entered in the active flight plan and then cancelled, that active flight plan is no longer eligible for configuring another parallel offset without deleting and reopening due to the creation of a discontinuity.

Table 6-7: Parallel Offsets Symbols and Description






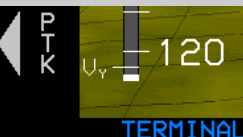



Symbol	Description	
	Distance in NM	Parallel offset has been created and has a designated ending waypoint.
	Distance in KM	
	Designated ending waypoint of parallel offset	
 	Distance in NM	Parallel track advisory indicating offset track 3 NM/3KM to the right of host route.
	Distance in KM	
	PTK (L4) appears when the active route is eligible for a parallel offset.	

Table 6-7: Parallel Offsets Symbols and Description

Symbol	Description
	Approaching end of parallel offset waypoint
	The absence of <b>PTK (L4)</b> indicates a parallel offset is not allowed for reasons stated above.
	Indicates each waypoint is a part of the parallel offset.

## 6.11. Geodesic Path Computation Accuracy

The cross-track path deviation error between the computed path used to determine cross-track deviations and the true WGS-84 geodesic is less than 10% of the horizontal alert limit of the navigation mode applicable to the leg containing the path.

### 6.11.1. GPS Altitude

WGS-84 ellipsoid altitude received from the GPS/SBAS is converted to geodetic (MSL) altitude using the EGM 2008 geoidal database.

## 6.12. Navigation Database Requirements

The updateable navigation database contains at least the following location and path information, referenced to WGS-84, with a resolution of 0.01 minute (latitude/longitude) and 0.1° (for course information) or better at all of the following for the area(s) in which IFR operations are intended:

- 1) Airports.
- 2) VORs, DMEs (including DMEs collocated with localizers), collocated VOR/DMEs, VORTACs, and NDBs (including NDBs used as locator outer marker).
- 3) All named waypoints and intersections are shown on en route and terminal area charts.
- 4) All airways are shown on en route charts, including all waypoints, intersections, and associated RNP values (if applicable). Airways are retrievable as a group of waypoints. Select the airway by name to load the



appropriate waypoints and legs between desired entry and exit points into the flight plan.

- 5) RNAV DPs and STARs, including all waypoints, intersections, and associated RNP values (if applicable). DPs and STARs are retrievable as a procedure. Select the procedure by name to load the appropriate waypoints and legs into the flight plan.
- 6) LNAV approach procedures in the area(s) in which IFR operation is intended consist of:
  - a) Runway number and label (required for approach identification);
  - b) Initial approach waypoint (IAWP);
  - c) Intermediate approach waypoint(s) (IWP), when applicable;
  - d) Final approach waypoint (FAWP);
  - e) Missed approach waypoint (MAWP);
  - f) Additional missed approach waypoints, when applicable; and
  - g) Missed approach holding waypoint (MAHWP).

The EFIS also stores the data necessary to support stand-alone LNAV/VNAV approaches, such as LNAV/VNAV approaches to runway ends that do not also have approaches with a FAS data block. The LNAV/VNAV approach data consist of the height of the runway threshold, threshold crossing height, and glide path angle.

The complete sequence of waypoints and associated RNP values (if applicable), in the correct order for each approach, is retrievable as a procedure. Select the procedure by name to load the appropriate waypoints and legs into the flight plan.

- 7) LPV, LP, and/or LNAV/VNAV published procedures are available in the area(s) where IFR operation is intended. Select a procedure by name to load the appropriate waypoints and legs into the active flight plan.



---

**CAUTION:**

**Failure to update IAP/APD data with current data results in expired NRST APD, IAP APD, or APPR plate images to appear on the MFD.**

---

**NOTE:**

Waypoints used as a final approach waypoint (FAWP) and LTP/FTP/MAWP in an LNAV/VNAV procedure are uniquely identified as such to provide proper approach mode operation.

The LNAV/VNAV approach data consists of height of the runway threshold, threshold crossing height, and glide path angle.

**NOTE:**

Manual entry and or update of the navigation database is not possible. Recalling data from storage does not prevent it from being retained for later use.

### 6.13. Default GPS/SBAS Navigation Modes

In the default GPS/SBAS mode, the EFIS has en route, terminal, LNAV approach, LNAV/VNAV approach, LP approach, LPV approach, VFR approach, and departure navigation modes. Mode annunciation, alert limits (horizontal and vertical), and CDI FSD (horizontal and vertical) are determined by navigation mode.

Table 6-8: Default GPS/SBAS Navigation Modes

Navigation Mode	Annunciation
En route	None
Terminal	<b>TERMINAL</b>
LNAV Approach	<b>LNAV APPR</b>
LNAV/VNAV Approach	<b>LNAV/VNAV APPR</b>
LP Approach	<b>LP APPR</b>
LPV Approach	<b>LPV APPR</b>
VFR Approach	<b>VFR APPR</b>
Departure	<b>TERMINAL</b>

Table 6-9: Default Navigation Modes Based Upon Region of Operation

Default Navigation Mode	Definition of Region (All distances are always in NM units)
Departure	Selected when active waypoint is first waypoint of a departure or missed approach procedure <u>and</u> active leg heading is aligned ( $\pm 3^\circ$ ) with active runway heading. Also, set when active waypoint is MAWP, but a missed approach has been manually activated.

Table 6-9: Default Navigation Modes Based Upon Region of Operation

Default Navigation Mode	Definition of Region (All distances are always in NM units)
VTF Approach (LNAV, LNAV/VNAV, LP, or LPV)	<p>VTF IFR approach has been selected; <u>and</u>            within 30NM of the active runway; <u>and</u>            on the final approach segment, the FAWP is the active waypoint or within 2NM of the FAWP; <u>and</u>            bearing to FAWP is within 45° of final approach segment track (treated as a mode entry criteria); <u>and</u>            aircraft track is within 90° of final approach segment track (treated as a mode entry criteria).</p>
Approach (LNAV, LNAV/VNAV, LP or LPV)	<p>IFR approach has been selected; <u>and</u>            within 30NM of the active runway; <u>and</u>            MAWP or FAWP is active waypoint; <u>and</u>            if FAWP is active waypoint:            bearing to FAWP is within 45° of final approach segment track (treated as a mode entry criteria); <u>and</u>            aircraft track to FAWP is within 90° of final approach segment track (treated as a mode entry criteria); <u>and</u>            either segment leading into FAWP is not a holding pattern, or pilot has elected to continue out of holding.</p>
VFR Approach	<p>VFR approach has been selected; <u>and</u>            within 30NM of the active runway/user waypoint; <u>and</u>            active runway/user waypoint is the active waypoint; <u>and</u>            the bearing to the active runway/user waypoint is within 45° of the final approach segment track (treated as a mode entry criteria); <u>and</u>            the aircraft track is within 90° of the final approach segment track (treated as a mode entry criteria).</p>
Terminal	<p>Not in departure mode; <u>and</u>            Not in approach mode; <u>and</u>            active waypoint is part of a departure <u>or</u> active waypoint, and previous waypoint are parts of an arrival or approach <u>or</u> within 30NM of the departure airport, arrival airport, or runway.</p>

Table 6-9: Default Navigation Modes Based Upon Region of Operation

Default Navigation Mode	Definition of Region (All distances are always in NM units)
En Route	Not in departure, approach, nor terminal modes.

**NOTE:**

During RNP 0.3 approach (manually or coded), the scale remains in RNP 0.3.

**6.14. GPS/SBAS CDI Scale**

Table 6-10: Summary of Changes In Cross-Track FSD

From	To En Route	To Terminal	To Approach
	Distances are always in NM units		
En Route		Change from $\pm 2$ NM FSD to $\pm 1$ NM FSD over distance of 1 NM; start transition when entering terminal mode.	
Terminal	Change from $\pm 1$ NM FSD to $\pm 2$ NM FSD over distance of 1 NM; start transition when entering en route mode.		If VTF, switch immediately. Otherwise, change from $\pm 1$ NM FSD to approach FSD over distance of 2 NM; start transition at 2 NM from FAWP.
Approach		Change to $\pm 1$ NM.	
Departure		If initial leg is aligned with runway, change from $\pm 0.3$ NM FSD to $\pm 1$ NM FSD at turn initiation point of first fix in departure procedure.	

**NOTE:**

For RNP 0.3 routes, the time to alert (TTA) is the same as for the approach. For RNP 0.3, the EFIS uses a 10-second TTA when using GPS-only and a 2-second TTA when using EGNOS.

**NOTE:**

The sensitivity change from  $\pm 0.3\text{NM}$  to  $\pm 1\text{NM}$  can take as long as 30 seconds to provide a smooth transition for autopilots.

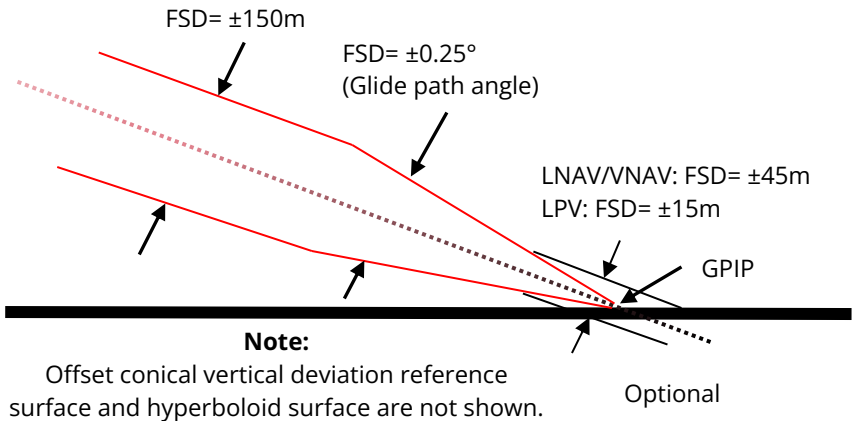
### 6.14.1. OBS Setting of CDI

In automatic mode, the system controls the scale and OBS setting. The selected navigation source is annunciated below the CDI as follows:

- 1) NAV: FMS1/FMS2
- 2) NAV: VOR1/LOC1
- 3) NAV: BC1/BC2 (annunciated instead of LOC1/2 when course error exceeds  $104^\circ$ )
- 4) NAV: VOR2/LOC2

### 6.14.2. Alerting Scheme for LNAV/VNAV Procedures

During normal operation with FMS source of navigation guidance, when an LNAV/VNAV procedure has been entered into the active flight plan and the EFIS is in LNAV/VNAV, the vertical and lateral integrity flags are out of view, and guidance displays show the deviations from track in vertical and lateral dimensions. The linear vertical scale limits of the VDI for LNAV/VNAV and LPV approaches are shown in Figure 6-12.



Ref: DO-229D Figure 2-16

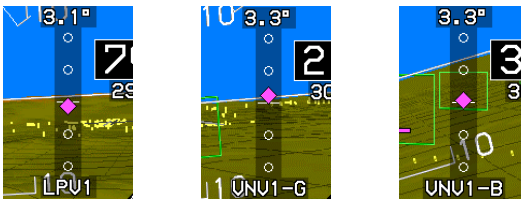


Figure 6-12: Vertical Deviation Indicator Linear Deviation

### 6.14.3. Alerting Scheme for LPV/LP Procedures

During normal operation with FMS source of navigation guidance, when an LPV or LP procedure has been entered into the active flight plan and the EFIS is in LPV or LP, the vertical and lateral integrity flags are out of view (only lateral integrity flag for LP). Additionally, the guidance displays show the deviations from track in vertical and lateral dimensions (only lateral for LP).

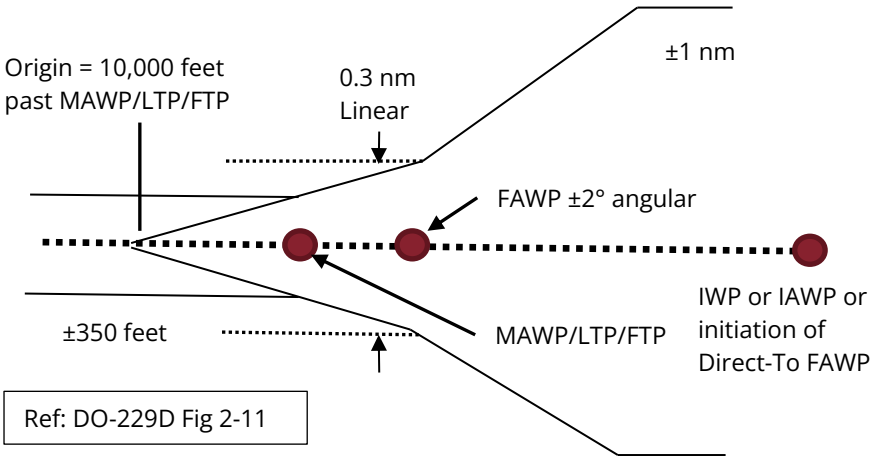


Figure 6-13: Lateral Deviation Indicator

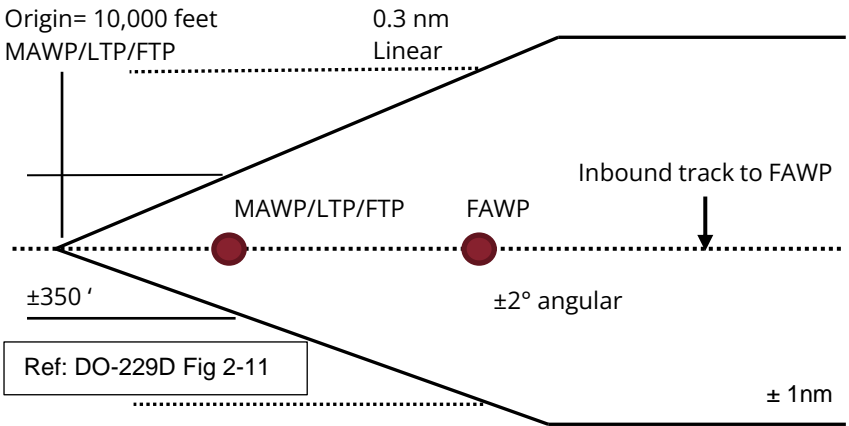


Figure 6-14: FSD Lateral Deviation Indicator (VTF Approach)



**NOTE:**

Non-Numeric Cross-Track Deviation

The full-scale deflection for LNAV is either identical to LNAV/VNAV or one of the following:

Angular deviations

- 1) If a VTF approach has not been selected:

- a) Prior to 2NM from the FAWP, the FSD is  $\pm 1$  NM
  - b) Between 2NM from the FAWP and the FAWP, the FSD is gradually changed to the FSD specified in c) below at the FAWP;
  - c) At and beyond the FAWP, but before initiating a missed approach, the FSD is the minimum of; a constant FSD of  $\pm 0.3$  NM; or angular FSD defined by a  $\pm 2.0^\circ$  wedge with the origin located 10,000 feet past the MAWP. The FSD continues to decrease or reach a minimum of  $\pm 350$  feet.
- 2) If a VTF has been selected, the FSD is the minimum of; constant FSD of  $\pm 1$  NM; or angular FSD defined by a  $\pm 2.0^\circ$  wedge with an origin located 10,000 feet past the MAWP. The FSD continues to decrease or reach a minimum of  $\pm 350$  feet.

### 6.15. Approach Type Selection

The EFIS selects the approach type (LNAV, LNAV/VNAV, LP, or LPV) when entering approach mode with the following order of precedence and prerequisites:

- 1) LPV:
  - a) ARINC-424 "Level of Service" indicates LPV minimums are published;
  - b) Valid long-term, fast, and ionospheric SBAS corrections are available and being applied to at least 4 GPS satellites;
  - c) Final approach segment data block exists and passes CRC check; and
  - d) Horizontal and vertical alert limits from final approach segment data block are predicted to be supported.
- 2) LP: Same precedence and prerequisites as LPV
- 3) LNAV/VNAV:
  - a) ARINC-424 "Level of Service" indicates LNAV/VNAV minimums are published;
  - b) If a final approach segment data block exists, it passes CRC check; and
  - c) Horizontal alert limit of 556m (.3NM) is predicted to be supported.



---

**NOTE:**

Because the EFIS inherently supports barometric VNAV, it is not a prerequisite that the vertical alert limit be supportable, nor is it a

---



---

prerequisite that valid long-term, fast, and ionospheric SBAS corrections to be available and applied to at least four GPS satellites. Rather, the vertical alert limit (50m) and SBAS correction tests are used to determine whether to present guidance based upon GPS altitude or barometric altitude.

---

- 4) LNAV: Default approach type selected when none of the above selections are made, and there are no prerequisites for selecting LNAV.

The EFIS continuously displays the approach type (mode indication) after selection. The EFIS does not degrade the approach type after selection unless the approach procedure is reselected or changed.

**NOTE:**

These are GPS/SBAS modes and still appear during a ground-based approach such as an ILS.

Some instrument procedures include notes stating, "RNP 0.3 required," and are coded as an RNAV procedure. In these cases, select manual RNP to see the RNP and ANP values on the PFD.

---

### 6.15.1. Approach Path Definition (GPS Procedures)

Normal IAP path definitions are as specified in the procedure contained in the navigation database. Deviations are provided with respect to the active leg of the approach procedure.

**NOTE:**

The threshold location is referred to as the LTP if it is co-located with the runway and FTP if it is displaced from the runway. The glide path angle is defined relative to the local tangent plane of the WGS-84 ellipsoid. This path definition mimics ILS glide slope characteristics, where the virtual glide path antenna location is offset from the runway by less than 500 feet.

---

### 6.15.2. VTF IFR Approach

The pilot may select a VTF IFR approach, indicating the pilot does not intend to fly the entire procedure. When a VTF IFR approach is selected, the EFIS creates an initial point (IP) waypoint on the extended final approach course to provide deviations relative to the extended final approach course. The IP is a fly-over defined exit heading waypoint, and the leg prior to the IP is designated a

discontinuity. Until the FAWP is sequenced, **VECTORS** indicates a VTF IFR approach has been selected, guidance is not relative to a published approach path, and TERPS clearances are not assured.

### 6.15.3. VTF VFR Approach

The pilot may select a VFR approach to a runway or user waypoint with a defined approach bearing. When a VFR approach is selected, the EFIS creates an IP waypoint approximately 12 NM on the extended final approach course to provide deviations relative to the extended final approach course. The IP is designated as a fly-over defined exit heading waypoint, and the leg prior to the IP is designated as a discontinuity.



Figure 6-15: VTF VFR Approach

As depicted in Figure 6-15, during the VTF VFR approach, the aircraft is flown towards the IP. Since the IP is designated as a discontinuity, proceeding direct is not possible. When attempting to proceed direct to the IP, only the active leg between the IP and the selected runway is activated.

### 6.16. Required Navigation Performance


The EFIS supports required navigation performance by means of:

- 1) Manually entered RNP values; or
- 2) RNP values are automatically retrieved from the navigation database associated with airways or procedures (DPs, STARs, or IAPs).

Table 6-11: RNP Order of Precedence

Navigation Mode	Annunciations	Conditions
Manual RNP (manually set between 0.1NM and 15NM)	<b>RNP: 1.6M</b> <b>ANP: 0.1</b>	Navigation mode is RNP. Manually entered RNP is used to determine CDI FSD, LON and LOI

Table 6-11: RNP Order of Precedence

Navigation Mode	Annunciations	Conditions
		alerting. Manual RNP overrides all other modes.
Manual RNP on final approach segment		System conforms to the mode in the associated ARINC-424 "Level of Service" navigation database record. Level of service tracks the minima lines on the published approach plate.
Automatic RNP (retrieved from navigation database)	<b>RNP: 0.3A</b>	When outside the approach region of operation, if a manually entered RNP value does not exist, but an automatic RNP value retrieved from the database does exist.
Automatic RNP on final approach segment	<b>ANP: 0.1</b>	
CDI shows RNP navigation mode, and automatically retrieves the RNP value to determine CDI FSD, LON alerting, and LOI alerting.		


**NOTE:**

When outside the approach region of operation and neither a manually entered nor automatic RNP value exists, the system operation defaults to GPS/SBS operations.

### 6.16.1. Automatic RNP Mode



In automatic RNP mode, after sequencing the FAWP, the EFIS indicates when the navigation system is no longer adequate to conduct or continue the approach by displaying the LON condition inside the CDI on the transmit enabled display. The flag appears until no longer in an approach mode.

Figure 6-16: Automatic RNP Mode

### 6.17. Missed Approach and Departure Path Definition

Once on the final approach segment, the pilot may initiate an immediate missed approach or arm the system to execute the missed approach at the MAWP. If armed before crossing the MAWP, the equipment arms the missed approach for automatic initiation at the MAWP. If a missed approach is not

armed, nor initiated prior to crossing the MAWP, the EFIS switches to FROM mode at the MAWP and continues the same course.

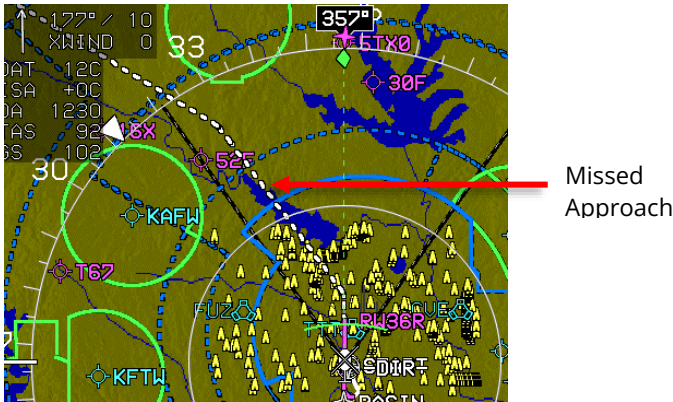


Figure 6-17: Missed Approach and Departure Path

If the pilot initiates the missed approach, the EFIS provides guidance relative to the procedure. If a missed approach is armed prior to crossing the MAWP, the desired path to and after the MAWP is defined by the procedure. If the first leg in the missed approach procedure is not a straight path aligned within  $3^\circ$  of the final approach course, the FSD changes to terminal mode FSD ( $\pm 1$  NM) when the missed approach is initiated. Otherwise, the FSD changes to  $\pm 0.3$  NM when the missed approach is initiated (departure mode) and changes to terminal mode FSD ( $\pm 1$  NM) at the turn initiation point of the first waypoint in the missed approach procedure.

## 6.18. Loss of Navigation Monitoring

### 6.18.1. Loss of Integrity Caution Monitoring

The EFIS provides a caution, independent of any operator action when the equipment has a loss of integrity monitoring. When horizontal protection level (HPL) exceeds the applicable horizontal alert limit (HAL) for the longer than applicable time to alert and  $HPL_{SBAS}$  exceeds the HAL for the current navigation mode for longer than 2 seconds. The caution returns to its normal state immediately upon termination of the responsible condition. The receiver transmits only one type of HPL, either  $HPL_{FD}$  or  $HPL_{SBAS}$ , as valid at any time.

Table 6-12: Loss of Integrity Caution Monitoring

Mode of Flight	HAL	Time to Alert
<b>RNP: 0.10M</b>	As manually set or automatically retrieved	10 Seconds (RNP<2NM)
<b>RNP: 0.10A *</b>		30 Seconds (otherwise)
En route	2 NM	30 Seconds

Table 6-12: Loss of Integrity Caution Monitoring

Mode of Flight	HAL	Time to Alert
<b>TERMINAL</b>	1 NM	10 Seconds
<b>LNAV APPR *</b>	0.3 NM	10 Seconds
<b>LNV/VNV APPR *</b>	0.3 NM	10 Seconds
<b>LP APPR *</b>	0.3 NM	10 Seconds
<b>LPV APPR</b>	0.3 NM	10 Seconds
Departure	0.3 NM	10 Seconds

\* Only applicable before sequencing FAWP. Meeting loss of integrity criteria after sequencing the FAWP is defined as LON.


**NOTE:**

This aircraft is equipped for the following individual levels of RNP but may not be capable due to limited satellite coverage. Manual RNP is selectable between 0.10NM and 15NM as follows:

- 1) 0.01NM increments between RNP 0.10 and RNP 0.3
- 2) 0.1NM increments between RNP 0.3 and RNP 2
- 3) 1NM increments between RNP 2 and RNP 15

### 6.18.2. Faults Menu

Use the faults menu to distinguish the cause of a LON caution. Table 6-13 explains conditions and caution termination for each mode of flight.

Table 6-13: Summary of Faults Menu

Mode of Flight	Conditions	Caution Termination
Manual RNP <b>RNP: 0.10M</b> <b>RNP: 15.0M</b>	LON displayed with a 10-second time to alert if RNP value is less than 2NM and a 30-second time to alert.	Returns to normal state immediately upon termination of responsible condition.
Automatic RNP <b>RNP: 0.10A</b> <b>RNP: 15.0A</b>	After sequencing the FAWP, LON displayed when navigation system is no longer adequate to conduct or continue the approach.	Appears until equipment no longer in an approach mode.
En route and Terminal <b>TERMINAL</b>	LON displayed when navigation system is no longer adequate to conduct or continue the navigation.	Returns to normal state immediately upon termination of responsible condition.

Table 6-13: Summary of Faults Menu

Mode of Flight	Conditions	Caution Termination
LNAV Approach mode <b>LNAV APPR</b>	Upon passing the FAWP, flag appears until EFIS is no longer in an approach mode.	Returns to normal state immediately upon termination of responsible condition
LNAV/VNAV Approach mode <b>LNV/VNV APPR</b>	LON displayed when navigation system is no longer adequate to conduct or continue the approach.	After sequencing the FAWP, LON/VERT LON flags appear until the equipment is no longer in an approach mode. As defined above with the exception that when the LNAV/VNAV approach mode is predicated upon Barometric VNAV. (See Note)
LP or LPV Approach mode <b>LP APPR</b> <b>LPV APPR</b>	LON or VERT LON displayed when navigation system is no longer adequate to conduct or continue the approach.	Prior to sequencing the FAWP, flags return to normal state immediately upon termination of the responsible condition.
Note: A supplemental test is added for vertical flagging when barometric altitude information is in a failed state.		

### 6.19. Manual Holding Patterns

Most waypoints within an active flight plan can have a manual holding pattern created with the following parameters:

- 1) Inbound course to the holding fix with 1° increment relative to magnetic or true north.
- 2) A left or right turn direction.
- 3) A leg distance, settable in either time (increments of 0.1 minutes from 0.5 minutes to 5.0 minutes) or distance (in NM or KM.) (1-unit Increments from 1 to 25 units).
- 4) When a time setting is used, the speed used to calculate distance is the holding speed set in EFIS limits.

### 6.20. Selection of an Instrument Procedure

When an instrument procedure is selected and active, the receiver notifies the pilot of the most accurate level of service supported by the combination of the

GPS/SBAS signal, receiver, and selected approach using naming conventions on the minima lines of the selected approach procedure. Once the level of service has been given, the EFIS operates in this mode for the duration of the procedure unless the level of service is unavailable. The EFIS cannot change back to a more accurate level of service until the next time an approach is activated. The following are samples of step-by-step procedures.

### 6.20.1. Standard Instrument Departure (DP) (Step-By-Step)

When valid and the selected waypoint is an airport with a DP in the database, the pilot is presented a selection list of DPs, followed by selection list of transition(s) and runways as appropriate.

- 1) Press **ACTV (L2)** departure airport must be entered as a waypoint.
- 2) Use **1** to highlight desired airport then push to enter.
- 3) Use **1** to highlight **DP..** then push to enter.
- 4) Use **1** to highlight desired DP then push to enter.
- 5) Use **1** to highlight desired transition, then push to enter.
- 6) Use **1** to highlight desired runway then push to enter. Press **EXIT (R1)** to exit active menu.
- 7) If ATC issues radar vectors to assigned route as published in the DP text notes, press **ACTV (L2)**, edit active flight plan accordingly.
- 8) Push **1**. Rotate to highlight **NAV LOG** then push to enter. View first portion then rotate **1** to view remainder of NAV Log, if necessary.

### 6.20.2. VFR Approach to User Waypoint (Step-By-Step)

To create a VFR approach procedure for any of the possible 999 user waypoints stored in the system, it is assumed that user waypoints have been uncluttered on the Map page and user waypoints are visible. In this scenario, a new user waypoint is created by panning to the desired location. Creation of user waypoints is described in Section 3 Menu Functions and Step-By-Step Procedures.

- 1) While maneuvering around a desired area, press **MENU (R1)**, within 10 seconds press **FORMAT (R8)**. Rotate **1** to **PAN ON** and then push to enter.
- 2) Press **NORTH (L7)**, **SOUTH (L8)**, **EAST (R7)**, or **WEST (R8)** to position the panning ownship symbol near the desired landing area.
- 3) Press **MENU (R1)**, within 10 seconds press **DESIG (L3)**, which drops a user waypoint automatically named PN###.

- 4) Before a VFR approach can be created to this waypoint, it must be edited with an approach bearing and saved.
- 5) Assuming crossfill is normal, on either MFD or PFD, press **FPL (L1)**, rotate **⬇** to **CREATE-EDIT..**, then push to enter.
- 6) Use **⬇** to highlight **EDIT USER WPT** then push to enter.
- 7) Use **⬇** to highlight waypoint then push to enter.
- 8) Use **⬇** to sequence all five spaces to create desired name for user waypoint then push to enter through entire editing process, to include adding an approach bearing.
- 9) Either press **SAVE (R7)** to save the changes or press **➡ (R8)** to save changes and begin navigation guidance to user waypoint and automatically return to **EDIT WHICH USER WPT:** menu.
- 10) If **➡ (R8)** was pressed followed by **EXIT (R1)** to exit **EDIT WHICH USER WPT:** menu, press **ACTV (L2)** to open active flight plan.
- 11) Push **⬇** to open list of available options for the user waypoint.
- 12) Use **⬇** to highlight **VFR APPR..**, then push to enter.
- 13) Push **⬇** to accept the use of the desired waypoint or press **EXIT (R1)**.
- 14) Use **⬇** to change map scale as desired then turn the aircraft for a downwind toward the IP. (Automatically created approximately 12NM out on the approach bearing approach bearing to the user waypoint.)
- 15) If desired, press **MENU (R1)**, press **BUGS (R2)**, and then press **VNAV CDA (R4)**. Push **⬇** to enter **DCND ANG..**, use **⬇** to set desired angle of descent, then push to enter.
- 16) Upon approaching top of descent (TOD), the vertical guidance provides HITS down to 50' above surface elevation.

**NOTE:**

If crossfill is inhibited, operation can only be accomplished on the side with the desired waypoint in the active flight plan.



### 6.20.2.1. For VFR Flight Planning

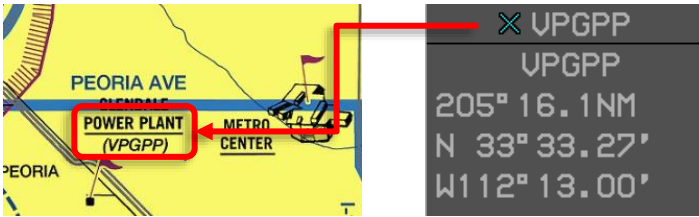


Figure 6-18: VFR Waypoint

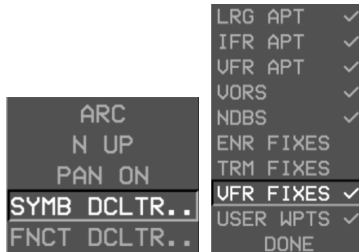


Figure 6-19: Map Format Options

### 6.20.3. Standard Terminal Arrival Route (STAR) (Step-By-Step)

If the selected waypoint is an airport with a published STAR, this option is available for selection from a list of available STARs, transitions, and runways. After selection, the appropriate STAR is created and displayed on the Map page. Activating a STAR deletes any pre-existing STAR, and it is inserted prior to any approach waypoints if previously entered.

STARs normally terminate at a fix near the airport, so a radar vector or feeder route is used for transition to the approach phase of the arrival. If an instrument approach is activated during the STAR, the approach waypoints are inserted after the STAR.

- 1) Press **ACTV (L2)** and use **1** to highlight arrival airport then push to enter. Use **1** to highlight **STAR..** then push to enter.
- 2) **PICK STAR:** Use **1** to highlight desired STAR. Push to enter.
- 3) **PICK TRANS:** Use **1** to highlight desired transition (\* indicates most logical transition from avenue of arrival). Push to enter.
- 4) **PICK RW:** Use **1** to highlight desired runway then push to enter.
- 5) ATC clears direct XXX and ILS/DME RWY XXX. Press **ACTV (L2)**, rotate **1** to **XXX**, press **➡ (R4)**, then push **1** to enter. (See § 6.20.4)

#### 6.20.4. ILS Instrument Approach (Step-By-Step)

- 1) Press **ACTV (L2)**. Use **1** to highlight desired airport and then push to enter.
- 2) Use **1** and highlight **IFR APPR...** Push to enter.
- 3) **PICK APPR:** Use **1** to highlight desired instrument approach and then push to enter.
- 4) **PICK TRANS:** Use **1** to highlight desired transition (\* indicates most logical from current position). Push to enter.
- 5) **PICK RW:** Use **1** to highlight assigned runway for landing then push to enter. (Colors selected runway light gray.) Press **EXIT (R1)** to exit active menu.



#### NOTE:

HITS indicates guidance to follow GPS overlay of the localizer and glide slope. However, the localizer source for CDI and glide slope receiver VDI are the primary navigation sources for guidance on this ILS approach. Ensure the desired VLOC is selected as the OBS source. Passing the FAF, press **ARM (L6)** to arm the missed approach procedure and continue waypoint sequencing.

#### 6.20.5. ILS Approach with Manual Termination Leg in Missed Approach Procedure (Step-By-Step)

See § 6.7.1 for more information on manual termination legs.

- 1) Activate ILS as described in § 6.20.4. The step-by-step procedure assumes the approach was armed and the aircraft flew past the MAWP.
- 2) Past the MAWP, auto nav source switches to FMS (as configured). The current -ALT- (altitude termination leg) climbing to #####.
- 3) After meeting the Altitude Termination leg requirements, automatic waypoint sequencing is suspended and ready for pilot action to press **RESUME (L6)**.
- 4) After **RESUME (L6)** is pressed, normal waypoint sequencing resumes, course to next active waypoint appears as a magenta line, and active waypoint information is updated.

#### 6.20.6. LOC Back Course Instrument Approach (Step-By-Step)

- 1) Press **ACTV (L2)**. Use **1** to highlight airport active waypoint. Push to enter.
- 2) Use **1** to highlight **IFR APPR..** then push to enter.

- 3) **PICK APPR:** Use **1** to highlight LOC back course procedure then push to enter.
- 4) **PICK TRANS:** Use **1** to select desired transition (\* indicates most logical from current position). Push to enter.
- 5) **PICK RW:** Use **1** to select desired runway. Push to enter. Press **EXIT (R1)** to exit active menu.
- 6) Assume ATC issued clearance to proceed direct to the FAF. Press **ACTV (L2)**. Use **1** to highlight the FAF then press **➔ (R4)** Then push to enter.
- 7) Press **EXIT (R1)** to exit active menu; or
- 8) Push **1**. **WAYPOINT** appears. Push **1** to accept the FAF as a waypoint with no further action.


**NOTE:**

HITS indicates guidance to follow GPS overlay of the localizer and glide slope. However, the localizer source for CDI and glide slope receiver VDI are the primary navigation sources for guidance on this ILS approach. Ensure the desired VLOC is selected as the OBS source.

- 9) Press **OBS (L4)**, and then press **NAV VLOC1 (L3)** or **NAV VLOC2 (L4)**, as applicable. Use **1** to set back course bearing then push to enter. This results in proper sensing of back course CDI indications.
- 10) After passing the FAF, **MISS (L5)** and **ARM (L6)** appear. Press **ARM (L6)** to arm the missed approach for automatic waypoint sequencing upon passing the MAWPT.
- 11) Passing the MAWP, nav source automatically switches to FMS (as configured), and CDI color changes from cyan to magenta.
- 12) If entering the published MAWPT hold, and additional waypoints follow in active flight plan, **CONT (L6)** appears for one touch cancelation of **SUSPEND** and navigation guidance to next leg of active flight plan.

### 6.20.7. RNAV (GPS) Instrument Approach to LP Minima (Step-By-Step)

- 1) Select desired airport and desired **IFR APPR..** as described above with matching 5-digit channel number from instrument approach chart.
- 2) **PICK TRANS:** Use **1** to highlight desired transition (\* indicates most logical from current position). Push to enter.
- 3) **PICK RW:** Use **1** to highlight desired runway. Push to enter.

- 4) Rotate **1** to desired waypoint in active flight plan, then press **D➔ (R4)**, push **1** to continue.
- 5) Past the FAF, press **ARM (L6)** for one touch arming of the missed approach leg.
- 6) This leg changes the VDI source to VNV2-G, and **LP APPR** replaces **TERMINAL** for an indication of the approach mode.
- 7) Missed approach is executed. Nav source remains FMS, but FSD scaling automatically switches to 0.3NM.
- 8) Active waypoint information describes the altitude termination leg ahead.

#### 6.20.8. RNAV (GPS) Instrument Approach to LPV Minima (Step-By-Step)

- 1) Select desired airport and desired instrument approach, transition, and runway as described as described above with matching 5-digit channel number from instrument approach chart.
- 2) ATC issues clearance direct XXXXX and cleared for RNAV XXXXX approach. Press **ACTV (L2)**, use **1** to highlight assigned fix, press **D➔ (R4)**, then push **1** to accept waypoint with no changes or press **EXIT (R1)**.
- 3) Inside of FAF, **RNP: 0.10A/RNP: 15.0A** indicates the GPS mode of operation.
- 4) **MISS (L5)** and **ARM (L6)** appear. Press **MISS (L5)** for immediate missed approach or **ARM (L6)** to arm the missed approach leg.
- 5) Past the MAWP, NAV source remains FMS and scale automatically changes to 0.3NM FSD.

Depending on how this procedure was coded, RNP and ANP values may appear for a particular leg with mode of service depicted in CDI area.

- 6) If entering the published MAWPT, and additional waypoints follow in active flight plan, press **CONT (L6)** to cancel **SUSPEND** and navigate to next leg of active flight plan.

#### 6.20.9. RNAV (RNP) Instrument Approach to RNP 0.3 DA (Step-By-Step)

- 1) Select desired airport and desired instrument approach, transition, and runway as described above.
- 2) ATC issues clearance direct XXXXX and cleared for RNAV XXXXX approach. Press **ACTV (L2)**, rotate **1** to assigned fix, press **D➔ (R4)**, then push **1** to accept waypoint with no changes or press **EXIT (R1)**.
- 3) Inside of FAF, **RNP: 0.10A/RNP: 15.0A** indicates the GPS mode of operation.

- 4) **MISS (L5)** and **ARM (L6)** appear. Press **MISS (L5)** for immediate missed approach or **ARM (L6)** to arm the missed approach leg.
- 5) Past the MAWP, NAV source remains FMS and scale automatically changes to 0.3NM FSD.

**NOTE:**

Depending on how this procedure is coded, RNP and ANP values may appear for a particular leg with mode of service depicted in CDI area.

- 6) If entering the published MAWPT hold, and additional waypoints follow in active flight plan, press **CONT (L6)** to cancel **SUSPEND** and navigate to next leg of active flight plan.

**NOTE:**

When outside the approach region of operation, if a manually entered RNP value does not exist, and an automatic RNP value retrieved from the navigation database does exist, then the automatically retrieved RNP value is annunciated along with actual navigation performance in the PFI area. The navigation mode is RNP and the automatically retrieved RNP value is used to determine CDI, FSD, LON and LOI alerting.

When outside the approach region of operation and neither a manually entered nor automatic RNP value exists, the system operation defaults to GPS/SBAS operation.

### 6.20.10. NRST ILS Instrument Approach (Step-By-Step)

This method does not require the airport to be in the active flight plan and uses the NRST MENU with the NRST ILS method of creation.

- 1) Press **NRST (R3)** then rotate **1** to **ILS..** Push to enter.
- 2) Use **1** to highlight desired airport with "ILS" on the left. Push to enter.
- 3) Push **1** to **CONFIRM ACTIVATE ILS.** (See Quick Reference Guide for description of NRST ILS on PFD or MFD.) Following actions occur:
  - a) If present, previous active flight plan is deleted.
  - b) A vectors-to-final ILS approach is activated with an IP waypoint approximately 12 NM on the extended final approach course.

- c) If the heading bug is off (no autopilot installed), it is activated to the current heading.
  - d) VLOC 1 and VLOC 2 OBS are set to the associated localizer course.
  - e) When configured in EFIS limits, ILS frequency is automatically transmitted to NAV1 and NAV2 in standby position. (Pilot must ensure correct frequency is swapped to active position and identified on both nav receivers.)
  - f) EFIS changes to OBS source to LOC1 or LOC2 (as configured), and VDI indicates source of glide slope GS (as applicable) when it appears.
- 4) FAF is the active waypoint. Press **➔ (R4)** then push **●** to enter a direct route with navigation guidance to FAF.
  - 5) To set published minimums, see Section 3 Menu Functions and Step-By-Step Procedures.
  - 6) Passing the FAF, **MISS (L5)** and **ARM (L6)** appear. Press **ARM (L6)** to arm the missed approach procedure and continue automatic waypoint sequencing.
  - 7) HITS indicates guidance to follow GPS overlay of the localizer and glide slope. However, the localizer source for CDI and glide slope receiver VDI are the primary navigation sources for guidance on this ILS approach. Ensure the desired VLOC is selected as the OBS source.
  - 8) Push **●** and use to highlight **HSI** then push to enter to display the HSI page. (This must be manually changed back to the MAP page if desired during the missed approach procedure.)
  - 9) Inside the FAF, the GPS mode automatically switches to **LNAV APPR** and replaces **TERMINAL**.
  - 10) During the missed approach, the navigation source automatically switches to FMS with 0.3NM FSD, and terminal mode is active while within the terminal area.

**NOTE:**

If there is inadequate source data available for a NRST ILS search, the approach is not loaded.

**6.20.11. VOR/DME Instrument Approach (Step-By-Step)**

- 1) Select desired airport and desired instrument approach, transition, and runway as described in § 6.20.4.

- 2) Press **ACTV (L2)**. Rotate **1** to view procedure and select fix for compliance with ATC clearance. Press **➔ (R4)**, and then push **1** to accept waypoint with no changes or press **EXIT (R1)**.
- 3) Set minimum bugs, VOR pointers and DME bearing and distance symbology. See Section 3 Menu Functions and Step-By-Step Procedures for more information.
- 4) After passing the FAF, **MISS (L5)** and **ARM (L6)** appear. Press **MISS (L5)** to immediately execute the missed approach procedure or press **ARM (L6)** to arm the missed approach procedure upon crossing the MAWPT.
- 5) After passing the MAWPT and the missed approach procedure automatically sequenced, aircraft begins following the dashed magenta missed approach course lines on the MAP. NAV source automatically switched to FMS and 0.3 NM FSD.

**NOTE:**

**LNAV:** The default approach type and is selected when none of the above selections are made. There are no prerequisites for selecting LNAV. Ensure the required OBS navigation source is selected as required for the approach type.

### 6.20.12. ILS or LOC RWY ## Instrument Approach with Missed Approach Flown to Alternate Fix (Step-By-Step)

During the instrument approach clearance, ATC advised that in the event of a missed approach, plan to fly the alternate missed approach instructions to XXXXX intersection and hold as published. The ILS or LOC RWY ## instrument approach is loaded as described in § 6.20.4.

- 1) Press **ACTV (L2)** and use **1** to highlight one position past the end of the active flight plan.
- 2) Press **ADD (R2)** and insert XXXXX waypoint in active flight plan. Push **1** to enter.
- 3) Use **1** to highlight **HOLD...** Push to enter.
- 4) Create published holding pattern at XXXXX. Use **1** through the process then push to enter. Observe XXXXX is in correct position in active flight plan.
- 5) En route to the (FAF) for the ILS RWY XX, observe where XXXXX is located on the map.

- 6) Upon executing the missed approach, press **ACTV (L2)**, rotate **1** to XXXXX, press **➔ (R4)**, then push **1** to enter a direct routing to XXXXX, or press **EXIT (R1)**.
- 7) Verify active flight plan has holding pattern entered as published and is depicted correctly.
- 8) Established in the holding pattern at XXXXX. When cleared to continue to next waypoint on active flight plan, press **CONT (L6)** to resume waypoint sequencing. If an approach is necessary at the destination, the approach can be loaded without losing the holding pattern at XXXXX, since it was not part of the initial approach procedure loaded into the active flight plan.

**NOTE:**

PFD Bugs menu VNAV descent angles are not applicable for inside the FAF during a published instrument procedure.

IFR en route, terminal, and instrument approach navigation predicted upon EFIS is prohibited unless the pilot verifies the currency of the navigation database or verifies each selected waypoint for accuracy by reference to current approved data.

Instrument approach navigation must be accomplished in accordance with the approved instrument procedures. These procedures are retrieved from the EFIS navigation database. Before conducting an instrument procedure, the procedure should be verified by reference to current approved data.

Navigation databases should be current for the duration of the flight. If the Aeronautical Information Regulation and Control (AIRAC) cycle is due to change during the flight, operators and pilots should establish procedures to ensure the accuracy of navigation data including suitability of navigation facilities used to define the routes and procedures for flight. Once acceptable means to compare aeronautical charts (new and old) to verify navigation fixes prior to departure, electronic data have traditionally been verified against paper products. If an amended chart is published for the procedure, do not use the database to conduct the operation.

There may be a slight difference between the navigation information portrayed on the chart and the primary navigation display heading. Differences of three degrees or less may result from equipment manufacturer's application of magnetic variation and are operationally acceptable.



GPS receivers do not “fail down” to lower levels of service once the approach has been activated.



If only LPV VLON appears, use the LNAV minima if the rules under which the flight is operating allow changing the type of approach being flown after commencing the procedure. If the lateral integrity limit is exceeded on an LP approach, a missed approach is necessary since the lateral alarm limit may not be reset while the approach is active.

---

## Section 7 Terrain Awareness Warning System

### 7.1. Terrain Awareness Warning System (TAWS) Functions

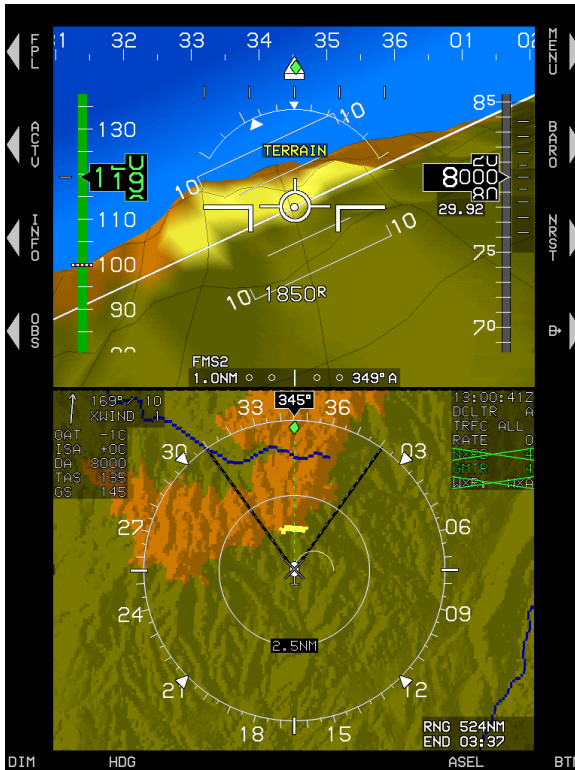


Figure 7-1: Terrain Display

The EFIS provides TSO-C194 HTAWS functionality. With the rotorcraft configuration and external sensors/switches, the system is configured to options found in Table 7-1:

- 1) Terrain Display: Terrain and obstacles on PFI and Map page (see Sections 2 Display Symbology and 3 Menu Functions and Step-By-Step Procedures).
- 2) Forward Looking Terrain Awareness (FLTA): Alerts to hazardous terrain or obstructions in front of the aircraft. Terrain and obstruction symbology for FLTA alerts meet the following requirements:
  - a) Terrain cells that pierce the FLTA warning volume are colored red.
  - b) Terrain cells that pierce the FLTA caution volume are colored yellow.

- c) Obstructions whose tops pierce the FLTA warning volume are visually distinct from the non-alerting obstructions, and flash.
  - d) Obstructions whose tops pierce the FLTA caution volume are visually distinct from non-alerting obstructions.
- 3) Excessive Rate of Descent (GPWS Mode 1): Alerts when hazardously high rate of descent above terrain (i.e., descending into terrain).
  - 4) Excessive Closure Rate to Terrain (GPWS Mode 2): Alerts when hazardously high rate of change above terrain (i.e., flying level over rising terrain).
  - 5) Sink Rate after Takeoff or Missed Approach (GPWS Mode 3): Alerts when loss of altitude is detected immediately after takeoff or initiation of a missed approach.
  - 6) Flight into Terrain when not in Landing Configuration (GPWS Mode 4): Alerts when descending into terrain without properly configuring the aircraft for landing.
  - 7) Excessive Downward Deviation from an ILS Glide Slope (GPWS Mode 5): Alerts when deviating below glide slope on the final approach segment of an ILS approach.

Table 7-1: TAWS Functions Provided by the EFIS

Aircraft Type	TAWS Class	Terrain Display	FLTA	GPWS Mode				
				1	2	3	4	5
Rotorcraft RG	Enhanced	✓	✓	✓	✓	✓	✓	✓
Rotorcraft FG	Enhanced	✓	✓	✓	✓	✓		✓
Rotorcraft	Normal	✓	✓			✓		

Notes: RG = Retractable Gear, FG = Fixed Gear



**NOTE:**

All references to altitude are in feet, distances are in NM, and rates of climb or descent are in fpm, regardless of EFIS limits settings.

**7.2. Forward Looking Terrain Alert (FLTA) Function**

FLTA function uses the following to alert to hazardous terrain or obstructions within a search envelope in front of the aircraft:

- 1) Terrain database
- 2) Obstruction database
- 3) Airport and runway database
- 4) Aircraft position
- 5) Aircraft track
- 6) Aircraft ground speed

- 7) Aircraft bank angle
- 8) Aircraft altitude
- 9) Aircraft vertical speed

### 7.2.1. FLTA Modes

FLTA mode is either slaved to the GPS/SBAS navigation mode or set automatically based upon default mode logic.

### 7.2.2. GPS/SBAS Navigation Mode Slaving

The EFIS performs TSO-C194 HTAWS functionality in addition to the TAWS functions. As a result, GPS/SBAS navigation mode is available as an input to the TAWS. The pilot may select an IFR procedure (approach, DP, or STAR), which automatically changes the GPS/SBAS navigation mode to en route, terminal, departure, or IFR approach as appropriate. In addition, the pilot may select a VFR approach to any runway or user waypoint with a defined approach path. Selection of a VFR approach causes automatic GPS/SBAS navigation mode changes to en route, terminal, or VFR approach as appropriate. The order of precedence is the following:

- 1) Departure Mode;
- 2) Approach Mode (IFR or VFR);
- 3) Terminal Mode; and
- 4) En Route Mode.

When slaved, the GPS/SBAS active runway threshold or user waypoint is the reference point for automatic FLTA inhibiting. The advantage is the GPS/SBAS navigation modes are a direct indication to the FLTA function of pilot intent.

### 7.2.3. Default FLTA Mode

If the default FLTA navigation mode is higher in precedence than the GPS/SBAS navigation mode, FLTA mode is slaved to the default FLTA navigation mode. These modes and order of precedence are:

- 1) Departure Mode: Enabled when in ground mode. Reference point for automatic FLTA inhibiting and mode envelope definition is the last point at which the ground definition was satisfied (near the liftoff point). Departure Mode ends upon climbing through 1500 feet above or traveling more than 6NM from the reference point.

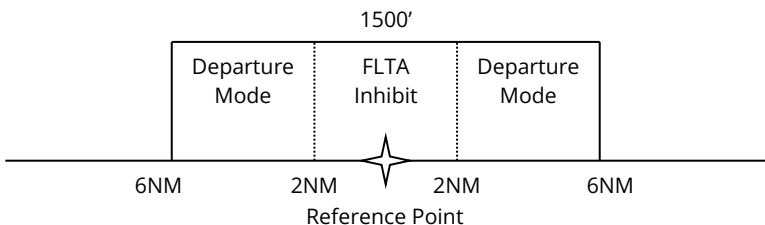


Figure 7-2: Default FLTA INHBT

8) Other Modes: For other default FLTA modes, reference point for automatic FLTA inhibiting and mode envelope is the nearest runway threshold or the nearest user waypoint with a defined approach bearing. TAWS continuously searches all runway thresholds at the nearest three airports to determine the nearest runway threshold, in addition to performing a search for the nearest user waypoints with a defined approach bearing every 3NM of distance traveled. Modes are as follows:

- a) Approach Mode: When within 1900 feet and 5NM of the reference point.
- b) Terminal Mode: From 5NM to 15NM from the reference point when below an altitude that varies from 1900 feet (at 5NM) to 3500 feet (at 15NM) above the reference point.
- c) En route Mode: When not in any other mode.

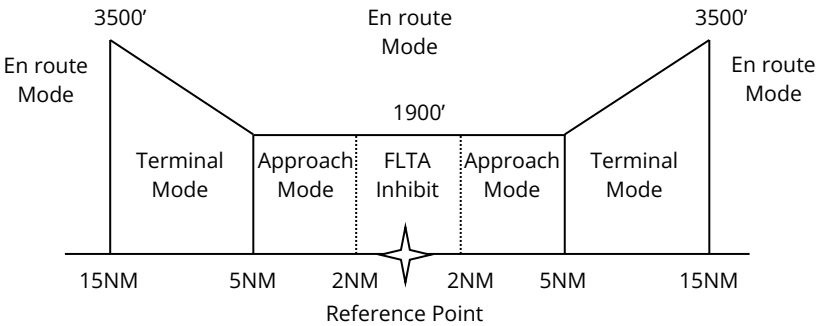


Figure 7-3: FLTA INHBT Mode Areas

### 7.2.4. FLTA Search Envelope

The FLTA search envelope is an area in front of and below the aircraft. If terrain or obstructions are found within the FLTA search envelope, either a caution or warning alert is given. Dimensions of the search envelope depend upon TAWS type, FLTA mode, aircraft track, ground speed, bank angle, and vertical speed. Basic envelope parameters are as follows:

- 1) TAWS Type: Determines the value of several parameters used to calculate the search envelope.

Table 7-2: FLTA Search Envelope for HTAWS

Envelope	Parameter
Range	36 seconds of forward range search envelope
	Reduced to 24 seconds when low altitude mode is engaged
After calculations, GPS/SBAS HFOM is added to range	
En route Mode Level/Climbing Flight Required Terrain Clearance (RTC)	150 feet
Terminal Mode Level/Climbing Flight RTC	Reduced to 100 feet when low altitude mode is engaged
Approach Mode Level/Climbing Flight RTC	
Departure Mode Level/Climbing Flight RTC	100 feet
En route Mode Descending RTC	
Terminal Mode Descending RTC	
Approach Mode Descending RTC	
Departure Mode Descending RTC	
Level-Off Rule	10% of vertical speed
	Additional value used to expand level-off leading for descending flight reduced RTC

- 2) Aircraft Track: Terrain search envelope is aligned with aircraft track.
- 3) Aircraft Ground Speed: Used in conjunction with range parameter to determine the look-ahead distance and used with FLTA mode to determine search volume width as defined in Table 7-3.

Table 7-3: Search Volume Width

Mode	Search volume width	Change in track time at aircraft ground speed	Maximum width on either side of track
En Route Mode	30° change	30 seconds	0.5NM
Terminal Mode	15° change	30 seconds	0.5NM
Approach Mode	10° change	30 seconds	0.3NM
Departure Mode	10° change	30 seconds	0.3NM

GPS PWR	OK
GPS EQPMNT	OK
GPS SATLT	OK
GPS FDE	OK
GPS LOI	OK
GPS HPL	0.0NM
GPS UPL	15M
GPS HFOM	0.0NM
GPS VFOM	21M
GPS ALMANAC	OK
SBAS MSG	OK
SBAS HLTH	OK
WX-500	OK
TRFC	OK

After calculating search volume width as described, the GPS/SBAS HFOM is added to search volume width. In this example, HFOM is 0.0NM, and no value is added to the search volume width.

Figure 7-4: Faults Menu HFOM Value

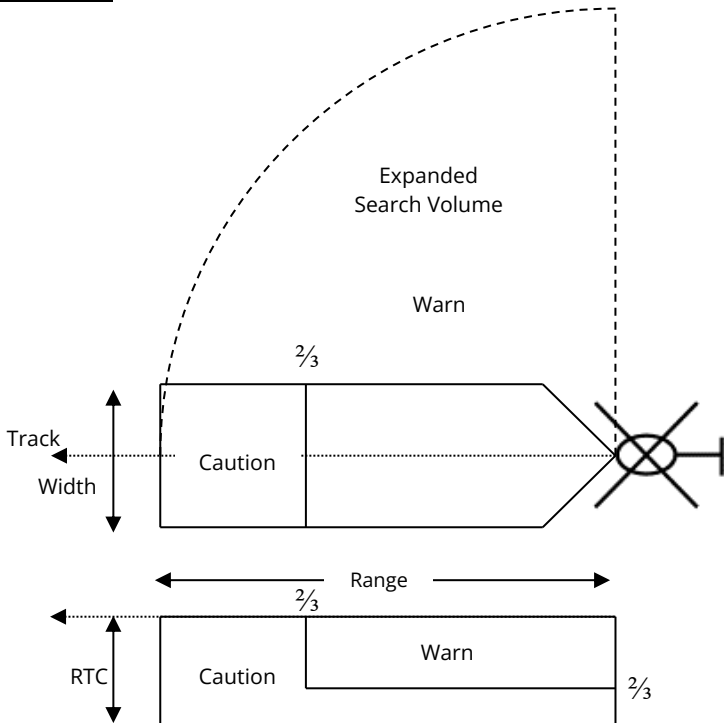


Figure 7-5: FLTA Search Volume

- 4) Aircraft Bank Angle: Used to expand the search volume in the direction of a turn and requires at least 10° of bank. In addition, search volume expansion is delayed, so at 10° of bank, the bank angle must be continuously held for 3.25 seconds.
- 5) Aircraft Vertical Speed: Used to determine which RTC values should be used. At vertical speeds above -500 fpm, level and climbing flight RTC values are used. At vertical speeds less than or equal to -500 fpm,

descending flight RTC values are used. In addition, vertical speed is used to increase the descending flight RTC value used by the system.


### 7.2.5. FLTA Alerts and Automatic Pop-up

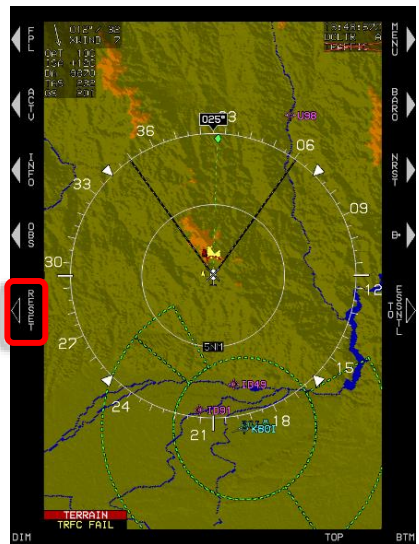When terrain or obstructions fall within the FLTA search envelope, an FLTA alert is generated. Terrain rendering is enabled when an FLTA alert is initiated or upgraded as follows:

- 1) On PFD, terrain rendering is enabled;
- 2) On Map page, terrain rendering is enabled only if TAWS inhibit is not enabled.



PFD



Transmit-Enabled MFD Full Map page

Figure 7-6: Pop-Up Mode

In addition, when an FLTA alert is initiated or upgraded, an automatic pop-up mode is engaged and bottom area display:

- 1) Switches to Map page.
- 2) Switches to aircraft centered and heading up.
- 3) Panning disabled.
- 4) Scale (value refers to compass rose range i.e., twice range setting) set to:
  - a) When using nautical mile scale:
    - i) 10NM (ground speed > 200 knots);



- ii) 5 NM (ground speed  $\leq$  200 knots and ground speed  $>$  100 knots); or
  - iii) 2NM (ground speed  $\leq$  100 knots).
- b) When using the kilometers scale:
- i) 20KM (ground speed  $>$  200 knots);
  - ii) 10KM (ground speed  $\leq$  200 knots and ground speed  $>$  100 knots); or
  - iii) 5KM (ground speed  $\leq$  100 knots).

After pop-up mode is engaged, the pilot may change any setting automatically changed by the pop-up mode. In addition, any open menus are closed and **RESET (L5)** appears for 20 seconds to reset the previous screen configuration with one button press. Pop-ups only occur on the transmit-enabled IDU with all TAWS classes configured, but do not occur if TAWS is disabled or when TAWS inhibit is enabled.

**7.3. Excessive Rate of Descent (GPWS Mode 1)**

GPWS Mode 1 function is present in Enhanced HTAWS and uses aircraft vertical speed information and AGL altitude to alert when the rate of descent is hazardously high as compared to height above terrain. GPWS Mode 1 has a caution and warning threshold. When below the thresholds, a GPWS Mode 1 alert is generated.

Table 7-4: HTAWS GPWS Mode 1 Alerts

Sink Rate (fpm)	AGL Altitude (ft.)	
	Caution Threshold	Warning Threshold
	<b>SINK RATE</b>	<b>PULL UP</b>
	<b>SINK RATE</b>	<b>PULL UP</b>

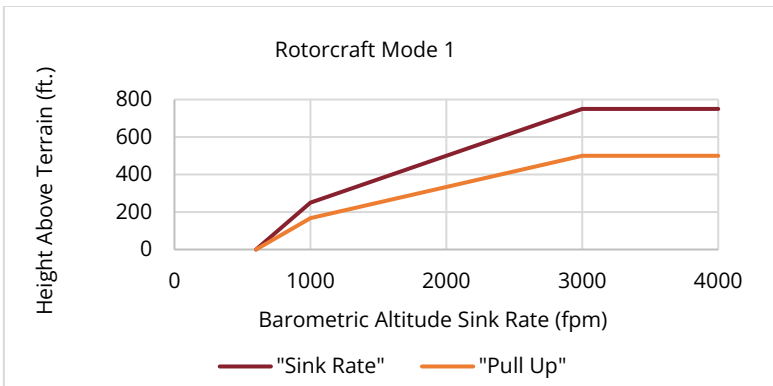


Figure 7-7: Rotorcraft GPWS Mode 1

### 7.4. Excessive Closure Rate to Terrain (GPWS Mode 2)

GPWS Mode 2 function is present in Enhanced HTAWS only and uses filtered AGL rate and AGL altitude to alert when the rate of change of height above terrain is hazardously high as compared to height above terrain (i.e., flying level over rising terrain). Envelope selection is determined as follows and is based upon a 10-second sampling time.

There are two Mode 2 envelopes: Mode 2A, which is active when not in landing configuration, and Mode 2B, which is active when in landing configuration. Envelope selection is determined as defined in Table 7-5.

Table 7-5: HTAWS GPWS Mode 2 Envelopes

Landing Gear	Mode 2A	Mode 2B
Retractable	Landing Gear Up	Landing Gear Down
Fixed	AGL Altitude > 200 ft or Airspeed > 80 KIAS	AGL Altitude ≤ 200 ft and Airspeed ≤ 80 KIAS

When GPWS Mode 2 envelope is pierced, a GPWS Mode 2 alert is generated.

Table 7-6: HTAWS GPWS Mode 2 Alerts

AGL Rate (fpm)	AGL Altitude (ft.)	
	Caution Threshold	Warning Threshold
	TERRAIN	PULL UP
	TERRAIN	PULL UP

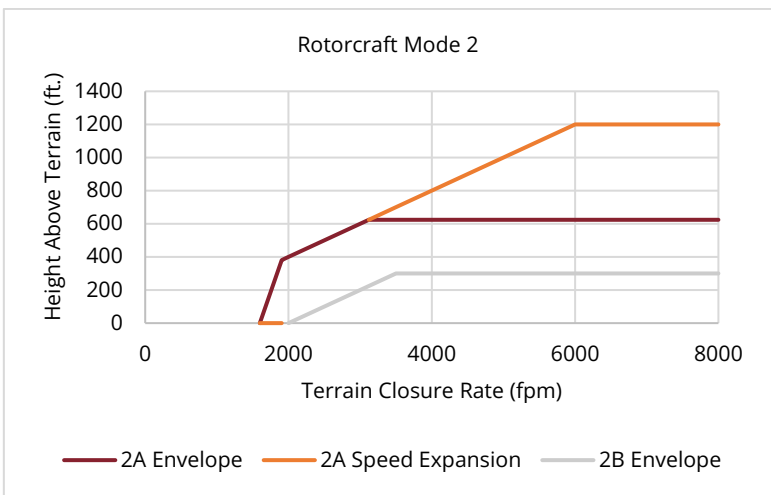


Figure 7-8: Rotorcraft GPWS Mode 2

### 7.5. Sink Rate after Takeoff or Missed Approach (GPWS Mode 3)

GPWS Mode 3 function uses aircraft vertical speed information and AGL altitude to alert when sink rate is detected immediately after takeoff or initiation of a missed approach. GPWS Mode 3 is armed by either being in ground mode or by being on the first leg of a missed approach procedure (as determined by the GPS/SBAS) with distance to the active runway threshold increasing.

GPWS Mode 3 is disarmed upon climbing through 400 feet AGL, traveling more than 3NM from the last point at which the ground definition was satisfied (this is near the liftoff point), or transitioning to the second leg of a missed approach procedure.

GPWS Mode 3 has a caution threshold based upon height above terrain and vertical speed. When below the caution threshold (AGL threshold = 1.4 x sink rate), a GPWS Mode 3 caution is generated.



Figure 7-9: GPWS Mode 3 Warning (Sink Rate after Takeoff or Missed Approach)

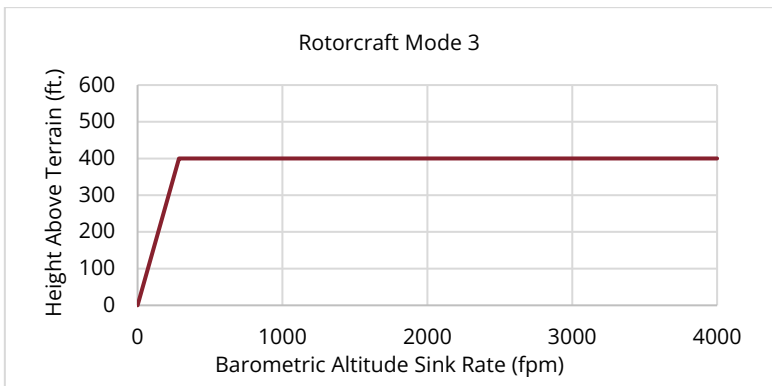


Figure 7-10: Rotorcraft GPWS Mode 3

### 7.6. Flight into Terrain when not in Landing Configuration (GPWS Mode 4)

GPWS Mode 4 function is present in Enhanced HTAWS and uses aircraft speed information and AGL altitude to alert when descending into terrain without properly configuring the aircraft for landing. There are two Mode 4 envelopes: Mode 4A, which gives cautions when landing gear is in other than landing configuration, and Mode 4B, which gives cautions when landing gear are in other than landing configuration. Applicability of Mode 4 envelopes to aircraft types are as defined in Table 7-7.

Table 7-7: HTAWS GPWS Mode 4 Envelopes

Landing Gear	Mode 4A	Mode 4B
Retractable	Landing Gear Up	Not Applicable
Fixed	Not Applicable	Not Applicable

Mode 4 envelope consists of low-speed and high-speed regions.

Table 7-8: HTAWS GPWS Mode 4 Alerts

Region	Caution Flag	Single Audible Alert
Low-Speed	<b>TOO LOW</b>	“Too Low Gear”
High-Speed	<b>TOO LOW</b>	“Too Low Terrain”
Autorotation expansion, when engaged, regardless of speed	<b>TOO LOW</b>	“Too Low Gear”

Mode 4 alerting criteria require the Mode 4 envelope to be entered from above so changing aircraft configuration while within a Mode 4 envelope does not generate an alert.

Table 7-9: HTAWS GPWS Mode 4A Envelopes

Segment	Speed (KIAS)	AGL Altitude (ft.)
4A Low-Speed	< 100	150
4A High-Speed	≥ 100	(400 in autorotation)

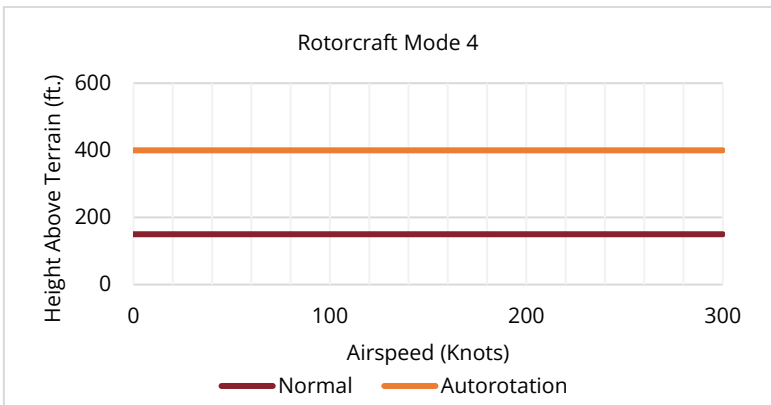


Figure 7-11: Rotorcraft GPWS Mode 4

**7.7. Excessive Downward Deviation from an ILS Glide Slope (GPWS Mode 5)**

GPWS Mode 5 function is present in Enhanced HTAWS only and uses ILS glide slope deviation information and AGL altitude to alert when an excessive

downward glide slope deviation is detected on the final approach segment of an ILS approach. GPWS Mode 5 is armed when a valid glide slope signal is being received, and the aircraft is below 1000' AGL.

GPWS Mode 5 has a caution and warning threshold. When below a threshold, a GPWS Mode 5 alert is generated. The curve compares glide slope deviation to AGL altitude.

Table 7-10: HTAWS GPWS Mode 5 Alerts

Caution Threshold	Warning Threshold
GLIDESLOPE	GLIDESLOPE
GLIDESLOPE	GLIDESLOPE

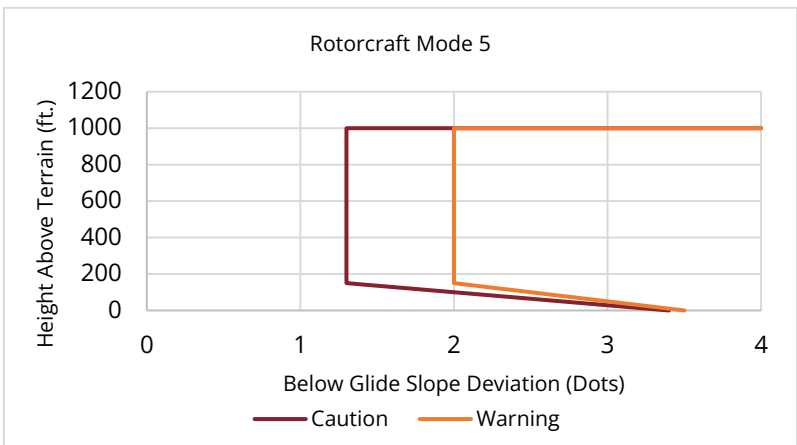


Figure 7-12: Rotorcraft GPWS Mode 5

### 7.8. External Sensors and Switches

TAWS require a variety of inputs from external sensors and switches to perform its functions as follows:

- 1) GPS/SBAS Receiver: Source of aircraft position, geodetic height, horizontal figure of merit (HFOM), vertical figure of merit (VFOM), loss of integrity (LOI), and loss of navigation (LON). Connects directly to the IDU.
- 2) Air Data Computer (ADC): Source of barometric altitude, outside air temperature, and vertical speed. Connects directly to the IDU.
- 3) ILS Receiver: Glide slope receiver is the source of glide slope deviation.
- 4) Radar Altimeter (RA): Source for radar altitude.

- 5) Gear Position Sensors: As configured in the system limits, source of landing gear position.
- 6) TAWS Inhibit Switch: As configured in the system limits, used for manual inhibiting of TAWS alerting functions. Gives an indication of actuation (i.e., toggle/rocker or button with indicator light and **TAWS INHBT**).
- 7) Low Altitude Mode Switch: As configured in the system limits, used for inhibiting and modifying HTAWS alerting functions to allow normal operation at low altitudes. Low Altitude Mode switch is a latching type and gives an obvious indication of actuation (for example, toggle/rocker or button with indicator light and **TAWS LOW ALT**).
- 8) Audio Mute Switch: Momentarily activated to silence active audible alerts. It is connected directly to the IDU.
- 9) Glide Slope Deactivate Switch: As configured in the system limits, momentarily activated to inhibit GPWS Mode 5 function.
- 10) Low Torque Sensor: As configured in the system limits and used for inhibiting and modifying HTAWS alerting functions during an autorotation.

Table 7-11: External Sensors and Switches (Applicable HTAWS)

Aircraft Type	Rotorcraft RG	Rotorcraft FG	Rotorcraft
HTAWS Class	Enhanced	Enhanced	Normal
GPS/SBAS	✓	✓	✓
ADC	✓	✓	✓
Gear Position Sensor	✓		
TAWS Inhibit Switch	✓	✓	✓
Audio Cancel Switch	✓	✓	✓
Low Altitude Mode Switch	✓	✓	✓
Low Torque Sensor	✓	✓	
ILS	✓	✓	
Radar Altimeter	✓	✓	
Glide Slope Deactivate Switch	✓	✓	

Notes: RG = Retractable Gear; FG = Fixed Gear

## 7.9. TAWS Basic Parameter Determination

Fundamental parameters used for HTAWS functions are defined in Table 7-12.

Table 7-12: HTAWS Basic Parameters Determination

Parameter	Source	Notes
Aircraft position, ground speed, and track	GPS/SBAS	HFOM must be less than or equal to the greater of 0.3 NM or the horizontal alert limit (HAL) for mode of flight
MSL Altitude Secondary source of MSL altitude is barometric altitude from an air data computer	GPS/SBAS	<p>Geodetic height converted to MSL with current EGM database. To be considered valid to use as MSL altitude, VFOM must be less than or equal to 106 feet.</p> <p>The secondary source of MSL altitude is barometric altitude from an air data computer. Barometric altitude is based upon a barometric setting in the following order of preference:</p> <ol style="list-style-type: none"> <li>1) If either the pilot or co-pilot system is operating in QNH mode, the QNH barometric setting is used (i.e., on-side barometric setting preferred); or</li> <li>2) If GPS/SBAS geodetic height has been valid within the last 30 minutes, a barometric setting derived from the GPS/SBAS geodetic height is used.</li> <li>3) If radar altitude has been valid within the last 30 minutes and has been valid more recently than GPS/SBAS geodetic height, a barometric setting derived from radar altitude is used.</li> </ol> <p>If neither of the above conditions is met, MSL altitude is marked as invalid.</p> <p>When a reporting station elevation is determined and outside air temperature is valid, a temperature correction is applied.</p> <p>HTAWS uses the lower of the barometric altitude or the temperature-corrected altitude. In the case of QNH-mode barometric setting, reporting station elevation is derived from waypoint or</p>

Table 7-12: HTAWS Basic Parameters Determination

Parameter	Source	Notes
		<p>active runway elevations in the active flight plan using the following logic:</p> <ol style="list-style-type: none"> <li>4) If the aircraft is in TERMINAL, DEPARTURE, IFR APPROACH, or VFR APPROACH mode, and an active runway exists, reporting station elevation is the elevation of the active runway threshold.</li> <li>5) Otherwise, if the aircraft is in TERMINAL mode, reporting station elevation is the elevation of the airport causing TERMINAL mode.</li> <li>6) In EN ROUTE mode, no reporting station elevation is determined.</li> </ol> <p>In the case of GPS/SBAS geodetic height-based barometric setting, reporting station elevation is the GPS MSL altitude reported at the time the barometric setting was determined (see Section 2 Display Symbology).</p>
Terrain Data	Terrain Database	<p>To be considered valid, the following must apply:</p> <ol style="list-style-type: none"> <li>1) Aircraft position is valid;</li> <li>2) Aircraft position is within the boundaries of the terrain database; and</li> <li>3) Terrain database is not corrupt, as determined by built-in test at system initialization and during runtime.</li> </ol>
Obstacle Data	Obstacle Database	<p>To be considered valid, the following must apply:</p> <ol style="list-style-type: none"> <li>1) Aircraft position is valid;</li> <li>2) Aircraft position is within the boundaries of the obstacle database; and</li> </ol>



Table 7-12: HTAWS Basic Parameters Determination

Parameter	Source	Notes
		3) Obstacle database is not corrupt, as determined by built-in test at system initialization.
AGL Altitude	Radar Altitude	Secondary source is MSL altitude less terrain altitude.
Vertical Speed	Instantaneous Vertical Speed	IVSI values come from barometric vertical speed from an ADC “quicken” with vertical acceleration from an AHRS. Secondary source for vertical speed is barometric vertical speed from an ADC. Tertiary source for vertical speed is GPS/SBAS vertical speed providing the VFOM is less than or equal to 106 feet.
Terrain Closure Rate	Smoothed first derivative of AGL altitude	Due to multiple sources for altitude, there are multiple sources for terrain closure rate.
Runway/ Reference point location	EFIS navigation database	To be considered valid, the following must apply: 1) Aircraft position is valid; 2) Aircraft position is within boundaries of the navigation database; and 3) Navigation database is not corrupt, as determined by a built-in test at system initialization.

### 7.10. TAWS Selections on PFD

PFD Declutter menu includes three option possibilities for TAWS:

- 1) SVS TAWS: With SVS TAWS selected, TAWS perspective terrain and obstacle depiction is shown using color to show relationship to aircraft altitude with terrain colored in shades of olive when at or below 100' below the aircraft. Terrain is colored shades of brown when above 100 feet less than aircraft altitude.
- 2) SVS BASIC: With SVS BASIC selected, terrain is colored in shades of brown.
- 3) None: With neither SVS TAWS nor SVS BASIC selected, the PFI background is a conventional blue over brown attitude display without synthetic vision.

If SVS TAWS and SVS Basic are not selected and the aircraft pierces the TAWS FLTA terrain envelope, the EFIS automatically enables SVS TAWS for the safest possible warning alert condition. Table 7-13 shows possible scenarios where the aircraft pierces the TAWS FLTA terrain envelope and SVS TAWS is enabled.

**TERRAIN** takes precedence over **OBSTRUCTION**.

Table 7-13: PFD TAWS Selections

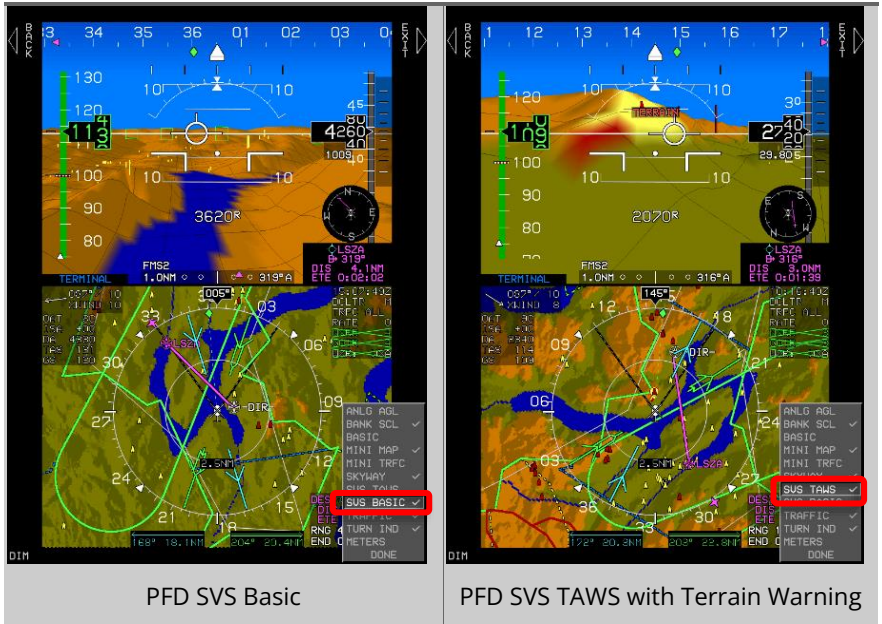


Table 7-13: PFD TAWS Selections



PFD SVS TAWS with Obstruction Caution (Obstruction depictions on PFD and map highlighted but do not flash)



PFD SVS TAWS with Obstruction Warning (Obstruction depictions on PFD and map highlighted and flash)



PFI area neither SVS TAWS nor SVS BASIC selected



Aircraft pierces TAWS FLTA terrain envelope

## 7.11. TAWS Automatic Inhibit Functions (Normal Operation)

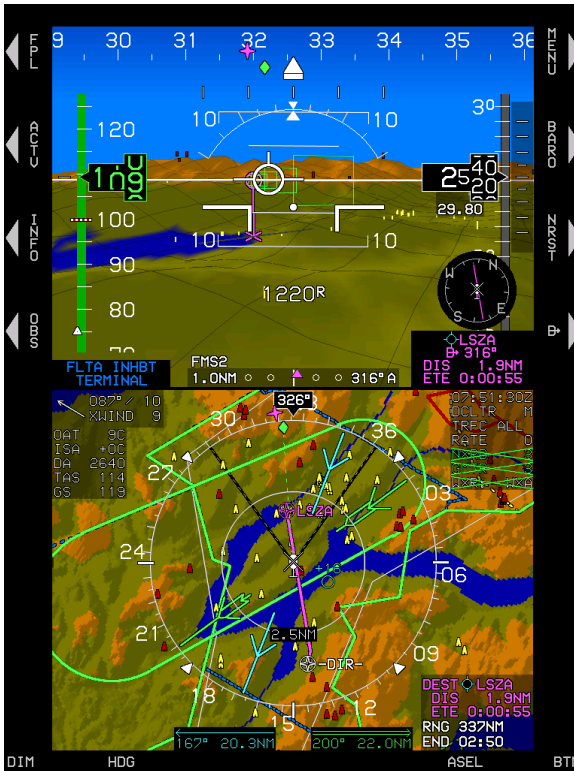


Figure 7-13: Terrain Display with FLTA INHBT

The following automatic inhibit functions occur during normal TAWS operation to prevent nuisance warnings:

- 1) FLTA function is automatically inhibited when in terminal, departure, IFR approach, or VFR approach modes and within 2 NM and 1900' of the reference point.
- 2) GPWS Modes 1 through 4 are automatically inhibited when below 50 feet AGL (radar altimeter AGL altitude) or below 100 feet AGL (terrain database AGL altitude).
- 3) GPWS Mode 4 is inhibited while Mode 3 is armed.
- 4) GPWS Mode 5 is inhibited below 200' AGL. This form of automatic inhibit remains active until the aircraft climbs above 1000' AGL and prevents nuisance alarms on missed approach when glide slope receiver detects glide slope sidelobes.

- 5) FLTA function is automatically inhibited when indicated airspeed or ground speed is below the HTAWS FLTA inhibit speed.

### 7.11.1. TAWS Automatic Inhibit Functions (Abnormal Operation)

The following automatic inhibit functions occur during the specified abnormal operations:

- 1) Autorotation detection: When the low torque sensor is active, an Enhanced HTAWS enters autorotation mode. In this mode:
  - a) FLTA is inhibited;
  - b) GPWS Mode 1 is inhibited;
  - c) GPWS Mode 2 is inhibited; and
  - d) GPWS Mode 4 uses a modified envelope (see § 7.6).
- 2) System Sensor/Database Failures: System sensor failures, non-installation of optional sensors, database failures, and combinations thereof affect TAWS.

Table 7-14: TAWS Automatic Inhibit Functions

Sensor	Parameters Lost	Terrain Display	FLTA	GPWS Mode				
				1	2	3	4	5
✓ = Inhibit								
GPS/SBAS (H)	AC Position	✓	✓					
TD	Terrain Elev.	✓	✓					
ILS	Glide Slope Dev.							✓
MSL	MSL Altitude	✓	✓					
GPS/SBAS (H) + RADLT	AC Position, AGL Altitude	✓	✓	✓	✓	✓	✓	✓
GPS/SBAS (V) + ADC	MSL Altitude, VSI	✓	✓	✓		✓		
TD + RADLT	Terrain Elev. AGL Altitude	✓	✓	✓	✓	✓	✓	✓
MSL + RADLT	MSL Altitude, AGL Altitude	✓	✓	✓	✓	✓	✓	✓
GPS/SBAS (V) + ADC + RADLT	MSL Altitude, VSI, AGL ALT	✓	✓	✓	✓	✓	✓	✓

### 7.11.2. TAWS Manual Inhibit Functions

The pilot may select the following manual inhibit functions:

- 1) Terrain display function may be inhibited using EFIS soft menu declutter control.
- 2) All TAWS alerting functions (including pop-up functionality) are inhibited with the external TAWS inhibit switch, which does not affect the terrain display function, including FLTA warning (red) and caution (amber [yellow]) cells on the Map page and PFI.
- 3) Low altitude mode switch may be actuated to inhibit or modify parameters for alerting functions. This switch desensitizes HTAWS when purposefully flying VFR at low altitudes with the following effects:
  - c) GPWS Mode 1 is inhibited.
  - d) GPWS Mode 2 is inhibited.
  - e) GPWS Mode 3 is inhibited.
- 4) GPWS Mode 5 is inhibited with the glide slope cancel switch when below 1000' AGL. GPWS Mode 5 manual inhibit automatically resets by ascending above 1000' AGL.

## Section 8 Appendix

### 8.1. Operating Tips

This section contains a variety of useful information not found elsewhere in the document and includes operating tips, and environmental requirements.

With the Genesys Aerosystems EFIS installed and certified in all categories of certified aircraft, numerous tips and suggestions are available for obtaining the maximum performance and benefit from this system.

### 8.2. Domestic or International Flight Planning

Due to the differences in every aircraft avionics suite installation, the pilot should determine what equipment code is applicable for domestic or international flight plans. The aircraft operator must determine which certifications pertain to them. Visit the FAA website, [www.faa.gov](http://www.faa.gov), for flight plan guidance for both domestic and international filers, as well as information and documentation regarding FAA, ICAO, and flight services agreements and procedures.

### 8.3. Altitude Miscompare Threshold

The altitude miscompare threshold is based upon allowable altitude error. There are two components to allowable altitude error, instrument error and installed system error, and allowable instrument error is based upon the values of SAE AS8002A Table 1 as in Table 8-1.

Table 8-1: Allowable Instrument Error

Altitude	Allowed Error
Sea Level	25'
1,000'	25'
2,000'	25'
3,000'	25'
4,000'	25'
5,000'	25'
8,000'	30'
11,000'	35'
14,000'	40'
17,000'	45'
20,000'	50'

Allowable installed system error is added on top of instrument error and these values are derived from the regulations as defined in Table 8-2.

Table 8-2: Regulatory Reference

Regulation	Allowed Error
14 CFR § 27.1325	At sea level, the greater of 30' or 30% of the calibrated airspeed in knots.
14 CFR § 29.1325	

An allowable altitude error is computed for each compared value and added to create the altitude miscompare threshold, accommodating the values deviating in different directions.

Worked example for a calibrated airspeed of 100 knots and comparing a first altitude of 3,490' with a second altitude of 3,510':

- 1) Calculate allowable instrument error based upon altitudes:  
 Allowable Instrument Error #1 = 50'  
 Allowable Instrument Error #2 = 50'
- 2) Calculate allowable installed system error based upon altitudes and calibrated airspeed:  
 Allowable Installed System Error #1 = 30'  
 Allowable Installed System Error #2 = 30'
- 3) Calculate altitude miscompare threshold based upon sum of above allowable errors:  
 Altitude Miscompare Threshold = 160'

#### 8.4. Airspeed Miscompare Threshold

The airspeed miscompare threshold is based upon allowable airspeed error. There are two components to allowable airspeed error, instrument error and installed system error, and allowable instrument error is based on the values of SAE AS8002A Table 3 as in Table 8-3.

Table 8-3: Airspeed Error

Calibrated Airspeed	Allowed Error
50 knots	5 knots
80 knots	3 knots
100 knots	2 knots
120 knots	2 knots
150 knots	2 knots
200 knots	2 knots

Allowable installed system error is added on top of instrument. Error and these values are derived from the regulations as defined in Table 8-4.



Table 8-4: Airspeed Regulatory Reference

Regulation	Allowed Error
14 CFR § 27.1323	Starting from $(0.8 \times V_{CLIMB})$ : Greater of 5 knots or 3%. Do not perform a comparison if either value is below $(0.8 \times V_{CLIMB})$ .
14 CFR § 29.1323	For climbing flight ( $VSI > 250$ fpm): Starting from $(V_{TOS} - 10)$ : 10 knots Do not perform a comparison if either value is below $(V_{TOS} - 10)$ For other flight regimes: Starting from $(0.8 \times V_{TOS})$ : Greater of 5 knots or 3%. Do not perform a comparison if either value is below $(0.8 \times V_{TOS})$ . System uses $V_{CLIMB}$ as a substitute for $V_{TOS}$ .

An allowable airspeed error is computed for each compared value and added together to create the airspeed miscompare threshold and accommodate for the values deviating in different directions.

### 8.5. Jeppesen Sanderson NavData® Chart Compatibility

See [www.jeppesen.com](http://www.jeppesen.com) for the latest information on coding instrument procedures, naming conventions, altitudes within the database, and aeronautical information compatibility.

### 8.6. Data Logging and Retrieval

The EFIS logs all data associated with a flight, including all flight instrument and navigation data, which may be downloaded for review after flight. Data from the last 5 power cycles (CPM-4 units)/20 power cycles (CPM-5 units) are logged at a one-second interval.

Each time the parameters are recorded, a Zulu time stamp followed by three lines of comma delimited ASCII text data are written where the first line contains flight parameters and, the second line contains engine parameters.

With IDU powered off, open secure data transfer port door, and insert secure data storage device. Power up and select **Download LOG Files** to create a “\log” directory on the device and copy the data logging files into the directory.



#### CAUTION:

**Always install a valid secure data storage device in the IDU before activating any GMF to avoid erroneous failure indications or corruption of the IDU.**

### 8.6.1. Delete Log Files

- 1) If there are problems updating a navigation database or application software due to an excessively large log file, select "Delete Log Files" to delete all log files in the log directory.
- 2) Files named "LOG##.dat" and "MSGLOG.DAT" are deleted. This does not affect operations of the EFIS, as the EFIS generates new "LOG00.DAT" and "MSGLOG.DAT" files once a power cycle begins at power on. Press any button on the IDU or push **1** to return to the Ground Maintenance menu.

### 8.6.2. Logged Flags and Custom CAS Messages

Flags and custom CAS messages are logged in memory to a file named "caslog00.csv" (\*.csv files may be opened in Microsoft Excel or similar spreadsheet software). In addition, data from the previous power cycles are saved in files "caslog01.csv" through "caslog04.csv." Upon system start, the existing "caslog00.csv" through "caslog03.csv" files are renamed "caslog01.csv" through "caslog04.csv," and "caslog00.csv" is opened for active logging.

The first line of the log files contains column headings related to the flag's text (for standard warning functions) or the "CAS Log File Text" parameter (for custom CAS messages). All standard warning functions are logged. Only custom CAS messages with valid "CAS Log File Text" parameters (i.e., not an empty string) are logged. Within the data fields of the log file, values are written as in Table 8-5.

Category	Value
NORMAL	0
ADVISORY	1
NORMAL	2
WARNING	3

## 8.7. Routes and Waypoints

The navigation database includes VFR waypoints, which consist of five digits beginning with "VP." These may be found on VFR charts and should be loaded in the FMS prior to flight to ensure they are available in the database, and info checked for proper location.

### 8.7.1. Download Routes and User Waypoints

- 1) Select **Download Routes and User Waypoints** from the GMF to download all routes and user waypoints stored in the IDU to the secure data storage

device. This option is useful for fleet operations where multiple aircraft fly the same routes.

- 2) Routes are stored on secure data storage device as NAME1-NAME2.RTE where NAME1 is the 1 to 5-character designation of the origin waypoint and NAME2 is the 1 to 5-character designation of the destination waypoint. User waypoints are stored as "USER.DAT."

### 8.7.2. Upload Routes and User Waypoints

Select **Upload Routes and User Waypoints** from GMF to copy all routes and user waypoints from a secure data storage device to the IDU. Use this option in conjunction with the "Download Routes and User Waypoints" option to upload the same routes and user waypoints in multiple aircraft.

### 8.7.3. Delete Routes and User Waypoints

When corrupted routes cause the IDU to continually reboot, select **Delete Routes** on the Ground Maintenance page to remove all routes and the user waypoint file (USER.DAT) from the IDU.

## 8.8. Secure Data Storage Device Limitations

When powering up the IDU with a secure data storage device inserted and "Error: No updater files found on a USB drive" displays, the secure data storage device is likely not acceptable for loading or transferring data.

- 1) Ensure the secure data storage device with required files is properly connected.
- 2) Try again after reboot.
- 3) Press any button to continue.
- 4) Try a different secure data storage device.



---

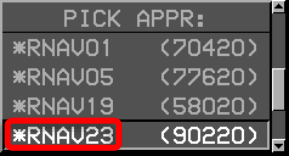
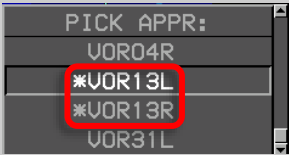




**NOTE:**

Secure data storage device must be formatted as FAT16 or FAT32.

---

## 8.9. Summary of Asterisk Symbology

Table 8-6: Summary of Asterisk Symbology Use

Examples of Asterisk Locations	Meaning of Asterisk Use																											
 <p>PICK APPR: *RNAU01 (70420) *RNAU05 (77620) *RNAU19 (58020) <b>*RNAU23 (90220)</b></p> <p>Examples include "VOR or GPS RWY..." or "RNAV (GPS) RWY..."</p>  <p>PICK APPR: UOR04R <b>*VOR 13L</b> *VOR 13R UOR31L</p>	<p>Approaches noted by an asterisk (*) before the approach procedure label may use GPS/SBAS for navigation.</p>																											
 <p>PICK TRANS: BSU <b>*JUDIE</b> - UTF -</p>	<p>Transition most likely selected due to avenue of arrival. (Not all instrument procedures include a transition.)</p>																											
 <table border="1"> <thead> <tr> <th>WAYPOINT</th> <th>UNAU/OFFSET</th> <th>PATH</th> </tr> </thead> <tbody> <tr> <td>EDNN</td> <td></td> <td>B+ 195°</td> </tr> <tr> <td><b>*KPT</b></td> <td></td> <td>B+ 098°</td> </tr> <tr> <td>KUUDL</td> <td></td> <td>B+ 096°</td> </tr> <tr> <td>ERKIR</td> <td></td> <td></td> </tr> </tbody> </table>  <table border="1"> <tbody> <tr> <td>LITI K</td> <td>4600' /---</td> <td>15</td> </tr> <tr> <td><b>*VEAB</b></td> <td>-----' /---</td> <td>35</td> </tr> <tr> <td>D340L</td> <td>5000' /---</td> <td>R3</td> </tr> <tr> <td>JUNGE</td> <td>5000' /---</td> <td></td> </tr> </tbody> </table>	WAYPOINT	UNAU/OFFSET	PATH	EDNN		B+ 195°	<b>*KPT</b>		B+ 098°	KUUDL		B+ 096°	ERKIR			LITI K	4600' /---	15	<b>*VEAB</b>	-----' /---	35	D340L	5000' /---	R3	JUNGE	5000' /---		<p>In addition to the magenta color, asterisk designates the active leg.</p>
WAYPOINT	UNAU/OFFSET	PATH																										
EDNN		B+ 195°																										
<b>*KPT</b>		B+ 098°																										
KUUDL		B+ 096°																										
ERKIR																												
LITI K	4600' /---	15																										
<b>*VEAB</b>	-----' /---	35																										
D340L	5000' /---	R3																										
JUNGE	5000' /---																											
 <p>PICK END PT: <b>*SBG</b> LNZ STO SNU</p>	<p>Asterisk designates the nearest end point.</p>																											

## 8.10. Altimeter Settings

Use caution when setting the altimeter and inadvertently changing the transition level. If this is reset to a lower than published transition level, **CK BARO** may appear due to the altimeter setting not set to 29.92 inHg or 1013 mbar.

# Traffic

## T 1. Traffic Symbolology

Traffic is drawn using the hidden surface removal techniques of the terrain and obstruction rendering so that traffic behind terrain appears to be so. Traffic is displayed using standard traffic symbols as defined in Table T-1 and Table T-2.

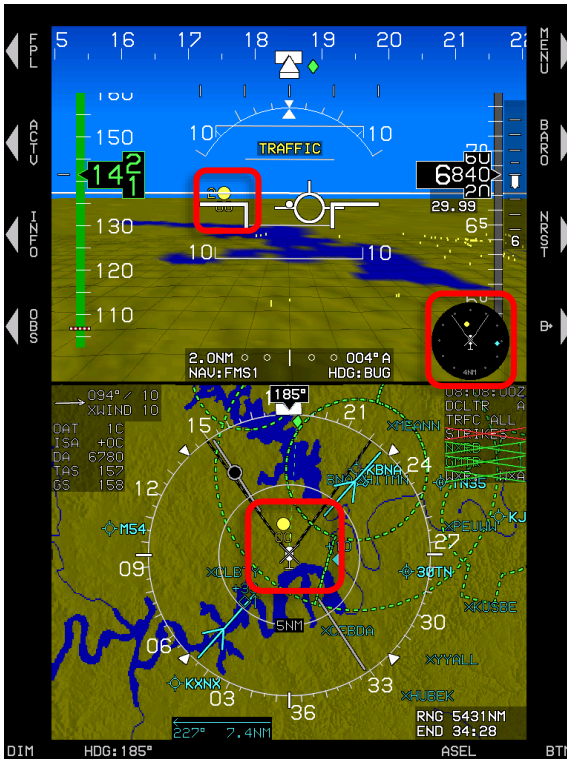


Figure T-1: Traffic Symbolology

- 1) Resolution Advisory (RA): Traffic with a dangerous closest point of approach and generates climb or descent commands as defined by internal TCAS-II sensor logic.
- 2) Traffic Advisory (TA): Traffic with a dangerous closest point of approach as defined by internal traffic sensor logic.
- 3) Proximate Advisory (PA): Traffic within 6NM/11KM and  $\pm 1200'$ / $\pm 366m$  from ownship that is not an RA or TA.
- 4) Other Traffic (OT): Traffic beyond 6NM/11KM or  $\pm 1200'$ / $\pm 366m$  from ownship that is not an RA or TA.

Range indication immediately to the left of the symbol is in NM or KM and relative altitude is above or below the symbol in feet or meters (in hundreds of units) depending on the “Speed Units” system limit setting.

Table T-1: Traffic Symbology












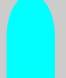
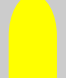



Type Traffic	Symbology			
TCAS-I, TCAS-II, and TIS-A				
	Other Traffic	Proximate Advisory	Traffic Advisory (Flashing)	Resolution Advisory (Flashing)

Table T-2: ADS-B Traffic Symbols

	Other Traffic	Proximate Advisory	Traffic Advisory (Flashing)
High-Integrity Traffic with Track Information			
High-Integrity Traffic without Track Information			
Degraded Position Traffic with Track Information			
Degraded Position Traffic without Track Information			

Rendering rules for traffic are defined in Table T-3. Distance is displayed in NM or KM, altitude displayed in feet or meters, and VSI in fpm or m/s depending on the “Speed Units” system limit setting.


Table T-3: Traffic Rendering Rules

Type Traffic	Distance	Results
TA and RA (TCAS-I/II, TAS, and TIS-A)	Off-scale	Half-symbols
TA and RA (no bearing)	N/A	Displayed with text
OT and PA (no bearing)	Off-scale	Not displayed
TCAS-I/II, TAS, and TIS-A sensor	Within 200/61M of ground	Not displayed
OT and PA Traffic	Off-scale	Not displayed

When TCAS-II is enabled, the background of the VSI functions as an RA display with green and red colored regions for resolution advisory guidance. VSI display in fpm or m/s depending on “Speed Units” system limit setting.



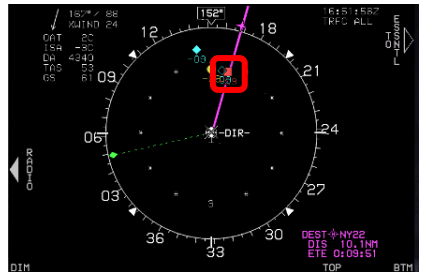RA PFI



RA MFD Traffic Page

Figure T-2: TCAS-II RA Indication

Traffic pop ups: When a traffic alert is generated, a pop-up function displays traffic on the PFI, moving map page, and mini traffic on the PFI.



Figure T-3: Traffic Pop-Ups

**T 1.1. Mini Traffic**

When selected from declutter options, mini traffic is displayed in the lower right corner of the PFI area above the active waypoint identifier and has clock face markings fixed at the 6 NM/10 KM scale.



Distance in NM



Distance in KM

Figure T-4: Mini Traffic

During traffic warning (TA or RA), and the aircraft is above 500' AGL, the mini traffic scale automatically adjusts in multiples of units depending on EFIS limits settings (see Table T-4).

Table T-4: Mini Traffic Scale

Distance in NM			Distance in KM		
2	4	6	3	6	10

The mini map, mini traffic, and analog AGL indication are mutually exclusive with mini traffic taking precedence during a traffic warning (TA or RA) if above 500'AGL. This feature automatically disappears in Unusual Attitude mode.

## T 2. Dedicated Traffic Page

When selected, a Traffic page is available based on the appearance of a TCAS display.

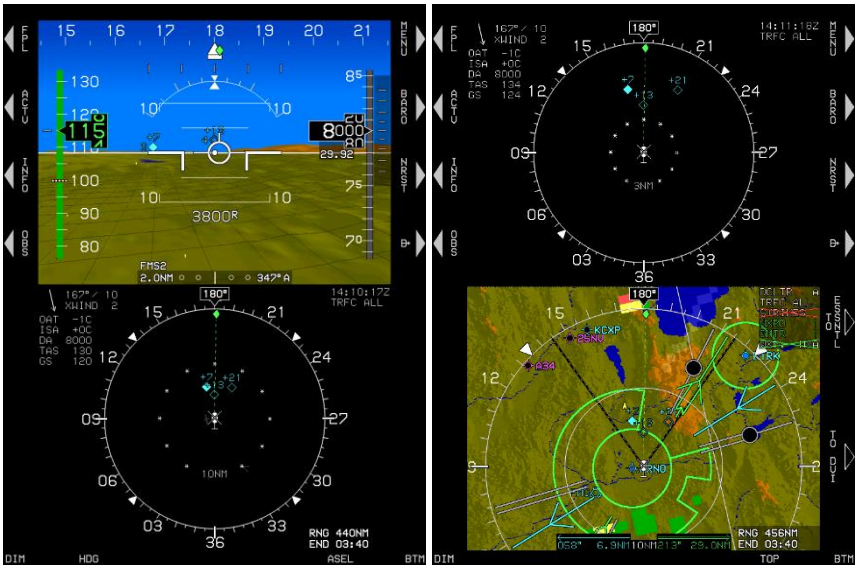


Figure T-5: PFD and MFD Traffic Page

### T 2.1. MFD Page Menu

**TRAFFIC:** Shows the Traffic page.

When MFD is full map and selecting the Traffic page on the top or bottom area, the other area returns to its last configured page.





1



2

PFD or MFD Bottom Traffic Page

MFD Top Traffic Page

Figure T-6: Traffic Page Access

### T 2.2. Traffic Display Format

The traffic display uses a centered display format with the ownship symbol centered on the traffic page with data displayed out to an equal distance in all directions.



Figure T-7: Traffic Display Format

With traffic source ADS-B, traffic vectors and aircraft identification data are shown. The traffic vector is a line connecting the traffic's current position with the traffic's predicted position based on its current track and ground speed. The prediction time, in minutes, is pilot-selectable.



Aircraft identification (e.g., aircraft registration number or scheduled airline flight number) is text located near the traffic symbol in the same color as the traffic symbol.

Figure T-8: Test Example of Flight Tag ID

### T 2.3. Traffic Screen Range

The TCAS range ring is centered upon the ownship symbol to help the pilot judge range to displayed symbols. The distance from the ownship to the range ring is displayed on the bottom of the range ring and is half the distance of the traffic page range in most cases (3NM range ring shown on 5 and 10NM page

ranges). All distances in Table T-5 represent the distance from the ownship symbol to the compass rose.

Table T-5: Traffic Screen Range

Range in NM					Range in KM				
5	10	20	50	100	10	20	50	100	200

**T 2.4. PFD First Level Menu**

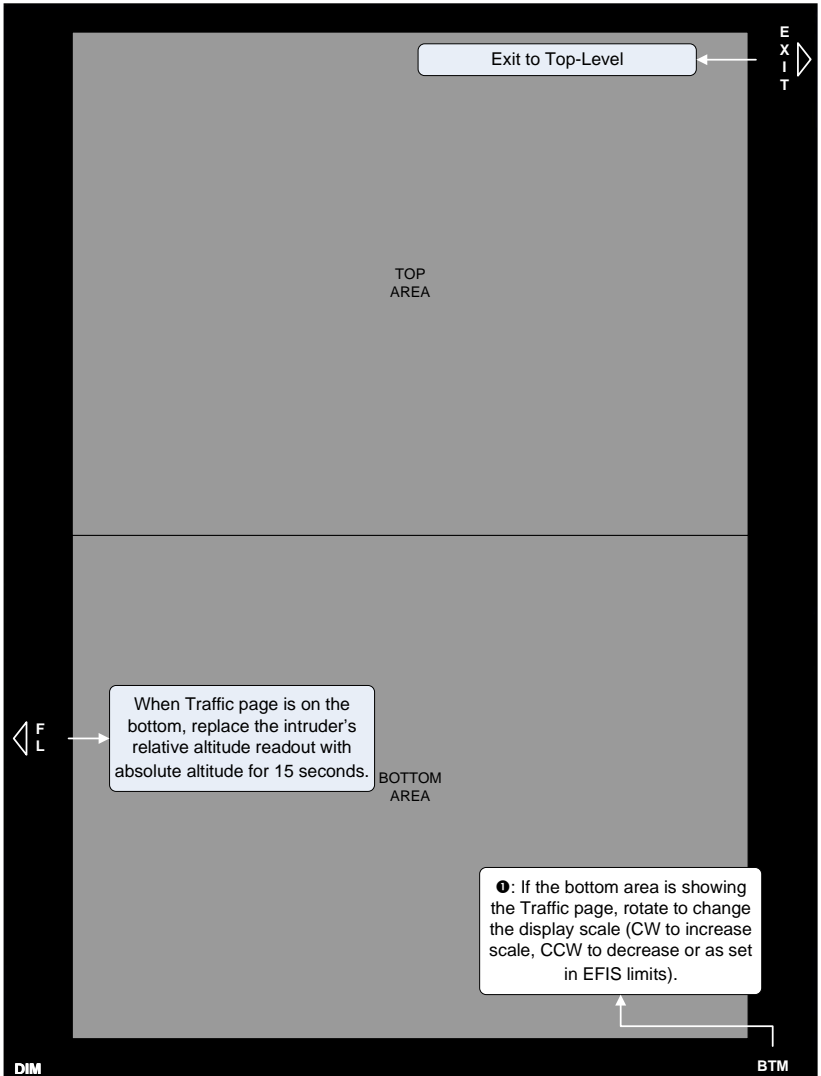


Figure T-9: PFD First Level Menu

## T 2.5. MFD First Level Menu (Normal Mode)

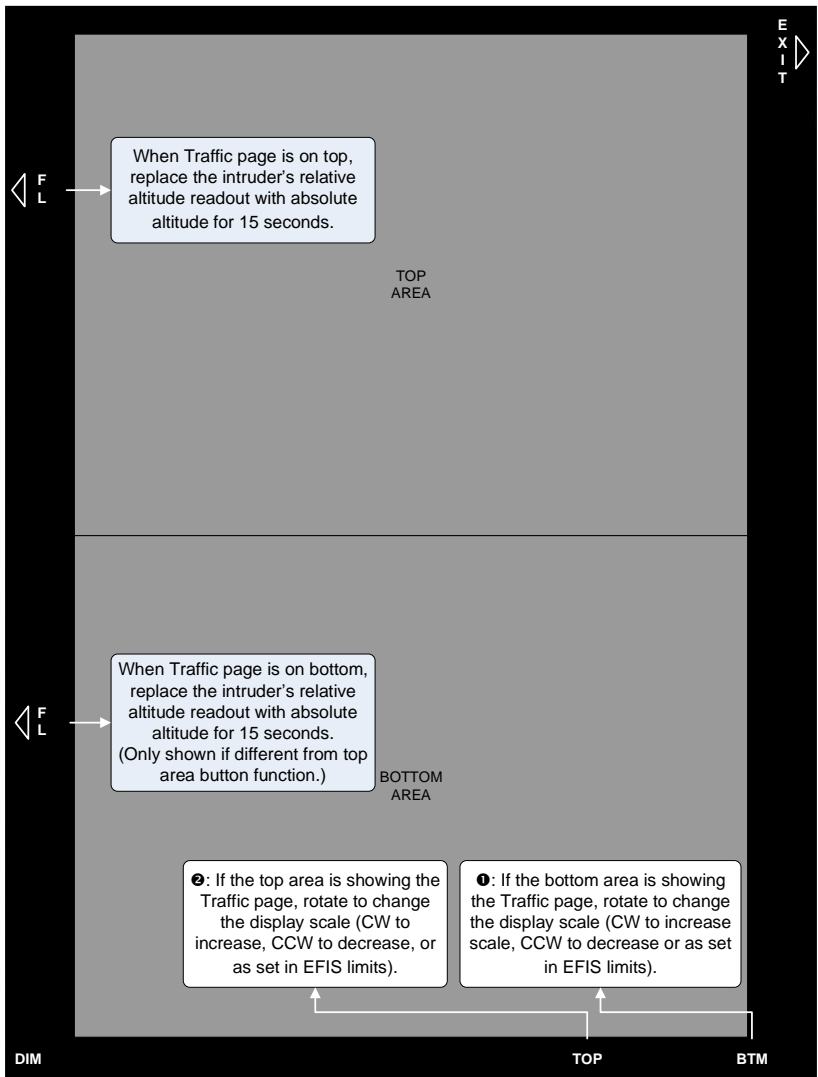


Figure T-10: MFD First Level Menu (Normal Mode)

## T 2.6. Flight Level (FL) Option

When the Traffic page is displayed, press **FL (L6)** to replace the intruder's relative altitude with absolute altitude for 15 seconds.

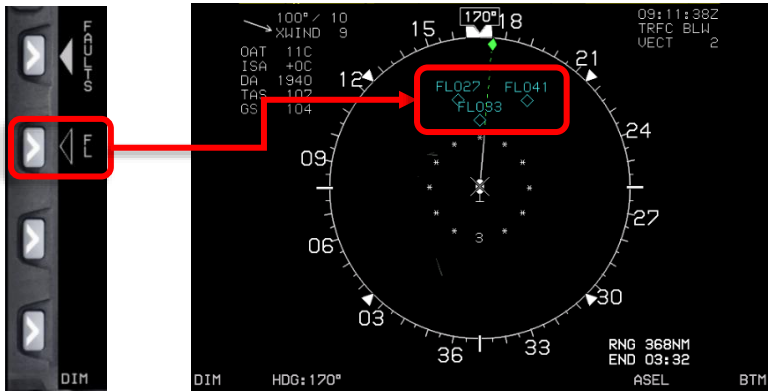


Figure T-11: Flight Level Option

**T 2.7. MFD Traffic Format Menu**

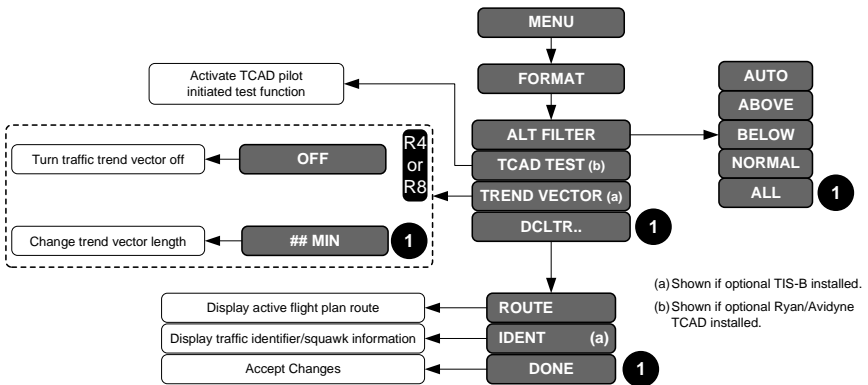


Figure T-12: MFD Traffic Format Menu

OT and PA traffic is altitude-filtered in accordance with pilot-selected filters as defined in Table T-6. All values are altitudes in feet or meters depending on “Speed Units” system limit setting, and VSI rates are in fpm.

Table T-6: Pilot Selected OT and PA Traffic Altitude-Filter

Mode	Parameter
AUTO	If aircraft VSI is less than -500fpm, traffic within +2,700 and -9,900 feet of aircraft altitude displayed.
	If aircraft VSI is more than +500 fpm, traffic within -2,700 and +9,900 feet of aircraft altitude displayed.
	Otherwise, traffic within -2,700 and +2,700 feet of aircraft altitude displayed.
ABOVE	Traffic within -2,700 and +9,900 feet of aircraft altitude displayed.

Table T-6: Pilot Selected OT and PA Traffic Altitude-Filter

Mode	Parameter
BELOW	Traffic within +2,700 and -9,900 feet of aircraft altitude displayed.
NORMAL	Traffic within -2,700 and +2,700 feet of aircraft altitude displayed.
ALL	All received traffic displayed, no altitude filtering.

**NOTE:**

The EFIS uses feet for internal traffic filter implementation.

### T 2.7.1. Traffic Page Format Menu (Step-By-Step) (PFD or MFD)

- 1) Use **1** (PFD or MFD BTM area), **1** or **2** (MFD) as applicable to select, then push to enter. Highlight **TRAFFIC** then push to enter. The following example is for Traffic page on the bottom.
- 2) To adjust Traffic page range, use **1** to select range (see Table T-5).
- 3) Press **MENU (R1)**, within 10 seconds press **FORMAT (R8)** to format the Traffic page.
- 4) Use **1** to highlight **ALT FILTER..** then push **AUTO** or use **1** to select **ABOVE, BELOW, NORMAL, or ALL** then push to accept altitude filtering.
- 5) Repeat step 3 and use **1** to highlight **TCAD TEST** then push to enter (TCAD/TAS [RS-232] ground operations only).
- 6) Repeat step 3 and use **1** to highlight **DCLTR..** then push to enter. Use **1** to select or deselect to show route on Traffic page.
- 7) Repeat step 3 and highlight **IDENT** then push to toggle IDENT on or off (ADS-B traffic only).
- 8) To save changes and exit menu, use **1** to highlight **DONE** then push to enter or press **EXIT (R1)**.

### T 2.8. Clock and Options

As defined in Section 2 Display Symbolology.

Table T-7: Clock and Options

Feature	Options	Notes
Zulu or Local Time	hh:mm:ssZ hh:mm:ssL	Synchronized with the GPS/SBAS constellation.

Table T-7: Clock and Options

Feature	Options	Notes
Traffic Status	Enabled or Disabled	<p>If traffic is disabled, overlying red "X". When enabled, traffic altitude filtering is as follows (see Table T-6).</p> <p>AUTO = TRFC AUTO ABOVE = TRFC ABV BELOW = TRFC BLW NORMAL = TRFC NORM ALL = TRFC ALL</p>

**T 2.9. Compass Rose Symbols**

As specified in Section 2 Display Symbology.

**T 2.10. Air Data and Ground Speed**

As defined in Section 2 Display Symbology.

**T 2.11. Fuel Totalizer/Waypoint Distance Functions**

As defined in Section 2 Display Symbology.

**T 3. PFD Declutter (DCLTR) Menu**

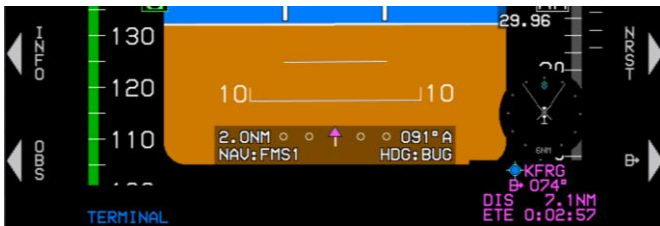


Figure T-13: Basic Mode Mini Traffic

Upon activating the PFD declutter menu, a list of declutter items is shown (see Table T-8). Manual decluttering is automatically overridden (PFD traffic shown) while an RA or TA is active.

Table T-8: PFD Declutter Options and Features

Declutter Options	Configuration	
	SVN	Basic
PFD Mini Traffic	✓	✓
Perspective Traffic Depiction	✓	N/A

### T 4. MFD Fault Display Menu

Loss of communications with traffic sensor (TRFC) is indicated by an "X" in place of the "OK."



Figure T-14: Menu Faults Status

### T 5. Menu Synchronization


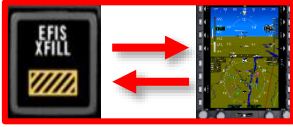


Section 3 Menu Functions and Step-by-Step Procedures for additional information.

Table T-9: Menu Synchronization

Menu Parameter	Notes
<p><i>The following menu parameters are synchronized across all displays when crosslink is enabled. Otherwise, they are only synchronized onside. These parameters are FMS parameters and allow the pilot and co-pilot FMSs to be operated independently when crosslink is inhibited. <b>Intra-System</b> or <b>Inter-System</b> communications.</i></p>	
<p>TCAS-II control parameters</p>	
<p>Traffic Filter Setting</p>	

*The following menu parameters are only synchronized onside. These parameters are usually sensor selections or PFD options used to keep the appearance of any pilot's PFD consistent in the case of PFD reversion. The onside characteristic means*

Table T-9: Menu Synchronization

Menu Parameter	Notes
<p><i>that individual pilots can still adjust their PFD settings to their preference. <b>Intra-System</b> communications.</i></p> 	
Sensor Selections	
PFD Traffic Perspective	
<p><i>The following menu parameters are independent between displays. These are used to support non-PFI area display options to give the pilot maximum MFD operating flexibility. Note that some of these parameters are also independent between top and bottom MFD areas as specified in the notes.</i></p>	
	
MFD Traffic Page Settings (show FL)	Independent between top and bottom 680 MFD areas



# Remote Bugs Panel (RBP)

## RBP 1. Remote Bugs Panel

The Remote Bugs Panel (RBP) provides dedicated controls for frequently used bugs and controls as defined in Table RBP-1.

The heading (HDG) and altitude (ALT) knobs behave similarly as the IDU knobs (see Section 3 Menu Functions and Step-By-Step Procedures for details).

During initialization, the RBP begins with “GENESYS RBP” on the main and option display screens. To access the internal light sensor control for brightness, press the two arrow buttons simultaneously and rotate the multifunction knob to adjust. Press the Option button to exit the brightness control program and return the RBP to normal operation.



### NOTE:

The following RBP functions are available:

- 1) GPS Course
- 2) VLOC1 Course
- 3) VLOC2 Course

The above two groups of RBP functions are mutually exclusive as determined by the EFIS limits settings.

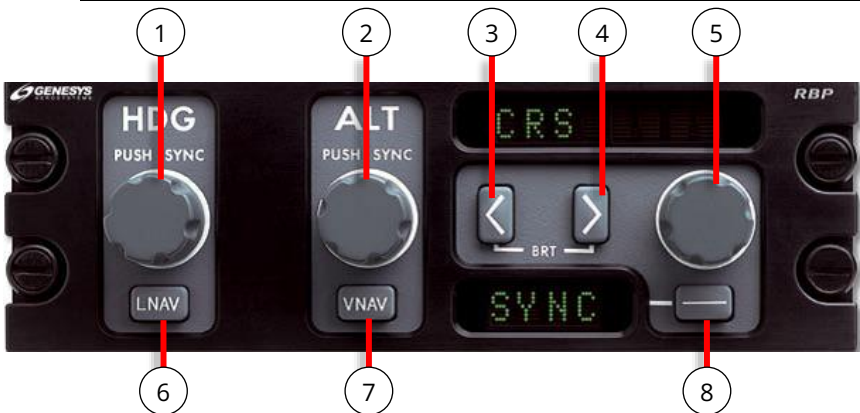


Figure RBP-1: Remote Bugs Panel

Table RBP-1: Remote Bugs Panel (RBP)

Button/Knob	Function	Rotate	Push Knob/Press Button
① HDG Knob	Heading Bug	Increase or decrease	Synchronize to current heading
② ALT Knob	Altitude Bug	Increase or decrease target altitude	Synchronize to current altitude
③ ④ Arrow Buttons	Function Scroll	N/A	Move through "Set" options. Press both arrow buttons simultaneously to place into dimming mode.
⑤ Multifunction Knob (Function Active Nav Course)	GPS Course	Increase or decrease	If a manual GPS exists: (not in automatic OBS), synchronize to current bearing to active waypoint.
	VLOC1 VLOC2	Increase or decrease	Synchronize nav source course to the current bearing to the station if NAV1 or NAV2 receiver is coupled to VOR; or synchronize the VLOC1 or 2 course to current aircraft heading if NAV receiver is coupled to LOC.
	ADF1 ADF2	Increase or decrease	Synchronize ADF1 or ADF2 course to the current bearing to the station
⑥ LNAV Button (With autopilot enabled)	LNAV	N/A	Toggle HDG sub-mode and LNAV sub-mode. (Only active when <b>HDG</b> or <b>LNAV</b> soft tile appears on EFIS.) Not applicable to installations without an autopilot or installations with a fully-integrated digital autopilot (i.e., Genesys Helicopter Autopilot because there are no HDG or LNAV sub-modes in those integrations.
⑦ VNAV Button (With autopilot enabled)	VNAV	N/A	Genesys Helicopter Autopilot: Turn off any preselected target altitude bug EFIS with VNAV Sub-Mode: Turn off target altitude bug to allow for entering VNAV sub-mode. (Only active when <b>VNAV</b> appears on EFIS.) Not applicable to installations without an autopilot or installations

Table RBP-1: Remote Bugs Panel (RBP)

Button/Knob	Function	Rotate	Push Knob/Press Button
			with a fully-integrated digital autopilot (i.e., Genesys Helicopter Autopilot due to no HDG or LNAV sub-modes with this configuration.
8 Set Option "---" Button	---	N/A	Toggles function displayed in option display (also exits brightness dimming mode)



Figure RBP-2: Main and Option Messages



Figure RBP-3: Main and Option Messages (with Genesys Helicopter Autopilot)

Table RBP-2: Main and Option Messages - Active NAV Course Function

Selected Active Nav Source	Main Message	Option Message
GPS	NAV FMS	AUTO (If EFIS in manual OBS mode) MAN (If EFIS in automatic OBS mode)
VLOC1	NAV VOR1 * NAV LOC1 ** NAV BC1 ***	Current VLOC1 course setting (degrees)
VLOC2	NAV VOR2 * NAV LOC2 **	Current VLOC2 course setting (degrees)

Table RBP-2: Main and Option Messages - Active NAV Course Function

Selected Active Nav Source	Main Message	Option Message
	NAV BC2 ***	
ADF1	NAV ADF1	Current ADF1 course setting (degrees)
ADF2	NAV ADF2	Current ADF2 course setting (degrees)

\* Nav receiver coupled to VOR

\*\* Nav receiver coupled to LOC

\*\*\* Nav receiver coupled to LOC BC

Table RBP-3: Main and Option Messages - Other Functions

Function	Main Message	Option Message
GPS Course (EFIS in manual OBS mode)	CRS FMS	AUTO (If EFIS in manual OBS mode)
VLOC1 Course	CRS VOR1 * CRS LOC1 ** CRS BC1 ***	Current VLOC1 Course setting (degrees)
VLOC2 Course	CRS VOR2 * CRS LOC2 ** CRS BC2 ***	Current VLOC2 Course setting (degrees)
Airspeed Bug	SPD BUG	ON (If airspeed bug is OFF) OFF (If airspeed bug is ON)
Vertical Speed Bug	VSI BUG	ON (If vertical speed bug is OFF) OFF (If vertical speed bug is ON)
Climb Angle Setting	CLIMB ANG	Current climb angle setting (tenths of a degree)
Descent Angle Setting	DCND ANG	Current descent angle setting (tenths of a degree)
Decision Height Bug	DEC HT	ON (If decision height bug is OFF) OFF (If decision height bug is ON)
Minimum Altitude Bug	MIN ALT	Current VLOC1 Course setting (degrees)

\* Nav receiver coupled to VOR

\*\* Nav receiver coupled to LOC

\*\*\* Nav receiver coupled to LOC BC

# WX-500 Lightning Strikes

## S 1. WX-500 Data Symbolology

When interfaced with the optional WX-500, a strike page is available based on the appearance of the Goodrich WX-1000 display. When selected, the EFIS displays cell mode or strike mode lightning strikes in correct relationship to the ownship symbol with the limits defined in Table S-1.

Table S-1: Lightning Strikes

Time or Distance Limit	View
Display scale less than 25 NM or 50KM	Strikes not shown
More than 3 minutes old	Strikes not shown
Strikes less than 20 seconds old	Yellow lightning symbol
Strikes between 20 seconds and 2 minutes old	Yellow large cross symbol
Strikes between 2 and 3 minutes old	Yellow small cross symbol

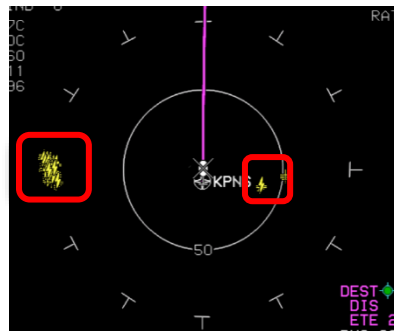
The pilot may select with Strikes overlay on the map page in arc or centered mode.

**Arced:** Ownship displaced toward the bottom of the screen. Strike data are displayed in a larger scale while displaying all data within range ahead of the aircraft.

**Centered:** Ownship symbol is in the center of the screen with navigation data displayed out to an equal distance in all directions.



Map Page Strikes Display Overlay



Strikes Page Display

Figure S-1: Lightning Symbols

A range ring is centered upon the ownship symbol to help judge range to displayed symbols.

Table S-2: Lightning Screen Range

From Ownship to	Range in NM				Range in KM			
Range ring (shown on range ring)	12.5	25	50	100	25	50	100	250
Strikefinder markers	25	50	100	200	50	100	200	500

Strikefinder markings are aligned with either magnetic north or true north depending on the status of true north as configured in EFIS limits. When the AHRS is in DG mode, “DG” appears to the right of the ownship symbol.

## S 2. MFD Strikes Page



Figure S-2: PFD with Strikes Page on Bottom

### S 2.1. MFD Strikes Page (Step-By-Step)

- 1) Use **1** (PFD or MFD BTM area), **1** or **2** (MFD), then highlight **STRIKES** and push to enter for STRIKES page to appear.
- 2) When the MFD is full map, use **2** and highlight **STRIKES** to display Strikes page on top and last selected MFD page on the bottom.

## S 2.2. PFD First-Level Menu

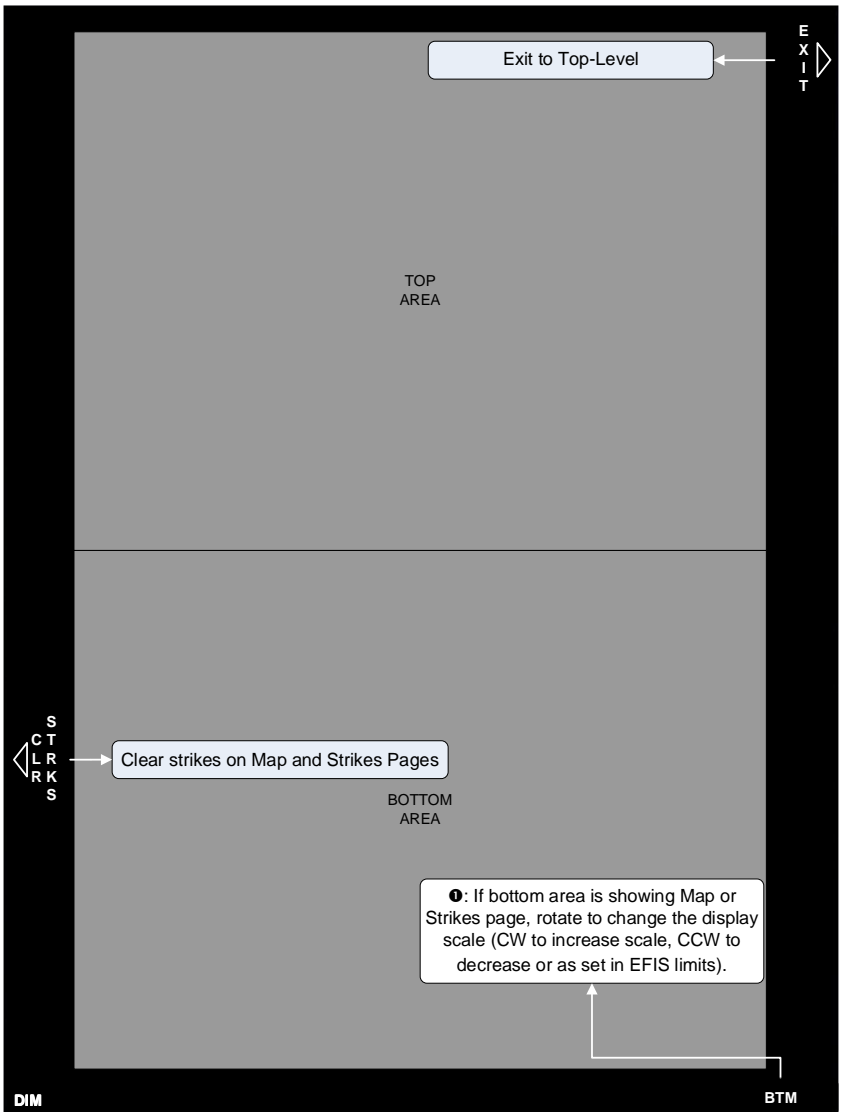


Figure S-3: PFD First-Level Menu

### S 2.3. MFD First-Level Menu (Normal Mode)

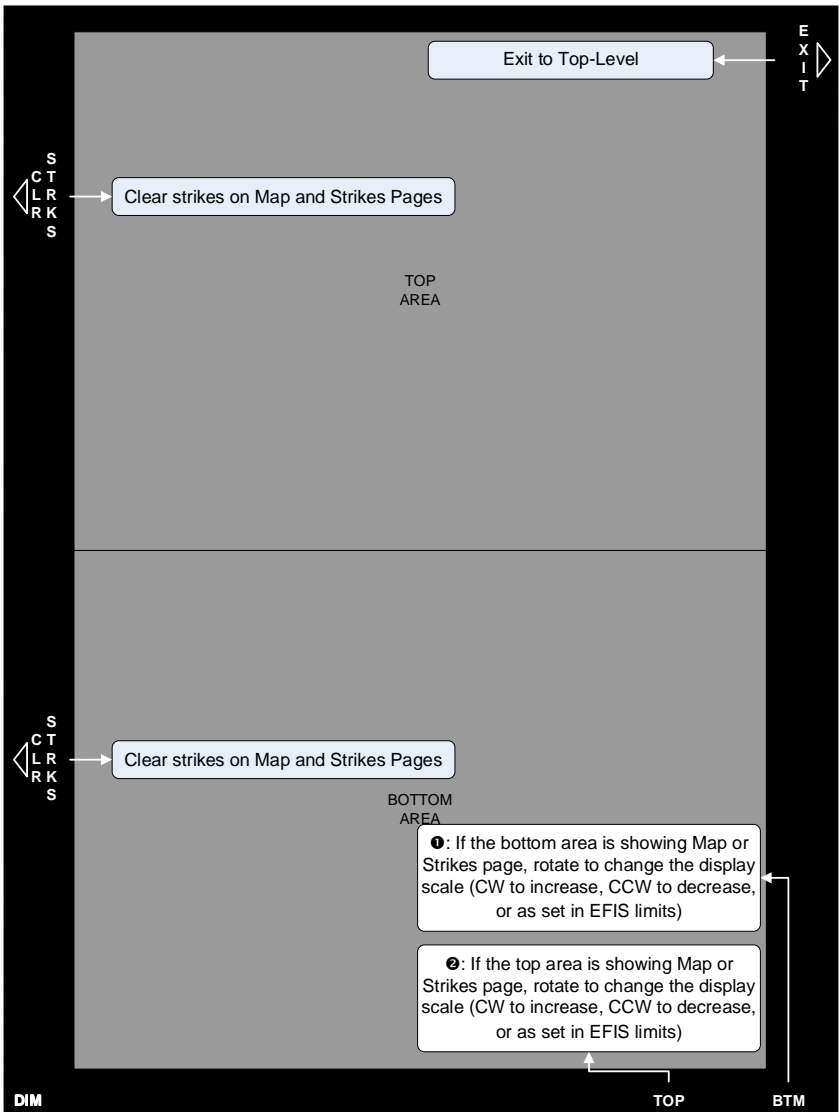


Figure S-4: MFD First-Level Menu (Normal Mode)

### S 2.4. Clock and Options

The following are displayed in the upper right corner of the page:

- 1) Zulu Time or Local Time: As specified in Section 2 Display Symbology.



- 2) WX-500 Status: When selected, displays cell mode lightning strikes in correct relationship to the ownship symbol with the limits found in Table S-3.

```
13:40:14Z
CELL MODE
RATE 611
```


Zulu Time

```
21:38:38L
CELL MODE
RATE 672
```

Local Time

Figure S-5: Clock and Options

Table S-3: WX-500 Status

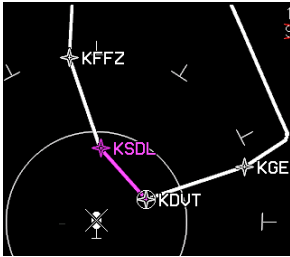
Condition	Annunciation
System Normal, Cell Mode	CELL MODE annunciates mode RATE ### depicts strike rate
System Normal, Strike Mode	STRK MODE annunciates mode RATE ### depicts strike rate
System Failed with "Show Full Sensor Status" enabled in EFIS Limits	STRIKES overlaid with red "X" Strike symbols removed 
System in Test Mode	STRK TST shown Strike symbols removed

A new strike rate value is calculated every five seconds during normal operation, based upon strikes within the selected display range. The number of fresh strikes (less than 20 seconds old) is used to generate a strike rate representing strikes per minute. Strike rate increases are displayed immediately upon calculation, while decreases in strike rate are damped. Activating the strike clear function resets the strike rate to zero.

### S 2.5. Active Flight Plan Path/Manual Course/Runways

When there is an active flight plan and the GPS/SBAS OBS setting is automatic, the flight plan path is shown on the Strikes page in correct relationship to the ownship symbol.

When there is an active waypoint and the GPS/SBAS OBS setting is manual, the course through the waypoint is shown as a pointer centered on the waypoint. The pointer matches the lateral navigation guidance on the PFD (GPS/SBAS CDI in manual OBS mode, skyway boxes, and mini map).



The active flight plan path's active leg/manual course and active waypoint are magenta but turn amber (yellow) in the event of a GPS LOI/LON caution. Airport runways appear in correct relationship and scale to the ownship symbol.

Figure S-6: Active Flight Plan Path/Manual Course/Runways

**S 2.6. Air Data and Ground Speed**

Display as defined in Section 2 Display Symbology.

**S 2.7. Fuel Totalizer/Waypoint Distance Functions**

As defined in Section 2 Display Symbology.

**S 2.8. Strikes Format Menu**

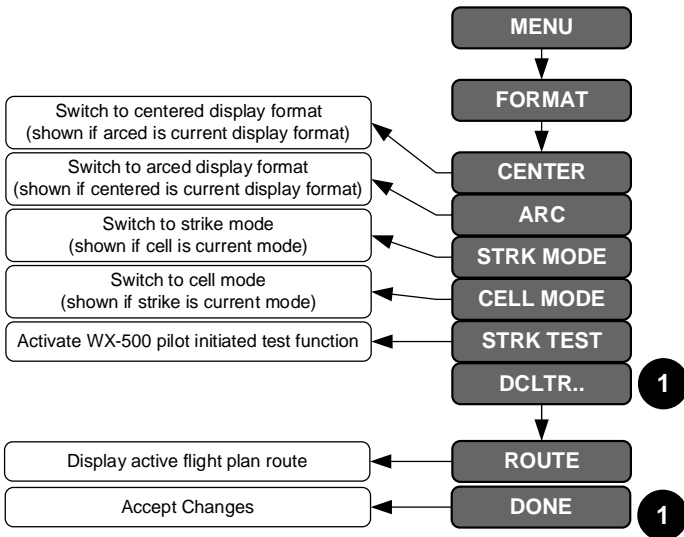


Figure S-7: Strikes Format Menu

**S 3. MFD Fault Display Menu**

Loss of communications with the WX-500 is indicated by an "X" replacing the "OK".

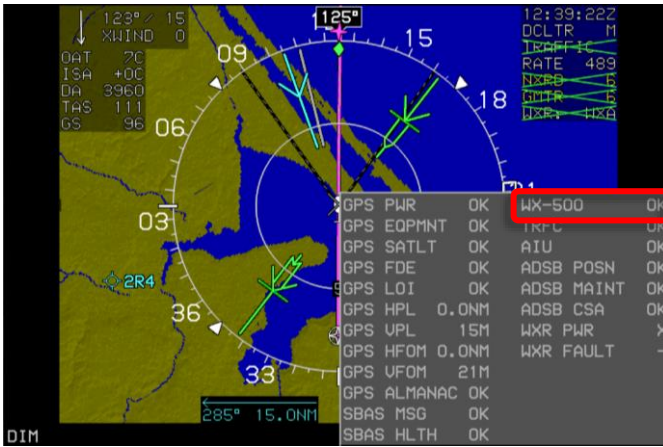
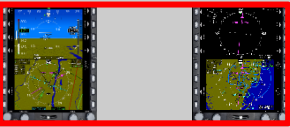



Figure S-8: MFD Fault Display Menu

### S 4. Menu Synchronization

See Section 3 Menu Functions and Step-by-Step Procedures for additional information.

Table S-4: Menu Synchronization

Menu Parameter	Notes
<p><i>The following menu parameters are independent between displays. These are used to support non-PFI area display options to give the pilot maximum MFD operating flexibility. Note that some of these parameters are also independent between top and bottom MFD areas as specified in the notes.</i></p>	
	
<p>Sensor Selections</p> <p>Strike (WX-500) Page Settings</p>	<p>Independent between top and bottom MFD areas</p>

# Datalink

## D 1. Datalink Symbolology

When interfaced with an optional datalink or ADS-B receiver, a Datalink page is available.

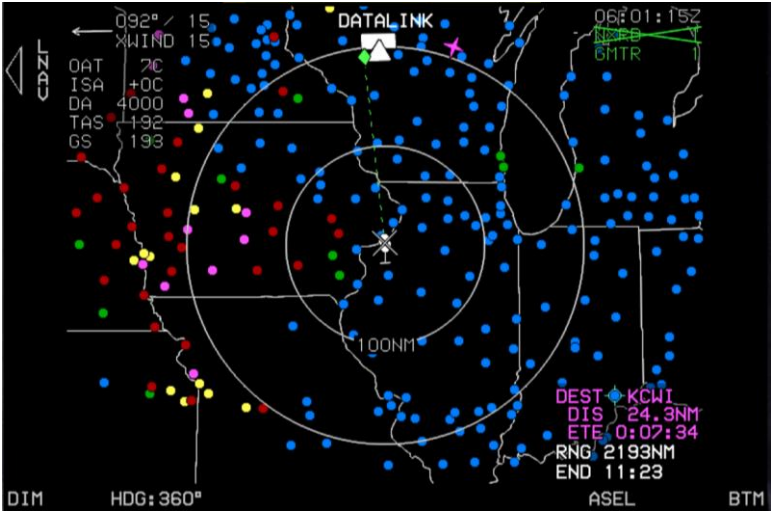


Figure D-1: Datalink Symbolology with G METAR On

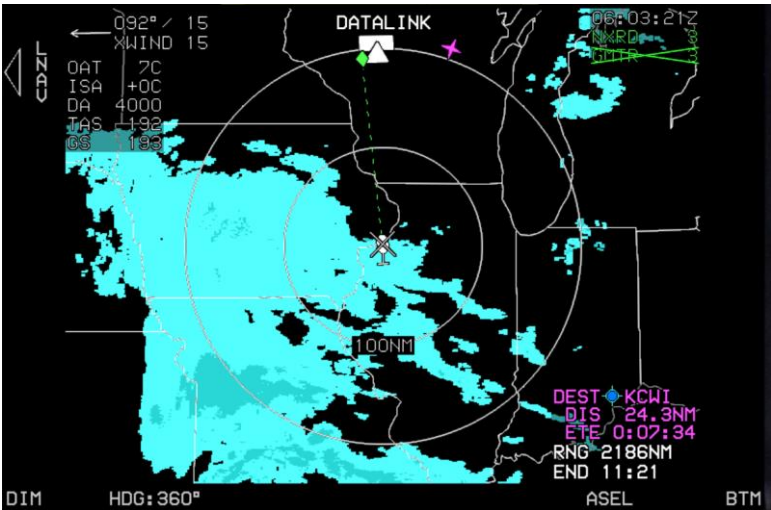


Figure D-2: Datalink Symbolology with NEXRAD On

### D 1.1. Borders

National and United States state borders are drawn in white in their correct relationship to the ownership symbol. The lowest scale available is 25NM or 50KM and selectable on the Map page.

### D 1.2. ADS-B Data

ADS-B data products are available to be individually selected for display as defined in Table D-1.

Table D-1: ADS-B Data

NEXRAD Data	Available
Graphical METAR Data	Available. Derived from textual METAR data using EFIS algorithm.
Graphical Weather Conditions Data	
Textual METAR Data	Available
Textual TAF Data	Available

#### D 1.2.1. NEXRAD Data

NEXRAD data is displayed on the MFD in correct relationship as colored regions of precipitation using the convention in Table D-2.

Table D-2: Datalink NEXRAD Data

Color	Meaning
Gray Shading	Areas beyond the limits of radar coverage or areas with missing data
Magenta	Rain $\geq$ 50dBZ
Red	Rain $\geq$ 45dBZ and $<$ 50dBZ
Light Red	Rain $\geq$ 40dBZ and $<$ 45dBZ
Amber (Yellow)	Rain $\geq$ 30dBZ and $<$ 40dBZ
Green	Rain $\geq$ 20dBZ and $<$ 30dBZ
Cyan	Snow $\geq$ 20dBZ
Light Cyan	Snow $\geq$ 5dBZ and $<$ 20dBZ
Magenta	Mixed Precipitation $\geq$ 20dBZ (Area is distinguishable from rain $\geq$ 50dBZ by graphical context)
Light Magenta	Mixed Precipitation $\geq$ 5dBZ and $<$ 20dBZ

When the EFIS is interfaced with an optional weather radar, NEXRAD automatically declutters when weather radar returns are selected for display. Display of NEXRAD data is inhibited during active FLTA alerts.



Table D-3: NEXRAD Decluttered by WX-RDR

Color	Meaning
	<p>MFD full Map page with Datalink and WX- RDR selected for overlay</p>

### D 1.2.2. Graphical METARS

Graphical METARs (G METARS) are displayed in correct relationship to the ownship symbol at ranges defined in Table D-4.

Table D-4: G METARS Range

Screen Range		Display
NM	KM	
50	100	All Graphical METARs with Airport symbol and ID
100	200	All Graphical METARs with Airport symbol
200	500	All Graphical METARS
500	1,000	VFR Graphical METARS are decluttered
1,000	2,000	VFR and MFVR Graphical METARS are decluttered.
2,000	4,000	

If the airport has an available datalinked METAR, the circular part of the airport symbol is colored-fill with the coloring convention in Table D-5.

Table D-5: Graphical METAR Symbols

Color		Meaning
Sky Blue		Visual Flight Rules (VFR)
Green		Marginal Visual Flight Rules (MVFR)
Amber (Yellow)		Instrument Flight Rules (IFR)
Red		Low Instrument Flight Rules (LIFR)
Magenta		Less than Category 1 Approach Minimums
Black		No Data

Graphical METARs are also displayed in the menu system “nearest airport,” “nearest weather,” and “info” functions.



Figure D-3: NRST Airport

Graphical weather conditions data are displayed in the menu system “info” function as large colored squares per the convention in Table D-6.

Table D-6: Datalink Graphical METAR Precipitation

Color	Meaning
Sky blue	No significant precipitation
Green	Rain
White	Snow
Red	Hazardous weather
Right half gray	Obscuration to visibility
Small black square centered in large square	High wind
Black	No data

Textual METAR and TAF data are displayed when appropriate in the menu system “info” function. Time of observation and forecast are contained within the text.





Figure D-4: METAR and TAF Report

## D 2. Top-Level Menu Automatic Pop-Up Function Descriptions

See Section 3 Menu Functions and Step-by-Step Procedures for top-level menu option descriptions. Soft menu tiles appear adjacent to buttons under the specified conditions.

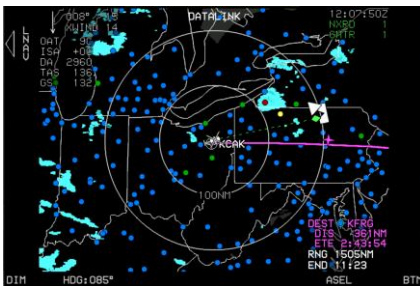
### D 3. Dedicated Datalink Page

#### D 3.1. MFD Page Menu


**DATALINK:** Shows the Datalink page.

#### D 3.2. Datalink Page Orientation

Datalink is always displayed in North-Up orientation. The page has a boundary circle instead of a compass rose and "DATALINK" above the boundary circle. If not in pan mode, the ownship symbol is aligned with the aircraft heading.



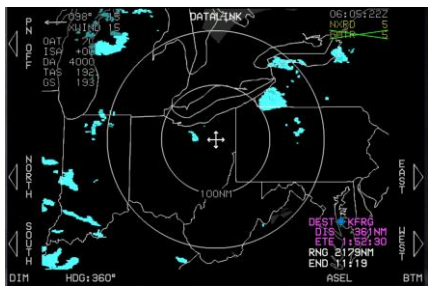North-Up orientation  
with active flight plan




Pan Mode

Figure D-5: Datalink Page Orientation


### D 3.3. Datalink Page Locations

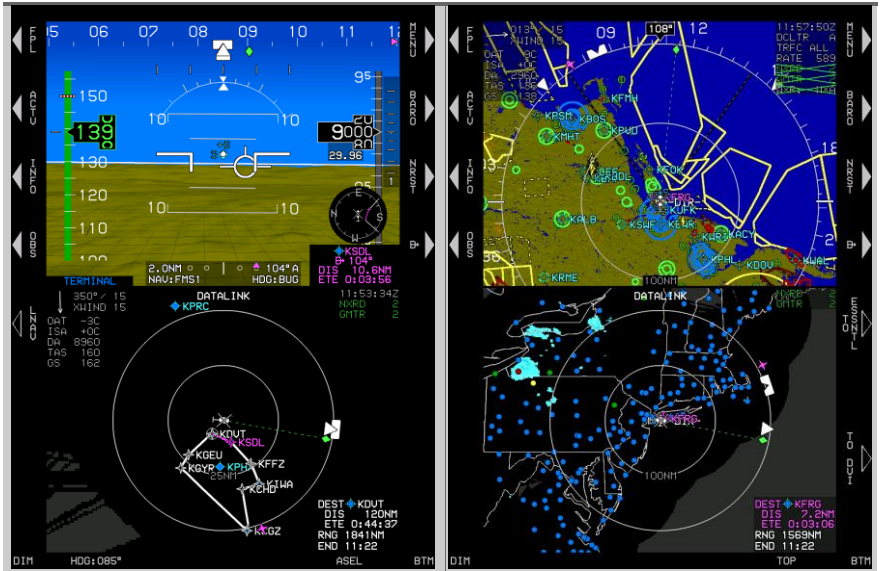Table D-7: Datalink Page Locations



PFD (bottom area only)

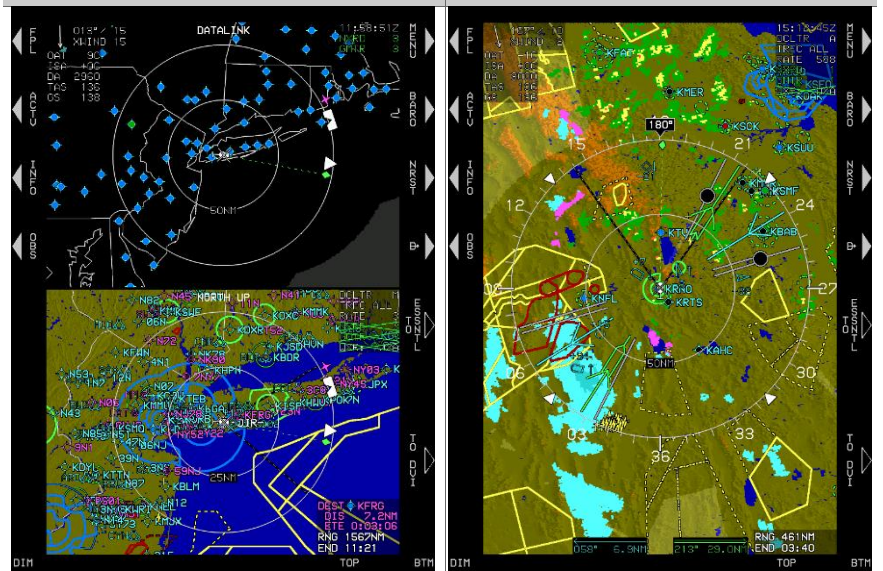MFD bottom area



MFD top area

MFD full map page



- 2) Datalink Weather Status: When status of NEXRAD and graphical METARs are displayed as defined in Table D-8.

Table D-8: Datalink NEXRAD Status

Condition	Status Annunciation	
	*NEXRAD	Graphical METAR
Never completely downlinked	No Annunciation	
Downlinked within last 5 minutes and selected for display (*if installed, weather radar deselected from display). "Show Full Sensor Status" enabled.	"NXRD ##" in green. ## is age in minutes. NEXRAD shown.	"GMTR ##" in green. ## is age in minutes. G METARS shown.
Downlinked within last 5 minutes and deselected from display (*if installed, weather radar selected for display). "Show Full Sensor Status" enabled.	"NXRD ##" in green. ## is age in minutes. "NXRD ##" overlaid with green "X" NEXRAD not shown.	"GMTR ##" in green. ## is age in minutes. "GMTR ##" overlaid with green "X" G METARS not shown.
Not downlinked within last 5 minutes but downlinked within last 10 minutes and selected for display (*if installed, weather radar deselected from display). "Show Full Sensor Status" enabled.	"NXRD ##" in amber (yellow). ## is age in minutes. NEXRAD shown.	"GMTR ##" in amber (yellow). ## is age in minutes. G METARS shown.
Not downlinked within last 5 minutes but downlinked within last 10 minutes and deselected from display (*if installed, weather radar selected for display). "Show Full Sensor Status" enabled.	"NXRD ##" in amber (yellow). ## is age in minutes. "NXRD ##" overlaid with green "X" NEXRAD not shown.	"GMTR ##" in amber (yellow). ## is age in minutes. "GMTR ##" overlaid with green "X" G METARS not shown.
Not downlinked within last 10 minutes but downlinked within last 75 minutes and selected for display.	"NXRD ##" in red. ## is age in minutes. NEXRAD shown.	"GMTR ##" in red. ## is age in minutes. G METARS shown.
Not downlinked within last 10 minutes but downlinked within last 75 minutes and deselected from display (*if installed, weather radar selected for	"NXRD ##" in red. ## is age in minutes. "NXRD ##" overlaid with green "X"	"GMTR ##" in red. ## is age in minutes. "GMTR ##" overlaid with green "X"

Table D-8: Datalink NEXRAD Status

Condition	Status Annunciation	
	*NEXRAD	Graphical METAR
display). "Show Full Sensor Status" enabled.	NEXRAD not shown.	G METARS not shown.
Not downlinked within last 75 minutes (timed-out). "Show Full Sensor Status" enabled.	"NXRD XX" in red "NXRD XX" overlaid with red "X" NEXRAD not shown.	"GMTR XX" in red "GMTR XX" overlaid with red "X" G METARS not shown.

### D 3.7. Datalink Page Screen Range

When selected, the screen ranges in Table D-9 are available (all distances represent distance from the ownship symbol to the range ring). Radius of the range ring is presented on the inner range ring with the outer boundary circle representing double the value of the inner range ring.

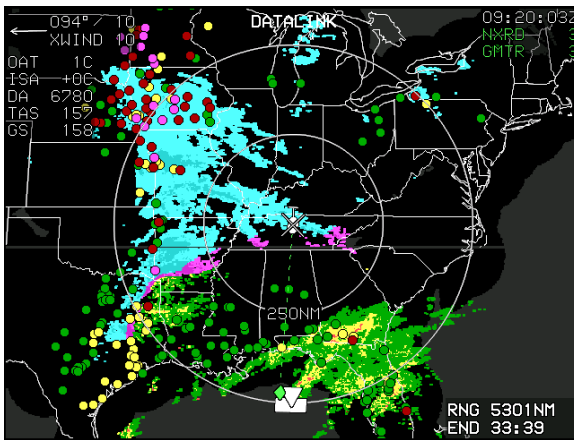


Figure D-8: Datalink Screen Range

Table D-9: Datalink Page Screen Ranges


Ownship to Range Ring		Ownship to Boundary Circle	
NM	KM	NM	KM
25	50	50	100
50	100	100	200
100	250	200	500
250	500	500	1,000
500	1,000	1,000	2,000

Table D-9: Datalink Page Screen Ranges

Ownship to Range Ring		Ownship to Boundary Circle	
NM	KM	NM	KM
1,000	2,000	2,000	4,000

### D 3.8. Boundary Circle Symbols

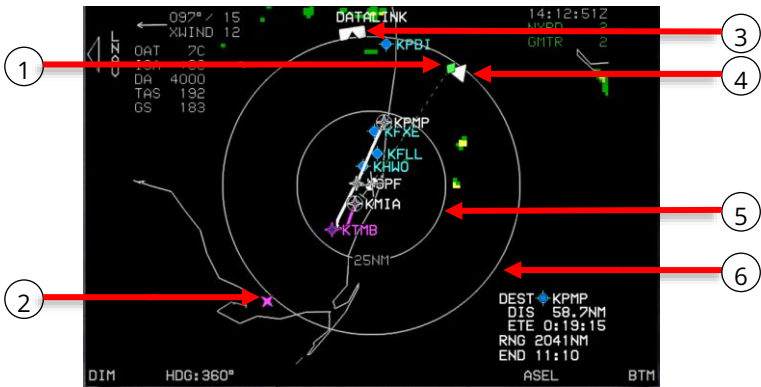On the boundary circle a white triangular heading pointer, aligned with the longitudinal axis of the ownship symbol, appears. A green diamond-shaped track pointer, aligned with the aircraft's track across the earth, is connected to the ownship symbol with a green dashed lubber line. A pilot-settable heading bug appears and a magenta, star-shaped waypoint pointer appears at a point which corresponds with the active waypoint.



- |                                  |                    |
|----------------------------------|--------------------|
| 1) Track Pointer and Lubber Line | 4) Heading Pointer |
| 2) Waypoint Bearing Pointer      | 5) Range Ring      |
| 3) Heading Bug                   | 6) Boundary Circle |

Figure D-9: Boundary Circle Symbol

### D 3.9. Active Flight Plan Path/Manual Course/Runways

See Section 2 Display Symbology for more details.

### D 4. Information (INFO) Menu

With an airport containing WX data, press **INFO (L3)** and then **WX LGND (L2)** and **EXPND WX (L3)** appears for access to the weather legend symbols and METAR or TAF text.

If **INFO** is activated from within the **ACTV**, **NRST**, or Direct menus, information on the highlighted waypoint is shown. The amount and type of information presented depends upon the type of waypoint as follows. With Datalink

enabled, current altimeter setting and wind are provided. See Section 3 Menu Functions and Step-by-Step Procedures for more information.

### D 5. MFD Datalink Format Menu

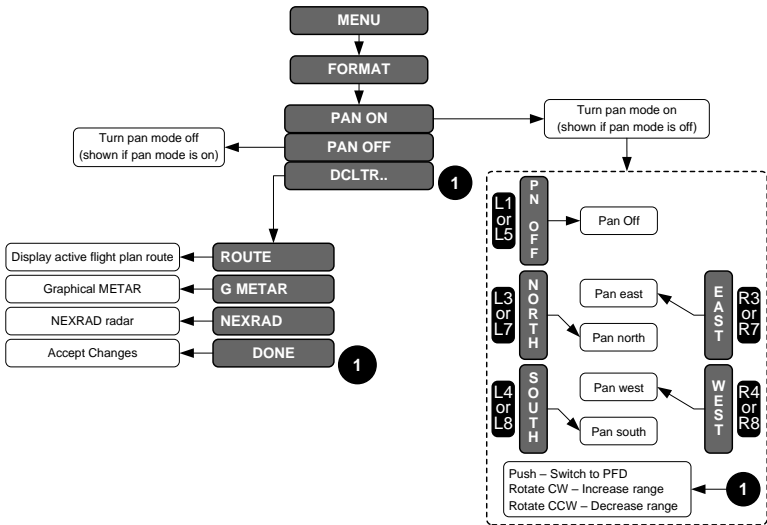


Figure D-10: MFD Datalink Format Menu

#### D 5.1. MFD Datalink Page (Step-By-Step)

- 1) Use **1** or **2**, then highlight **DATALINK** and push to enter for DATALINK page to appear.
- 2) Press **MENU (R1)**, within 10 seconds press **FORMAT (R8)** to format Datalink page.
- 3) Use **1** to highlight **PAN ON** or **DCLTR..** then push to enter.
- 4) If **PAN ON** is selected, press **NORTH (L7)**, **SOUTH (L8)**, **EAST (R7)**, or **WEST (R8)** to pan in desired direction.
- 5) Use **1** to set desired range.
- 6) Press **INFO (R6)** to view airport information.
- 7) Press **WX (L6)** to view METAR information for the selected airport.
- 8) When finished, press **PN OFF (L5)** or press **MENU (R1)**, within 10 seconds press **FORMAT (R8)** and then push **1** to turn off panning and exit menu.
- 9) Repeat step 3. Select **DCLTR..** and then push **1** to enter.
- 10) Use **1** to select or deselect desired options from list and then push to enter.

- 11) If no other changes are desired, use **1** to highlight **DONE** then push to enter, or press **EXIT (R1)** to save changes and exit menu.

### D 5.2. Formatting Map Page on PFD OR MFD (Step-By-Step)

- 1) To overlay and display datalink information on the map, return to the Map page, press **MENU (R1)** and then, within 10 seconds, press **FORMAT (R8)**.
- 2) Use **1** to highlight **FNCT DCLTR..** then push to enter.
- 3) Use **1** to highlight **DATALINK** then push to enter.
- 4) Use **1** to highlight **DONE** then push to enter or press **EXIT (R1)** to save changes and exit menu.

### D 5.3. MFD Datalink NRST Airport Info PFD or MFD (Step-By-Step)

- 1) Push **1 BTM** or **2 TOP** and rotate to **DATALINK** and then push to enter.
- 2) Press **NRST (R3)**. Push **1** to open nearest airport list. Rotate **1** to highlight desired airport, press **INFO (L3)**.
- 3) Press **WX LGND (L2)** for the weather legend to appear; OR
- 4) Press **EXPND WX (L3)** to view G METARS and TAF reports. Time of observation is contained within text.

FLT RULES	WEATHER
● UFR	■ NONE
● MUFR	■ RAIN
● IFR	■ SNOW
● LIFR	■ HZRDS
● BLW CATI	■ FOG
● NO DATA	■ WIND
	■ NO DATA

Figure D-11: NRST Airport WX LGND

#### D 5.3.1. MFD Full Map page (Step-By-Step)

- 1) Use **1** or **2** and highlight **FULL MAP** then push to enter.
- 2) To format the Full Map page, press **MENU (R1)**, within 10 seconds, press **FORMAT (R4)**, rotate **1** to **FNCT DCLTR..**, and then push to enter.
- 3) Use **1** then select or deselect desired functions. Use **1** to highlight **DONE** then push to enter or press **EXIT (R1)** to save changes and close menu.



#### NOTE:

When selecting the Datalink page while displaying the full Map page, the MFD automatically changes to a top/bottom display with Datalink displayed on the selected area.



## D 6. MFD Fault Display Menu

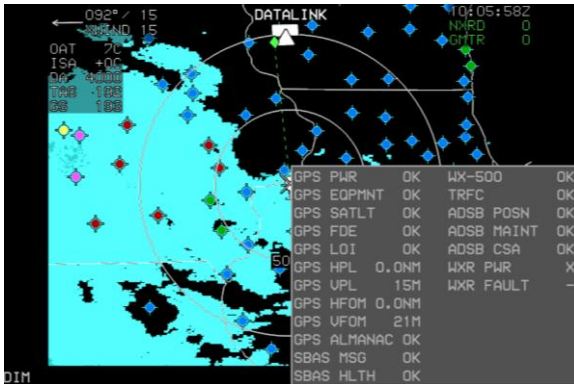



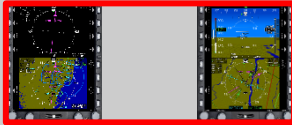
Figure D-12: Faults Menu with ADS-B Status

Press **MENU (R1)**, then within 10 seconds, **FAULTS (L1)**. Upon selecting the Faults menu with ADS-B datalink enabled, an indication of ADS-B position validity (ADSB POSN), indication of whether ADS-B receiver maintenance is required (ADSB MAINT), and indication the conflict situational awareness algorithm is working (ADSB CSA) appear.

## D 7. Menu Synchronization

Section 3 Menu Functions and Step-by-Step Procedures for additional information.


Table D-10: Menu Synchronization

Menu Parameter	Notes
<p><i>The following menu parameters are independent between displays. These are used to support non-PFI area display options to give the pilot maximum MFD operating flexibility. Note that some of these parameters are also independent between top and bottom MFD areas as specified in the notes.</i></p> 	
MFD Datalink Page Settings	Independent between top and bottom MFD areas

# Weather Radar

## WX 1. Weather Radar

This Weather Radar appendix is primarily for the Honeywell RDR-2100 installed with no external control panel.



# Radiation

Warning

**This instrument generates microwave radiation.**

**DO NOT OPERATE UNTIL YOU HAVE READ AND CAREFULLY FOLLOWED ALL SAFETY PRECAUTIONS AND INSTRUCTIONS IN THE OPERATING AND SERVICE MANUALS.**

**IMPROPER USE OR EXPOSURE MAY CAUSE SERIOUS BODILY INJURY.**



---

### CAUTION:

**Maintain prescribed safe distance when standing in front of operating antenna (reference FAA Advisory Circular #20-68).**

**Never expose eyes or any part of the body to an unterminated wave guide.**

---

## WX 1.1. Weather Radar Return Data

Weather radar-specific warnings appear in a conspicuous area adjacent to weather radar return data, so they do not conflict with the weather radar return data. Only one warning appears at any given time with the following order of precedence:

- 1) WX ALRT: Weather alert condition is active.
- 2) TURB ALRT: Turbulence alert condition is active.
- 3) STAB LIMIT: Aircraft attitude has moved to a point where the weather radar antenna can no longer be effectively stabilized.
- 4) ANT FAULT: Weather radar antenna is temporarily dislodged by turbulence.

Table WX-1: Weather Radar Return Data

Color	Definition
BLACK	No Returns
GREEN	Low-Level Weather or Low-Level Ground Returns
YELLOW	Mid-Level Weather or Mid-Level Ground Returns
RED	Third-Level Weather Returns. With an RDR-1600 weather radar type, this color alternates between red and black at 1Hz when in WXA mode. For all other radar types, this color should be replaced with black when in Map mode.
MAGENTA	Fourth-Level Weather or Third-Level Ground Returns. With an RDR-2000 or RDR-2100, this color alternates between magenta and black at 1Hz when the internal sub-mode is WXA.
CYAN	Automatic range limit returns. Indicates areas of unreliable returns due to radar power absorption
LIGHT GRAY	Moderate turbulence returns
White	Severe turbulence returns

When weather radar is selected, Datalink NEXRAD is automatically deselected. Weather radar return data is inhibited in the following conditions:

- 1) During active FLTA alerts;
- 2) In panning mode;
- 3) When north up orientation is selected; or
- 4) When RDR-2000 or RDR-2100 is in vertical profile mode.



Figure WX-1: Weather Radar Overlay on Map

Weather radar automatically declutters when weather radar returns (see Table WX-1) are selected for display on the Map page in correct relationship to the ownship symbol (see Section 2 Display Symbology) unless inhibited during active FLTA alerts.

## WX 2. Weather Radar Page


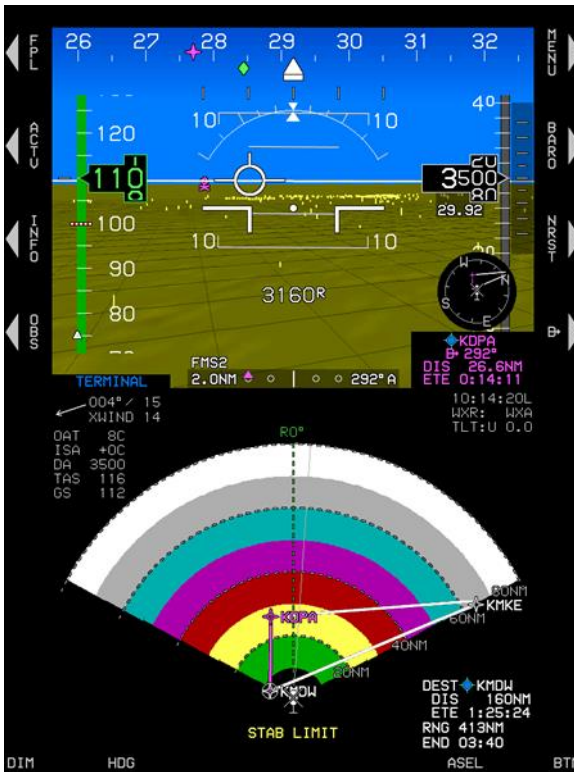


Figure WX-2: PFD Weather Radar Page on Bottom

### WX 2.1. First-Level Menu Descriptions

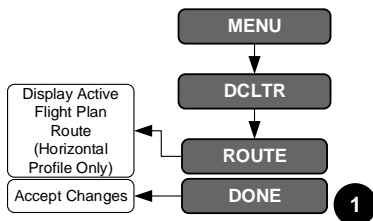If a Weather Radar page is displayed, **WX RDR (R3)/(R7)** activates the Weather Radar menu for controlling Honeywell RDR-2000/2100. An external control panel is required for the Telephonics RDR-1600.

If a Weather Radar page is displayed rotate **1** (bottom area) or **2** (top area) to change the display range (see § WX 2.3). If the WX-RDR page is open in both the top and bottom areas, any knob action affects all WX-RDR pages per side.



**DCLTR (R8):** On the Weather Radar page in horizontal profile mode, activates Weather Radar Declutter menu option.

Figure WX-3: WX RDR Declutter (DCLTR) Menu

## WX 2.2. Weather Radar Page Menu

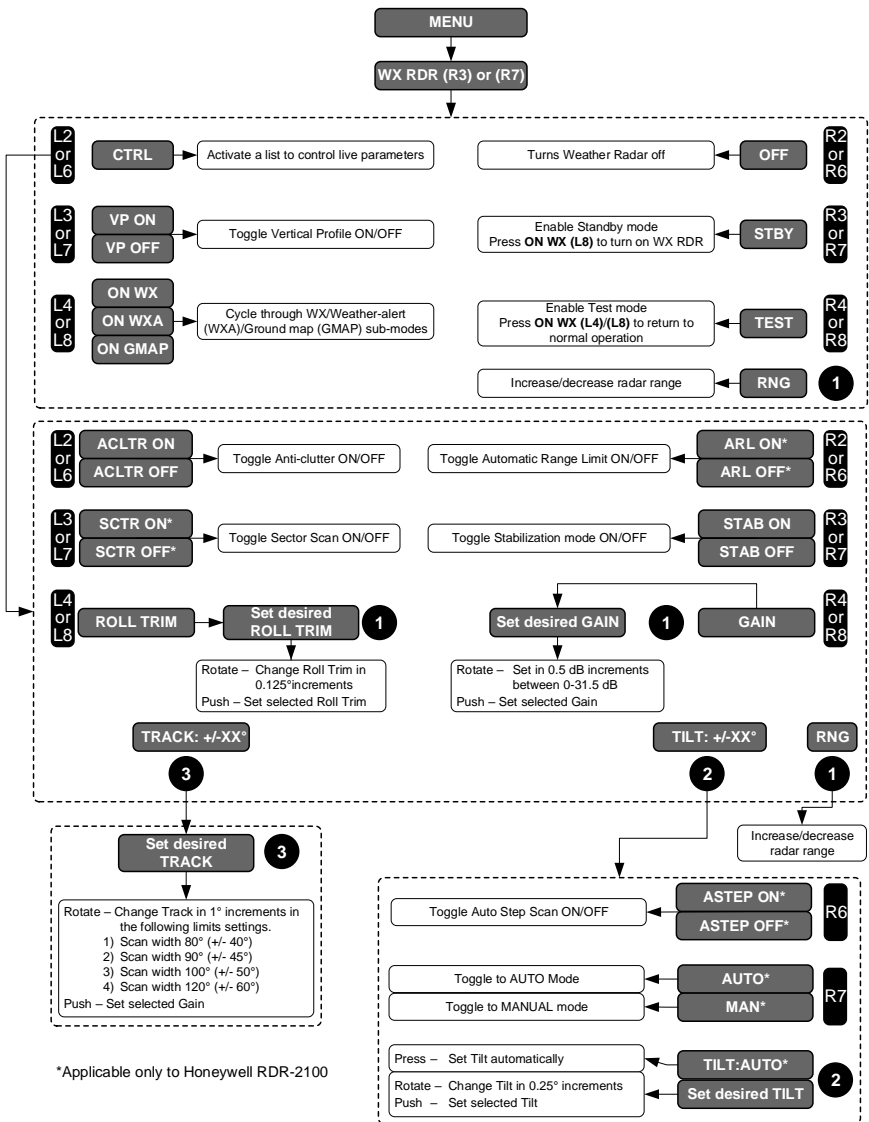


Figure WX-4: Weather Radar Page Menu

Since there is only one weather radar installed in the aircraft, when the WX-RDR page is opened in both top and bottom areas, only the top area displays the WX-RDR menus. Any menu action affects all WX-RDR pages per side.

**NOTE:**

Weather radar modes are mutually exclusive and therefore selecting one turns off the other modes, with the exception of vertical profile, which appears in the selection box only when the selected weather radar mode is not OFF or STBY.

**WX 2.2.1. Managing RDR-2100 Weather Radar Menu (Step-By-Step) (PFD or MFD)**

Use **1** (PFD or MFD BTM area), **1** or **2** (MFD) as applicable to highlight **WX-RDR** then push to enter. Press **MENU (R1)**, within 10 seconds, then press **WX RDR (R3)/(R7)** and choose the desired menu below. The following examples are describing a WX-RDR page shown on bottom area of a PFD or MFD:

**NOTE:**

Press **BACK (L1)** return to WX RDR menu or **EXIT (R1)** to save changes and exit a menu.

- 1) Press **CTRL (L6)** to enter radar control menu (see § WX 2.2.2)
- 2) Current mode status is displayed in upper right corner of radar page. Press **VP ON/OFF (L7)** to toggle between horizontal and vertical modes.

**NOTE:**

VP mode is automatically turned off if not showing any WX-RDR page on the inside IDUs.

- 3) While in STBY mode, press **ON WX (L8)** to return radar to ON mode.
- 4) Press **ON WXA (L8)** to enable Weather-alert sub-mode.
- 5) Press **ON GMAP (L8)** to enable ground map sub-mode. Annunciated in upper right corner.)
- 6) Press **ON WX (L8)** to resume normal weather radar mode of operation.
- 7) Use **1** to alter range of weather radar from 5.00 NM to 320.00 NM. Rotation direction dependent upon EFIS limits setting. (Annunciated on the right side of the arc in NM or KM.)

**NOTE:**

Radar range limited to 160NM/240 KM when using RDR-2000 or RDR-1600.

- 8) Press **STBY (R7)** to enable standby mode. (Not shown in standby mode.)
- 9) Press **TEST (R8)** to enable test mode. (Not shown in test mode.)

### **WX 2.2.2. Managing RDR-2100 Weather Radar Control Menu (Step-By-Step)**

- 1) Press **CTRL (L6)** to enter radar control menu.
- 2) Press **ACLTR ON/OFF (L6)** to toggle anti-clutter on and off.
- 3) Press **SCTR ON/OFF (L7)** to toggle sector scan on and off.
- 4) Press **ROLL TRIM (L8)** then use **1** to set desired roll trim angle (increments of 0.125°) and push to enter.
- 5) Press **ARL ON/OFF (R6)** to toggle automatic range limit option off and on.
- 6) Press **STAB ON/OFF (R7)** to toggle Stabilization mode.
- 7) Press **GAIN (R8)** to open gain menu and use **1** to change gain in 0.5 dB increments between +0.0 dB to -31.5 dB. Push to set selected gain value.

### **WX 2.2.3. Managing RDR-2100 Weather Radar Tilt (Step-By-Step)**

- 1) Repeat step 2 in § WX 2.2.1. Press **CTRL (L6)** to enter radar control menu.
- 2) Use **2** to open tilt menu. Press **MAN/AUTO (R7)** to toggle between **TILT:AUTO** and **TILT:##.##°**. Use **2** to set tilt angle in 0.25° increments. Set angle is annunciated above **2** and in upper right corner with "D" (for down °) and "U" (for up °) values.
- 3) Press **ASTEP ON/OFF (R6)** to toggle antenna tilt to sequentially step in 4° increments. (Auto step scan is entered initially by adjusting the tilt to ±15°.)

### **WX 2.2.4. Managing RDR-2100 Weather Radar Track Angle Menu (Step-By-Step)**

- 1) Track angle annunciation is above **3** at the end of the green track line (or top right corner in profile depiction).
- 2) Use **3** to set new track angle in 1° increments between limits set in EFIS limits. Push to enter.

### **WX 2.2.5. Managing RDR-2000 Weather Radar Menu (Step-By-Step)**

The Weather Radar menu for the RDR-2000 MFD is the same as for the RDR-2100 (see § WX 2.2.1) with fewer control menu options (see WX 2.2.6).

### **WX 2.2.6. Managing RDR-2000 Weather Radar Menus Control Menu (Step-By-Step)**

- 1) Press **ACLTR ON/OFF (L6)** to toggle anti-clutter on and off.

- 2) Press **ROLL TRIM (L8)** then use **1** to set desired roll trim angle (increments of 0.125°) then push to enter.
- 3) Press **STAB ON/OFF (R7)** to toggle Stabilization mode between on and off.
- 4) Press **SCTR ON/OFF (L7)** to toggle sector scan option between on and off.
- 5) Press **ARL ON/OFF (R6)** to toggle automatic range limit option between on and off.
- 6) Press **GAIN (R8)** then use **1** to set desired GAIN between +0.0 DB and -31.5 DB (increments of 0.5 DB) then push to enter.

### WX 2.3. Weather Page Screen Range

Weather page screen range is pilot-selectable with either **2** (top area) or **1** (bottom area) for RDR-2000 or RDR-2100 weather radar types, or a control panel directly attached to the weather radar receiver-transmitter.

Weather page screen range is displayed NM or KM distances (depending upon EFIS limits settings) as a series of equidistant dashed arcs centered upon the ownship symbol to help judge range to the displayed weather radar returns. For most screen ranges, there are four equidistant dashed arcs. When in 2.5NM or 5KM range, there are five equidistant dashed arcs.

Each arc is labeled with distance in units at the right (horizontal depiction) or bottom (profile depiction). In the profile depiction mode, there are also three horizontal altitude lines drawn relative to the aircraft's altitude to help the pilot judge the vertical distance to the displayed weather radar returns. The center line is level with the ownship symbol to represent the aircraft's altitude. The other two lines are equally spaced above and below the center line to represent altitude differences above and below the aircraft. The number of feet or meters above and below the aircraft vary with the selected range to compensate for the radar scan width at the different ranges.

Except for the RDR-2000, RDR-2100 or RDR-1600 weather radar types, available screen ranges are controlled by the weather radar and the IDU formats the dashed arcs as commanded by the range parameter settings.

In the case of RDR-2000, RDR-2100 or RDR-1600 weather radar type, screen range is an internally controlled parameter and the following weather screen ranges are available (all distances represent the distance from the ownship symbol to the outer dashed arc.)

Table WX-2: Weather Radar Page Range

Range (NM)	Range (KM)	RDR-2000	RDR-2100	RDR-1600
0.5	1			✓
1	2			✓

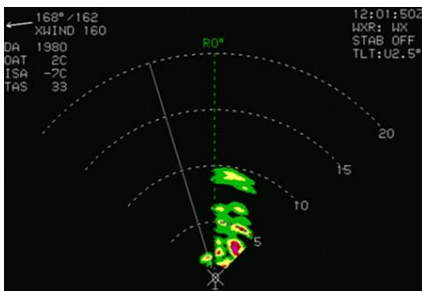


Table WX-2: Weather Radar Page Range


Range (NM)	Range (KM)	RDR-2000	RDR-2100	RDR-1600
2	4			✓
5	10	✓	✓	✓
10	20	✓	✓	✓
20	40	✓	✓	✓
40	80	✓	✓	✓
80	160	✓	✓	✓
160	320	✓	✓	✓
240	480	✓	✓	✓
320	640		✓	

### WX 2.4. Horizontal/Vertical Profile Depiction

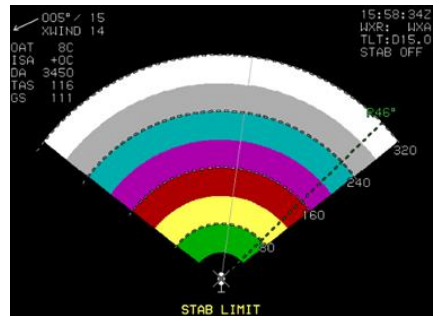In a horizontal depiction, the weather page uses an arced format with the ownship symbol centered in the bottom of the display with the weather area depicted as an arc ahead of the ownship symbol.



Radar Image in Arc Format



Radar Image in Arc Format (STAB LIMIT)

Figure WX-5: Horizontal Depiction

To select vertical profile depiction, use the weather radar (see § WX 2.2). Profile depiction is only available on the weather radar page, as the map page only depicts the horizontal view depiction, if selected from the declutter menu.


In vertical profile depiction, the weather page uses an arced format with the ownship symbol centered on the left side of the display and the weather area depicted as an arc to the right of the ownship symbol.

Table WX-3: Weather Radar Vertical Profile Altitude References


Distance in NM	VP Altitude	Distance in KM	VP Altitude
5NM	±7.5 X 1,000'	10KM	±2.5 X 1,000M
10NM	±15 X 1,000'	20KM	±5 X 1,000M

Table WX-3: Weather Radar Vertical Profile Altitude References

Distance in NM	VP Altitude	Distance in KM	VP Altitude
20NM	±30 X 1,000'	40KM	±10 X 1,000M
40NM	±60 X 1,000'	80KM	±20 X 1,000M
80NM	±120 X 1,000'	160KM	±40 X 1,000M
160NM	±240 X 1,000'	320KM	±80 X 1,000M
240NM	±360 X 1,000'	480KM	±120 X 1,000M
320NM	±480 X 1,000'	640KM	±160 X 1,000M

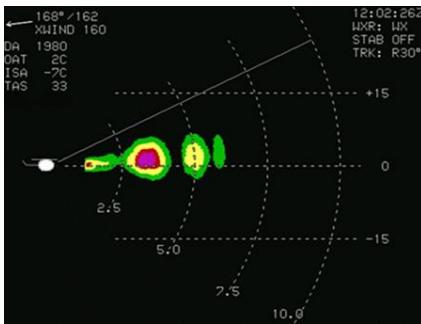


Radar Image in Profile Depiction

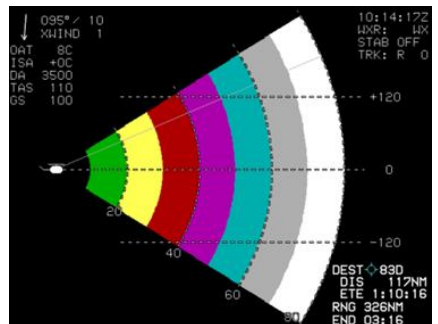

Radar Image in Profile Depiction (STAB LIMIT)

Figure WX-6: Vertical Profile Depiction

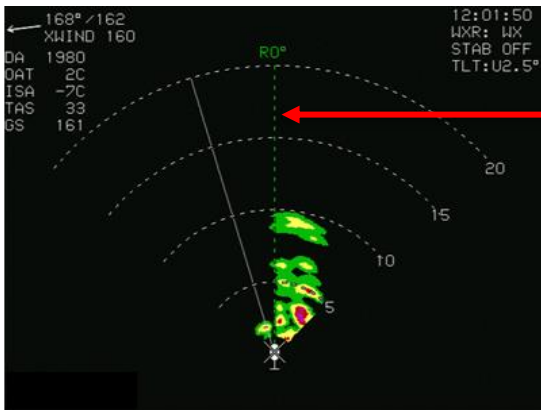**WX 2.5. Track Line**



Track Line

Figure WX-7: Radar Track Line

When the weather radar type is RDR-2100 and in horizontal depiction, a dashed track line emanates from the ownship symbol to the outer dashed arc. The

value of the track line in whole degrees left or right of aircraft heading is displayed adjacent to the outer end of the track line.

**WX 2.6. Active Flight Plan Path/Manual Course/Runways**

When the Weather Radar page is in horizontal depiction, the active flight plan path (when selected), waypoints, manual course, and runways appear.

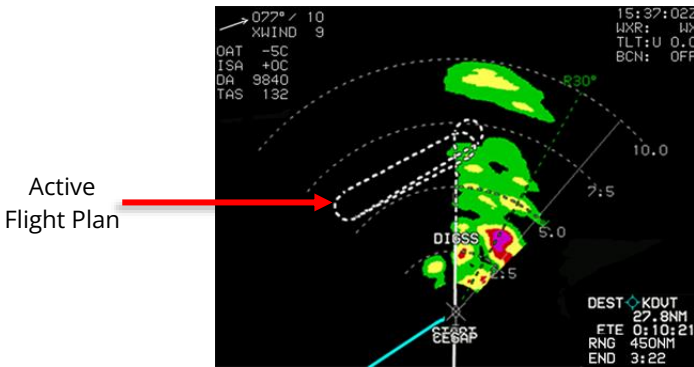


Figure WX-8: Radar Active Flight Plan

**WX 2.7. Clock/Options**

The following are displayed in the upper right corner.

08:43:55Z  
WXR: WXA  
TLT:U 1.3  
STAB OFF

Zulu Time

10:45:00L  
WXR: WXA  
TLT:U 1.3  
STAB OFF

Local Time

Figure WX-9: Radar Clock/Options

- 1) Zulu or Local Time: As in Section 2 Display Symbology
- 2) Weather Radar Mode Annunciation: As in Table WX-4 and Table WX-5.

Table WX-4: Weather Radar Mode Annunciation

Mode	Annunciation
Off	WXR:OFF
Standby	WXR:STBY
Weather only	WXR:WX
Weather alert	WXR:WXA
Ground map	WXR:GMAP
Test	WXR:TEST
Not defined	WXR:----

Table WX-5: Weather Radar Mode Annunciation Conditions

Annunciation	Conditions
Overlaid with Red X	<p>Weather radar mode is off or not defined.</p> <p>Cooling fault condition exists.</p> <p>Attitude or range fault condition exists.</p> <p>Transmit/receive (T/R) fault condition exists.</p> <p>For Honeywell RDR-2000 and 2100, or Telephonics RDR-1600, the external radar control panel is failed.</p>
Overlaid with Green X	<p>For Honeywell RDR-2000 and 2100, or Telephonics RDR-1600, when RCP is not failed, and the commanded RCP mode is OFF.</p>
STAB OFF (Stabilization)	<p>Mode annunciation not overlaid with a red or green "X";</p> <p>Mode not standby or forced standby; and</p> <p>Weather radar indicates stabilization is OFF</p>
TGT ALERT (Target Alert)	<p>Mode annunciation not overlaid with a red or green "X";</p> <p>Mode not standby or forced standby;</p> <p>Weather radar presenting horizontal depiction.</p> <p>The weather radar type is Honeywell PRIMUS, Honeywell RDR-2000 or Honeywell RDR-2100.</p>
REACT	<p>Honeywell PRIMUS only. Annunciation is provided when all of the following conditions are true:</p> <p>Weather radar mode annunciation is not overlaid with a red "X".</p> <p>Weather radar mode is not standby or forced standby.</p>
"TLT:U##.#" or "TLT:AUTO" (TILT)	<p>U = up or down (either U or D, but not both, may appear – use "U" for 0°);</p> <p>"TLT:U##.#" or "TLT:AUTO"</p> <p>##.# represents absolute value of the tilt angle in degrees truncated to the nearest tenth;</p> <p>"TLT:AUTO" used where weather radar reports a value of -16°, representing automatic tilt.</p> <p>Weather radar tilt annunciation only appears when all following conditions are true:</p> <p>1) Mode annunciation not overlaid with a red or green "X".</p>

Table WX-5: Weather Radar Mode Annunciation Conditions

Annunciation	Conditions
<p>TRK:L## (TRACK)</p>	<p>2) Mode not standby or forced standby; and 3) Radar not in vertical profile depiction. (RDR-2000/2100 only). Weather radar track annunciation indicates the track of the profile depiction relative to the aircraft's heading.</p> <p>The weather radar track annunciation only appears when all of the following conditions are true:</p> <p>L = left or right (either L or R, but not both, may appear – use "R" for 0°); and ## represents absolute value of the track angle in degrees.</p> <p>Weather radar track annunciation only appears when all following conditions are true:</p> <p>Mode annunciation not overlaid with a red or green "X". Mode not standby or forced standby; and Radar in vertical profile sub-mode (Profile depiction).</p>
<p>"GN:S##DB," "GN:CAL," or "GN:MAX" (GAIN)</p>	<p>A weather radar gain annunciation indicates the manual gain setting of the weather radar where:</p> <p>S = Sign (either "+" or "-", but not both, may appear – use "+" for 0°); and ## represents the manual gain setting in decibels. (Used for ARINC 708-6, Collins 800/840 and Honeywell PRIMUS weather radar types). ##.# represents the manual gain setting with one decimal point in decibels. (Used for RDR-2000, RDR-2100 and RDR-1600 weather radar types.)</p> <p>"GN:CAL" represents the calibrated condition "GN:MAX" represents maximum manual gain</p> <p>Weather radar manual gain annunciation only appears when all following weather radar mode conditions are true:</p> <p>Mode annunciation not overlaid with a red or green "X". Mode not standby or forced standby; and</p>

Table WX-5: Weather Radar Mode Annunciation Conditions

Annunciation	Conditions
	<p>In RDR-2000/2100 installation, weather radar mode is Ground Map.</p> <p>In RDR-1600 installation, weather radar mode is any search modes.</p>

### **WX 2.8. Air Data and Ground Speed**

As defined in Section 2 Display Symbology.

### **WX 2.9. Fuel Totalizer/Waypoint Distance Functions**

As defined in Section 2 Display Symbology.

### **WX 2.10. Waypoint Distance**

Displayed as specified in Section 2 Display Symbology.

### **WX 3. MFD Fault Display Menu**

Upon selecting the MFD faults menu, the status of the following system parameters are displayed if weather radar is enabled:

- 1) Indicates weather radar power/communication status (WXR PWR X or WXR PWR OK). Status failed (WXR PWR X) reflects any one of the following conditions is true:
  - a) Loss of weather radar communication.
  - b) Weather radar mode is OFF.
- 2) Indicates weather radar fault status (WXR FAULT -, WXR FAULT X, or WXR FAULT OK). Status failed (WXR FAULT -) indicates it is not possible to determine weather radar faults. Status failed (WXR FAULT X) reflects any of the following conditions is true:
  - a) A cooling fault condition exists.
  - b) An attitude or range fault condition exists.
  - c) A control fault condition exists.
  - d) A T/R fault condition exists.
- 3) If weather radar type is RDR-2000 or RDR-2100, indicates radar control panel status (WXR RCP X or WXR RCP OK). Status failed (WXR RCP X) indicates loss of communication.



**NOTE:**

**Manufacturer's Fault Annunciations**

Fault annunciations are a method of alerting the pilot that the radar system is not performing to established standards. Built-in test equipment automatically and constantly tests the radar system. If a fault occurs, the fault annunciation is presented on the display configured for WX-RDR.

See appropriate weather radar pilot guide for failure descriptions.

**WX 4. Menu Synchronization**



See Section 3 Menu Functions and Step-By-Step Procedures for more information.

Table WX-6: Menu Synchronization

Menu Parameter	Notes
<p><i>The following menu parameters are always synchronized across all displays. These are bugs and fundamental aircraft values that should never have independence. <b>Intra-System</b> or <b>Inter-System</b> communications.</i></p>	
<p>WX RDR Control Menu parameters</p>	<p>Used to synchronize certain RDR-2XXX modes. See note below.</p>
<p><i>The following menu parameters are only synchronized inside. These parameters are usually sensor selections or PFD options used to keep the appearance of any pilot's PFD consistent in the case of PFD reversion. The inside characteristic means that individual pilots can still adjust their PFD settings to their preference. <b>Intra-System</b> communications.</i></p>	
<p>WX RDR Control Menu parameters</p>	<p>Synchronized inside when Honeywell RDR-2XXX is installed.</p>
<p>Weather Radar Scale</p>	<p>Onside because range is controlled by the weather radar.</p>

*The following menu parameters are independent between displays. These are used to support non-PFI area display options to give the pilot maximum MFD operating*

Table WX-6: Menu Synchronization

Menu Parameter	Notes
<i>flexibility. Note that some of these parameters are also independent between top and bottom MFD areas as specified in the notes.</i>	
	
MFD Selected Page	This parameter is transmitted to all other IDUs to support weather radar vertical profile mode selection.
MFD Map Page Settings	Map scale is transmitted onside to support weather radar range selection.

**NOTE:**

When using EFIS menu system for RDR-2XXX control, the weather radar mode received from the offside system is used to update onside weather radar mode as follows. This is to ensure weather radar power on/off is synchronized between both sides.

When offside mode is commanded to STBY, TEST, or ON and if onside mode is OFF, then the onside mode is set to STBY.

When offside mode is commanded to OFF, then the onside mode is also set to OFF.

**NOTE:**

The WRM 429 output on each side (pilot and co-pilot PFDs and MFDs) can be wired to a separate control input on the RDR-2XXX. This allows each side to request separate modes from the RDR-2XXX. The radar time-slices the radar sweeps between the 2 controllers. Thus, if the pilot requests a horizontal profile and the co-pilot requests a vertical profile, one sweep provides the requested return to the pilot, the dish repositions, and the next sweep provides the requested return to the co-pilot.



# Video

## V 1. Video Page

PAGE Menu **1**: **VIDEO** – opens Video page.

The video input page is an image of 640 by 480 pixels and accepts video input signals in the RS-170 composite format. The system is configurable to the NTSC, PAL (including the PAL-m and PAL-nc variants), or SECAM versions of RS-170 separately for each video input. In addition, an auto-detection mode, which programs the video input chip to process most standard RS-170 formats, is configurable for each video input.

When no video signal is detected, the video input page is black and NO VIDEO IMAGE AVAILABLE is displayed in white on the center of the page. To aid in diagnosing problems with undetected video signals, the following annunciations may also be displayed:

- 1) NO INTERLACED SIGNAL: No interlaced signal detected.
- 2) NO HORIZ OR VERT SYNC: No horizontal or vertical synchronization detected.
- 3) NO COLOR SIGNAL: No video chroma signal detected.
- 4) LOAD ERROR DETECTED: Video chip reports a load error.
- 5) TRIGGER ERROR DETECTED: Video chip reports a trigger error.
- 6) PROGRAMMING ERROR DETECTED: Video chip reports a programming error.

### V 1.1. Top-Level Menu Option Descriptions

- 1) **1**: On a PFD or MFD operating in Normal mode, if the bottom area is showing a video page, and Zoom is enabled in EFIS limits, rotate the knob to change the zoom level (CW to increase, CCW to decrease) or as set in EFIS limits.
- 2) **2**: On an MFD (IDUs other than #1) operating in Normal mode, if the top area is showing a video page, and zoom is enabled in EFIS limits, rotate the knob to change the zoom level (CW to increase, CCW to decrease) or as set in EFIS limits.

### V 1.2. Video Page First-Level Option Descriptions

**CTRST 3**: Adjusts contrast setting for the current video input.

**BRT 2**: Adjusts brightness setting for the current video input.

### V 1.3. Video Page Format Menu

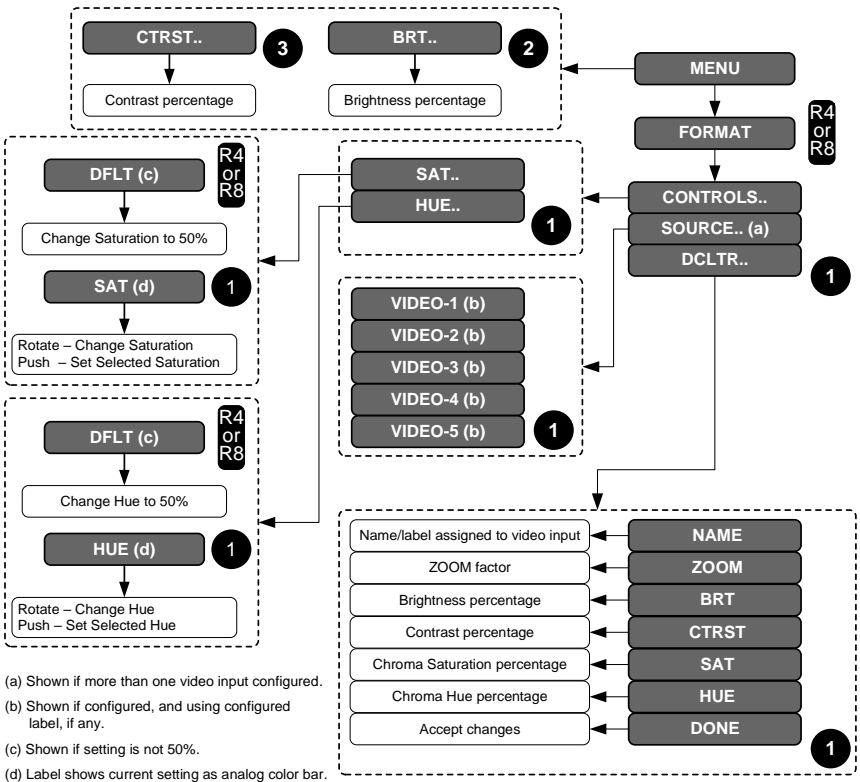


Figure V-1: Video Page Format Menu




Figure V-2: Video Page Contrast and Brightness Setting



Figure V-3: Video Page Saturation and Hue Setting



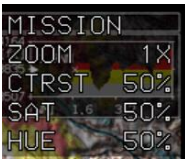Figure V-4: Video Page Sources



Source: Mission



Source: FLIR

Figure V-5: Video Status

#### V 1.4. Pan Mode



Figure V-6: Video Pan View

When enabled in EFIS limits, and the zoom level is greater than 1, the Video page has a pan mode for selecting the portion of the video image displayed by replicating pixels. When pan mode is active, controls are present to allow moving the portion displayed up, down, left, and right.

A mini map of the displayed image's position in the full video image is displayed for 10 seconds after:

- 1) Entering pan mode;
- 2) Changing the zoom level to a value greater than 1;
- 3) Panning the zoomed image.

Exiting pan mode removes pan mode controls and mini map, if any.



Table V-1: Pan Mode Function Descriptions

Top Area	Bottom Area	Tile Legend	Action
L2	L6	<b>UP</b>	Press to move the section of video image displayed in specified direction.
L3	L7	<b>DOWN</b>	
R2	R6	<b>LEFT</b>	
R3	R7	<b>RIGHT</b>	

## V 2. Menu Synchronization

See Section 3 Menu Functions and Step-By-Step Procedures for more information.

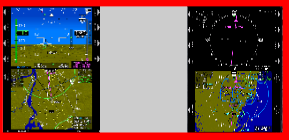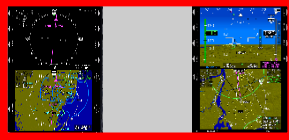Table V-2: Menu Synchronization

Menu Parameter	Notes
<p><i>The following menu parameters are independent between displays. These are used to support non-PFD display options to give the pilot maximum MFD operating flexibility.</i></p>	
 <p>MFD Video Page Settings</p>	 <p>Independent between top and bottom MFD areas with exception of the following video hardware settings:</p> <ol style="list-style-type: none"> <li>1) Selected Input</li> <li>2) Brightness</li> <li>3) Contrast</li> <li>4) Saturation</li> <li>5) Hue</li> </ol>

# Round Dials

## RD 1. PFD Primary Flight Instrumentation

The following details round dial display symbology used on the PFD and MFD IDU-680 in Normal and Essential modes. The round dials option is only available with pure digital ADC configured. Not all combinations of possible views are represented. See Section 2 Display Symbology for further details.

### RD 1.1. Pitch Scale


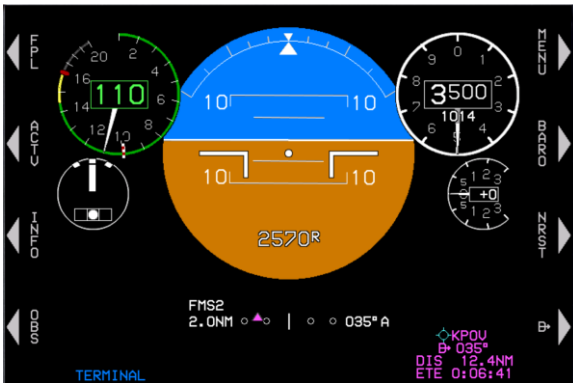


Figure RD-1: Pitch Scale

The white pitch scale and horizon rotates about the large aircraft symbol reference marks according to the aircraft's roll angle. The pitch scale has 5° bars with major increments and pitch scale bars every 10°. Pointer bars at the ends of each major increment bar indicate the direction to the horizon. Pitch scale increments automatically declutter to present the fewest possible increments needed.

### RD 1.2. Flight Director Symbology

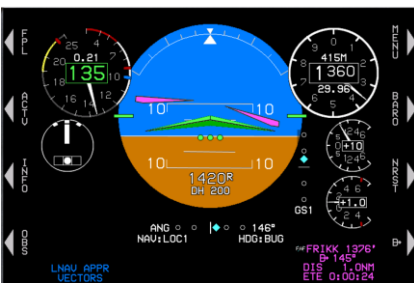

FD-1 Single Cue



FD-2 Dual Cue

Figure RD-2: Flight Director

A pilot-selectable flight director is available through the menu system or integrated autopilot/flight director avionics. When selected, one of the symbology shown in Figure RD-2 appears when valid steering commands are received. When the aircraft is not equipped with an autopilot, no flight director is available.

### RD 1.3. Marker Beacon Indicators

When enabled and valid marker beacon indicators with appropriate coloring and markings are displayed in the lower central portion of the PFD. During a built-in-test, more than one marker beacon can be active. Marker beacons are acquired from NAV VLOC1 or VLOC2. Marker beacons are disabled when the NAV source is other than VLOC1 and or VLOC2.

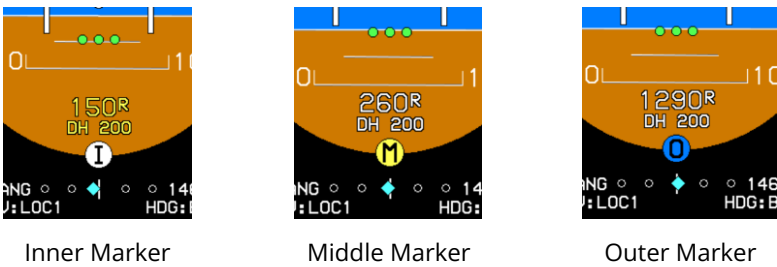


Figure RD-3: Marker Beacon Indicators

### RD 1.4. Unusual Attitude Mode

Unusual attitude mode is enabled when the pitch attitude exceeds  $+30^\circ$  or  $-30^\circ$  or bank angle exceeds  $65^\circ$  left or right. Once enabled, unusual attitude mode remains engaged until pitch attitude returns to within  $10^\circ$  of the horizon and bank attitude returns to within  $10^\circ$  of the horizon. Recovery chevrons appear prior to reaching  $\pm 20^\circ$  of pitch to aid in situational awareness and are a normal part of the pitch scale and are not necessarily tied to unusual attitude mode. The chevrons disappear when within  $\pm 15^\circ$  of the horizon.



Pitch up 25° Recovery Chevrons Only    Pitch up 30° Unusual Attitude Mode

Figure RD-4: Unusual Attitude Modes

### RD 1.5. Bank Angle Scale

The bank angle scale and roll pointer are centered on the waterline. During EFIS limits configuration, either a roll pointer or sky pointer can be selected.



Roll Pointer

Sky Pointer

Figure RD-5: Bank Angle Scale Type

### RD 1.6. AGL Indication

AGL altitude is displayed as shown in Figure RD-6 at the bottom of the display or above the CDI. The source for AGL indication is the source used for TAWS, which is designated as follows:

R = Radar Altitude

G = GPS/SBAS geodetic height less database found elevation.

B = Barometric altitude less database ground elevation.



Example of RADALT Failure:




1270° = AGL source of GPS/SBAS


Figure RD-6: AGL Indicator

AGL altitude is not displayed when it is greater than the radar altimeter maximum valid altitude and is not displayed when it is invalid. This area also includes a decision height set with the PFD bugs menu.


Table RD-1: AGL Altitude Values

Value	Resolution	Color
<300'	10'	White
<100' >300'	5'	
>100'	1'	
Decision Height	10'	 White but turns amber (yellow) and flashes at and below DH

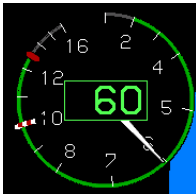
### RD 1.7. Airspeed Display



Without airspeed bugs

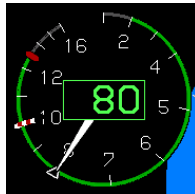

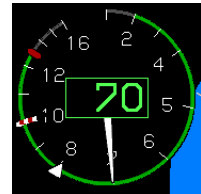IAS bug set to 80 and indicating 80 KIAS



IAS bug set to 80 and indicating 70 KIAS

Figure RD-7: Round Dials Airspeed Display Limits

The airspeed display digitally displays indicated airspeed in knots, miles, or kilometers per hour (as per aircraft "Speed Units" system limit) and is scaled to show the entire operating range of the aircraft. Clockwise movement indicates increasing speed.

- 1) Gray safe-operating area from bottom of dial to VMIN. Airspeed is gray at 0 (indicating "dead" airspeed) but otherwise green.
- 2) Green safe operating range area from VMIN to VNO. VMIN refers to the minimum speed for effective airspeed indication (usually 20KIAS, depending on the connected ADC). Airspeed readout is gray at 0 (indicating "dead" airspeed) but otherwise green.
- 3) Amber (yellow) caution range area from VNO to VNE (power-on). Airspeed readout is yellow.
- 4) Red radial line at VNE (power-on). Airspeed readout is red at or above the red radial line.

The airspeed dial for Part 27 and Part 29 rotorcraft has additional specific airspeed markings displayed as a red cross-hatched radial line at  $V_{NE}$  (power-off).



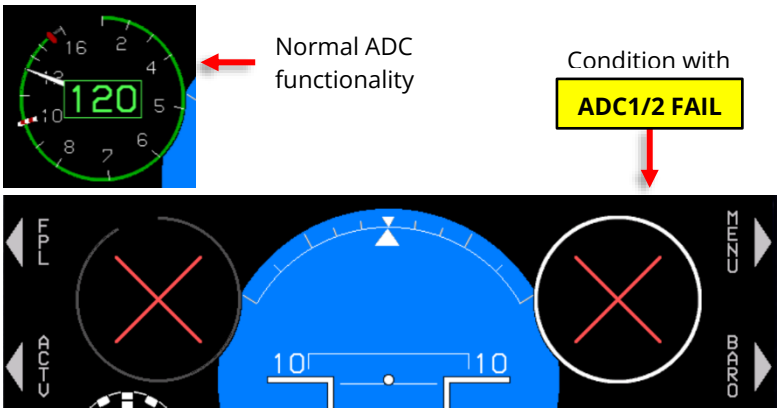


Figure RD-8: Airspeed Display with ADC Failure

**RD 1.8. Altimeter**



Figure RD-9: Altimeter Setting

The altimeter setting digitally displays the altimeter setting in either inches of mercury (inHg) or millibars (mbar) according to the pilot-selected units. The mode is annunciated during QFE operations; otherwise, no mode is annunciated.



Altimeter QNH




Altimeter QFE

Figure RD-10: Altimeter

**RD 1.9. Altitude Display**



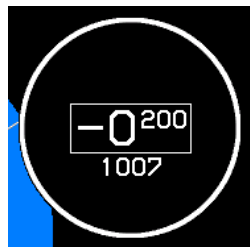With labels and graduations



When below sea level

Figure RD-11: Altitude Display

The altitude readout digitally displays barometric altitude to the nearest ten feet as adjusted by an altimeter setting and shows a 1000-foot range with labels and graduations every 100 feet. CW rotation of the pointer indicates increasing altitude. All graduations are removed when below sea level.

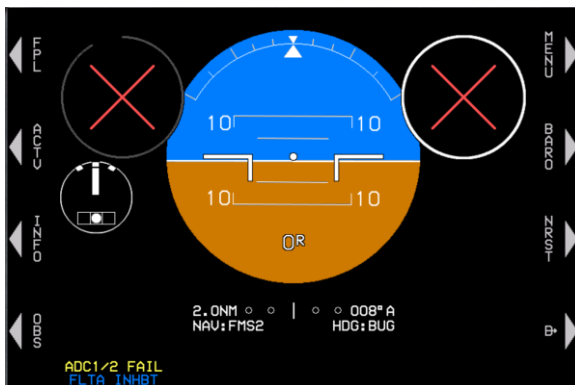


Figure RD-12: Airspeed and Altitude with Loss of ADC

When using feet for altitude display, metric altitude values may be selected from within the declutter menu with a resolution of 1 meter. The metric display of barometric altitude appears above the normal value (feet) and is colored white followed by a white "M."

When using meters for altitude display, altitude values may be selected from within the declutter menu with a resolution of 1 foot. The imperial display of barometric altitude is presented in imperial feet with a resolution of 1 foot. The imperial display of barometric altitude appears above the normal value (meters) colored white and followed by a white "FT."

Table RD-2: PFD Declutter Options

<p>Altitude in feet <b>2250</b></p>	<p>Altitude in meters <b>2000</b></p>
<p>Altitude in Meters <b>686M</b></p>	<p>Altitude in Imperial feet <b>6572FT</b></p>
<p>METERS ✓ DONE</p>	<p>FEET ✓ DONE</p>
<p>APP HUROG 3000' B→ 202° DIS 57.9NM ETE 0:20:47</p>	<p>APP POBER 823M B→ 002° DIS 24.3KM ETE 0:12:51</p>
<p>DIR- 2300' /--- 211° 1.6NM FAP JUDD 2000' /--- 202° 4.4NM RW20L 595' /--- 201° 1300'</p>	<p>DIR- 2500M /--- 002° 24.3KM FAP POBER 823M /--- 184° 004° RW36 262M /--- 004° 10.0KM</p>

### RD 1.9.1 Altitude Sub-Mode

The pilot-selectable altitude sub-mode triangular target altitude bug is limited to -1,000' up to the service ceiling and is removed when more than 500' away from current altitude.



Altitude in feet

**ASEL: 4600**



Altitude in meters

**ASEL: 2500**

Figure RD-13: Target Altitude Bug

The target altitude bug can be used as a visual reference or when vertically integrated with the Genesys Helicopter Autopilot or other autopilot, the bug characteristics indicate the following modes:

- 1) Filled-white when in altitude hold mode.
- 2) Hollow-white when in a climb or descent mode.
- 3) Filled-white during altitude hold capture.

When not vertically integrated with the Genesys Helicopter Autopilot or other autopilot, the target altitude bug is always filled-white.

When in VNAV sub-mode, the VNAV altitude bug appears when within 500' from the current altitude.

Table RD-3: VNAV Sub-Mode

Altitude in Feet	Altitude in Meters
Arrive at 4,000' 5 NM before crossing KLUG	Arrive at 2,300M 10 KM before crossing KNBG
<p>KBDR 6700' B: 039° DIS 21.8NM ETE 0:10:25</p>	<p>KNBG 2300M B: 181° DIS 36.2KM ETE 0:09:17</p>

Table RD-3: VNAV Sub-Mode

Altitude in Feet			Altitude in Meters		
KFRG	8000' / ---	039° 29.1NM	KNEW	2400M / ---	181° 23.9KM
*KBDR	6700' / -10	055° 38.7NM	*KNBG	2300M / -10	189° 21.5KM
HFD	6700' / ---	354° 18.8NM	LEU	2300M / ---	038° 16.7KM
KBDL	5500' / -7		GPT	2300M / ---	

The VNAV bug can be used as a visual reference or when vertically integrated with the Genesys Helicopter Autopilot or partially integrated through use of the vertical mode (as configured in EFIS limits) as a control parameter for climbs or descents with another autopilot. The bug characteristics indicate the following modes:


- 1) Filled-magenta when in altitude hold mode.
- 2) Hollow-magenta when in a climb or descent mode.
- 3) Filled-magenta during altitude hold capture.

When not vertically integrated with an autopilot, the VNAV bug is always filled-white.

**RD 1.10. Vertical Speed Indicator**



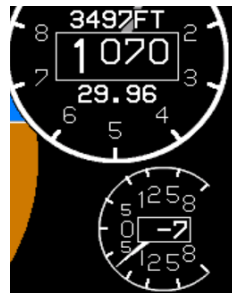Altitude in Feet for 2100 fpm Descent



Altitude in Meters 7 m/s Descent


Figure RD-14: Vertical Speed Indicator (VSI)

A vertical speed indicator is located below the altitude display with a readout, dial, and pointer. The readout is displayed in fpm or m/s depending upon the "Speed Units" system limit. When using feet or meters for altitude the VSI uses clockwise (upward) rotation of the pointer to correspond with increasing vertical speed.



**NOTE:**

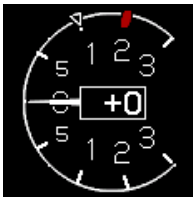For vertical speed bug use with integrated autopilot, see applicable autopilot pilot guide.



VSI bug set to +1,000 fpm with Genesys Helicopter Autopilot enabled (not engaged in climb mode)



VSI bug set to +1,000 fpm without autopilot enabled

Figure RD-15: VSI Bug


The vertical speed bug is mutually exclusive with the IAS bug and can be used either as a visual reference or when vertically integrated with the Genesys Helicopter Autopilot or other autopilot as a control parameter for climbs or descents. When vertically integrated, the vertical speed bug is filled-white when in VSI climb or descent mode. Otherwise, the vertical speed bug is hollow-white as shown above on the left. When not vertically integrated with an autopilot, the vertical bug is always filled-white.



When TCAS-II is enabled, the background of the VSI functions as an RA display with green and red colored regions to provide RA maneuver guidance.

Figure RD-16: Vertical Speed Indicator RA Display

### RD 1.11. Landing Gear Indication

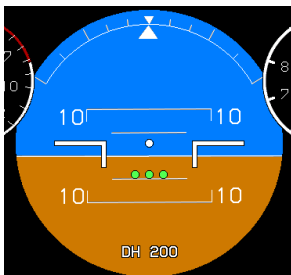

If configured, PFD displays landing gear position as small green "tires" large aircraft symbol reference marks.

Figure RD-17: Landing Gear Indication

### RD 1.12.Heading Display

The heading display appears in a blacked-out area on the bottom to emulate a “Basic-T”. The heading display automatically declutters when a compass rose is shown in the bottom area.

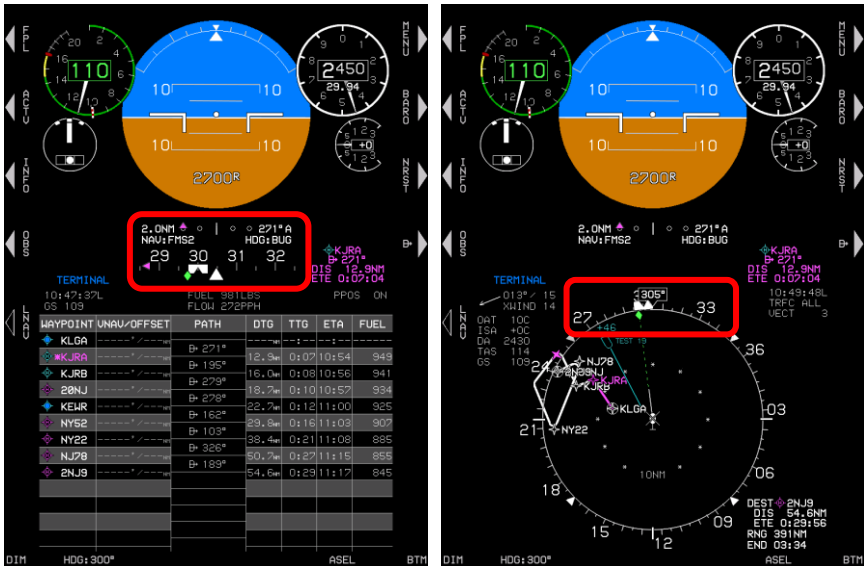




Figure RD-18: Heading Display

Table RD-4: Heading Indicator and Heading Bug

	<p>When AHRS is in DG mode, heading indicator appears. Heading scale includes a green diamond-shaped ground track pointer aligned with the aircraft's track across the earth.</p>
	<p>When the aircraft's track is displaced from aircraft heading beyond the boundaries of the PFI, the track pointer is drawn at the limit of the heading scale in the direction of the displacement and track value appears in a solid green box above the track pointer.</p>
	<p>Pilot-settable heading bug interacts with the heading pointer.</p>

Table RD-4: Heading Indicator and Heading Bug

	<p>When heading bug is modified, a white bordered black box above the heading bug appears for five seconds.</p>
	<p>When heading bug is displaced from aircraft heading beyond the boundaries, the heading bug symbol is drawn halved at the limit of the heading scale.</p>

Track pointer is not displayed when ground speed is less than 30 knots.

**RD 1.12.1 Heading Failure Mode**

With heading failed, the PFI heading scale and MFD compass rose align with track (if available) or are removed and replaced with a red-X.




In this failure mode, the PFI heading scale includes "GPS TRK" around the track marker to clearly delineate the failure mode.

Figure RD-19: GPS TRK



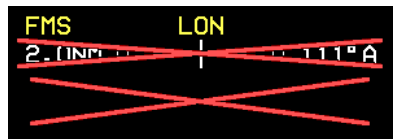Good GPS



GPS Failure

Figure RD-20: Heading Indicator Heading Failure

**RD 1.13. Turn Rate Indicator**



The turn rate indicator is displayed below the airspeed display. This standard turn needle displays marks representing a standard rate turn. The full scale for the turn needle is beyond the standard rate turn mark. This allows the pilot to fly a standard rate turn. The balance ball is driven from accelerometers within the AHRS.

Figure RD-21: Turn Rate Indicator

**RD 1.14. Vertical Deviation Indicator**

The vertical deviation indicator (VDI) on the right side displays vertical deviation for the selected vertical navigation source for displaying descent profile but disappears in unusual attitude mode.



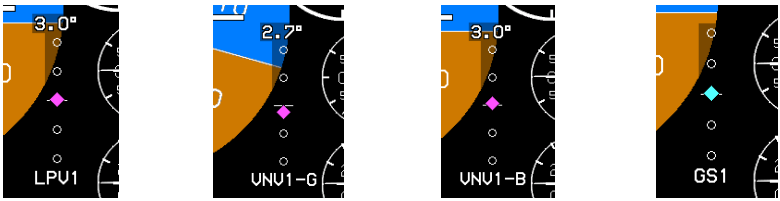


Figure RD-22: VDI



Figure RD-23: VDI Color during GPS/SBAS LOI/LON or VLON

**RD 1.15. Course Deviation Indicator**



Display NAV Source FMS2  
(Normal GPS/SBAS)

NAV Source FMS2  
(GPS/SBAS failed LOI/LON  
condition)

Figure RD-24: Course Deviation Indicator

Table RD-5 defines en route, terminal, and various approach modes according to the Level of Service record.



**NOTE:**

For CDI use with integrated autopilot, see applicable autopilot pilot guide.

Table RD-5: CDI Behavior and Color















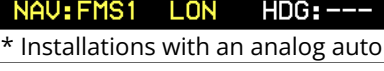
CDI Pointer and Condition	Color or Behavior
<p>Full Scale Deflection</p> <p>Slaved to GPS/SBAS</p>	<p>Flash</p> <p>Scale is appropriate FSD value for mode of flight:</p> <p>En Route: <math>\pm 2</math>NM</p> <p>From En Route to Terminal: Change from <math>\pm 2</math> NM FSD to <math>\pm 1</math> NM FSD over distance of 1 NM; start transition when entering terminal mode.</p> <p>From Terminal to En Route: Change from <math>\pm 1</math> NM FSD to <math>\pm 2</math> NM FSD over distance of 1 NM; start transition when entering en route mode.</p> <p>From Terminal to Approach: If VTF, switch immediately.</p> <p>Otherwise, change from <math>\pm 1</math> NM FSD to approach FSD over distance of 2 NM; start transition at 2 NM from FAWP.</p> <p>From Approach to Terminal: Change to <math>\pm 1</math> NM.</p> <p>From Departure to Terminal: If initial leg is aligned with runway, change from <math>\pm 0.3</math> NM FSD to <math>\pm 1</math> NM FSD at the turn initiation point of the first fix in the departure procedure.</p>
<p>CDI images below represent installations with Genesys Helicopter Autopilot or without an autopilot enabled.</p>	
	<p>Nav source FMS1 GPS/SBAS (with GPS LON) amber (yellow) OBS manual mode with a "FROM" indication.</p>
	<p>Nav source FMS1 GPS/SBAS (with GPS LON) amber (yellow) OBS automatic mode with a "TO" indication.</p>
<p>Normal conditions</p>	<p>Magenta</p>
<p>In FMS LP/LPV mode or VOR/VLOC approach mode</p>	<p>Angular scale annunciation</p>

Table RD-5: CDI Behavior and Color

CDI Pointer and Condition	Color or Behavior
	Nav source is localizer (course error exceeds 104°). Reverse sensing with distance to approach threshold.
Lateral deviations in failed state	Red "X" displayed over CDI
	Nav source FMS1 in auto waypoint sequencing mode.
	Nav source FMS1 in manual OBS mode with a "TO" indication. Waypoint sequencing is suspended.
	Nav source FMS 1 in manual OBS mode with a "FROM" indication. Waypoint sequencing is suspended.
	Nav source FMS1 in automatic OBS mode with true north mode. Only applicable for CDI in this GPS/SBAS navigation source.
	Nav source VLOC1
	Nav source VLOC2
	Nav source VOR1 with "TO" indication. Currently on a bearing 289°/14.6NM to the VOR.
	Nav source VOR1 with a "FROM" indication on a bearing of 344°/1.1NM from the VOR.
	Nav source VOR2 with "TO" indication on a bearing of 145°/46.3NM to the VOR.
	Heading bug sub-mode guidance
	LNAV sub-mode guidance
	Failure sub-mode

\* Installations with an analog autopilot enabled.

### RD 1.16.Timer Indication

A countdown or count-up timer can be displayed above the large aircraft reference marks when selected through the menu as described in Section 2 Display Symbology.

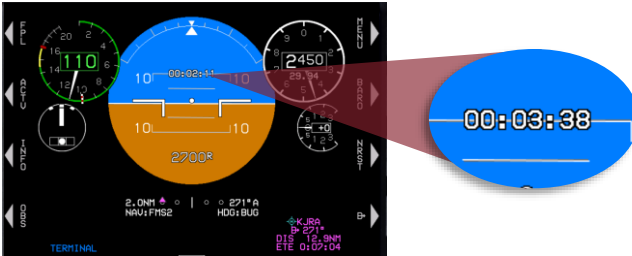


Figure RD-25: Timer Indication

# Search and Rescue (SAR) Patterns

## SAR 1. Search and Rescue (SAR) Patterns

When enabled by EFIS system limits, the pilot can create one SAR pattern at an eligible flight plan waypoint and only one waypoint within the active flight plan. The current position of the aircraft is determined relative to the desired path for lateral deviation for display on the GPS/SBAS CDI. In most cases, the IDU auto-sequences from one waypoint to the next similar to all other flight plan sequencing along the flight path.

The SAR option is available for any waypoint except the following:

- 1) Suppressed waypoint
- 2) Skipped waypoint
- 3) Manual termination waypoint
- 4) Waypoint that is part of an IFR or VFR approach
- 5) Holding pattern waypoint
- 6) SAR pattern exit waypoint
- 7) Waypoint that begins a departure procedure
- 8) Parallel offset entry or exit waypoint
- 9) Dynamic termination waypoint (altitude termination, DME termination, radial termination, or intercept termination)



### NOTE:

Flight plans can be saved with a SAR between waypoints or at the end of the flight plan. When a saved flight plan includes a SAR pattern it is shown in the flight plan name.



```
KDFW-KDAL  
KJFK--SAR-  
KJFK-KEWR  
KJFK-KEWR(1)  
LIMC-LILC
```

SAR patterns can be created in the **RUN DEMONSTRATOR/TRAINING PROGRAM** Ground Maintenance Page or the EFIS Training Tool. After the SAR pattern is created and saved, that flight plan can be uploaded to any IDU or all IDUs in an aircraft for later use.

The desired flight path is created from a sequence of straight, left, and right turning leg segments to provide smooth skyway, GPS/SBAS CDI, and lateral auto guidance. SAR patterns are drawn at the lowest of holding or procedure speed.

## SAR 1.1. SAR Pattern Step-by-Step Procedures

To select a SAR pattern, follow these step-by-step procedures. Refer to subsequent sections for additional details and examples for the individual patterns.

- 1) Press **ACTV (L2)** and use **1** to highlight desired eligible waypoint to begin SAR pattern creation process then push to enter.
- 2) Use **1** to highlight **SAR PTRN..** then push to enter.
- 3) Use **1** to highlight one of the five SAR pattern options then push to enter.
  - a) **EXP SQUARE..\***
  - b) **LADDER..\***
  - c) **ORBIT..**
  - d) **RACE TRACK..**
  - e) **SECTOR..\***

\*Pattern includes the option to select individual legs within the SAR pattern for navigation guidance.

- 4) Use **1** through each step, create the desired parameters (e.g., direction, track, leg length, leg spacing, and number of legs), then push to enter. See following sub-sections for more details for parameters of each pattern.
- 5) After SAR pattern is created, it appears on the map, mini map, and active flight plan. The active waypoint, becomes the SAR pattern entry point, followed by the SAR pattern exit waypoint.
- 6) To select a SAR pattern individual leg, use **1** to highlight SAR pattern exit waypoint as it appears in white then push to enter, to make this the active waypoint, and then:
  - a) Use **1** to highlight **SAR SGMNT..** then push to enter.
  - b) Use **1** CW or CCW to advance forward or backward through all legs to begin leg selection process. When desired leg is magenta, then push **1** to select and exit menu.
- 7) Control the aircraft to new magenta line for maneuvering to begin following navigation guidance. See following sub-sections for examples of selected segments.
- 8) To delete existing SAR pattern, press **ACTV (L2)**. Use **1** to highlight SAR pattern then press **DELETE (R3)**. Push **1** to confirm.

## SAR 2. Expanding Square Pattern

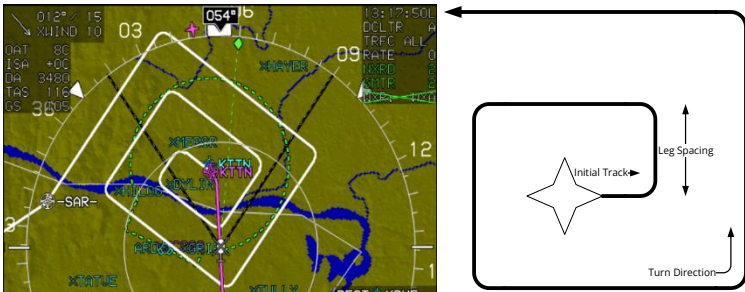


Figure SAR-1: Expanding Square Pattern

EXP SQUARE PATTERN	
INIT TURN:	LEFT
INIT TRACK:	360°
LEG SPACING:	2.00 NM
NUMBER OF LEGS:	10

Distance in NM

EXP SQUARE PATTERN	
INIT TURN:	LEFT
INIT TRACK:	013°
LEG SPACING:	2.00 KM
NUMBER OF LEGS:	10

Distance in KM

Figure SAR-2: Expanding Square Pattern Parameters

Table SAR-1: Expanding Square Pattern Parameters

Parameters	Increments (Range)/Direction	Notes
Initial Turn	Left or Right	
Initial Track	Outbound from previous waypoint in 1° increments	Magnetic or True
Leg Spacing	NM or KM 0.25 unit increments between 0.25 unit and 10 units	
Number of Legs	1 to 50	

## SAR 3. Rising Ladder Pattern

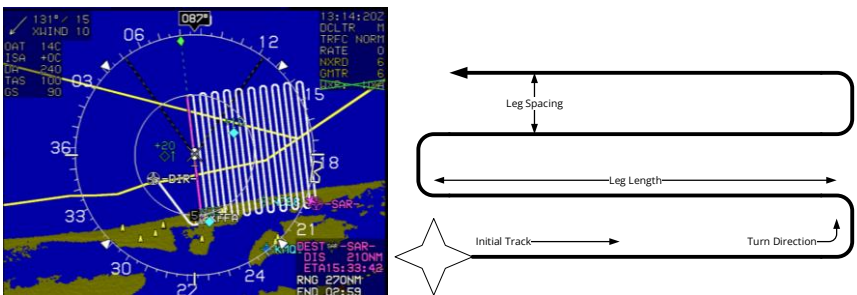


Figure SAR-3: Rising Ladder Pattern

LADDER PATTERN	
INIT TURN:	LEFT
INIT TRACK:	348°
LEG LENGTH:	15.0 NM
LEG SPACING:	2.00 NM
NUMBER OF LEGS:	10

Distance in NM

LADDER PATTERN	
INIT TURN:	LEFT
INIT TRACK:	013°
LEG LENGTH:	15.0 KM
LEG SPACING:	2.00 KM
NUMBER OF LEGS:	10

Distance in KM

Figure SAR-4: Rising Ladder Pattern Parameters

Table SAR-2: Rising Ladder Pattern Parameters

Parameters	Increments (Range)/Direction	Notes
Initial Turn	Left or Right	
Initial Track	Outbound from previous waypoint in 1° increments	Magnetic or True
Leg Length	NM or KM 0.5-unit increments between 1 and 100 units	
Leg Spacing	NM or KM 0.10-unit increments between 0.10 and 10 units	
Number of Legs	1 to 50	



Figure SAR-5: Rising Ladder Pattern-Individual Leg Selected

### SAR 4. Orbit Pattern

The SAR exit waypoint is a duplicate of the previous waypoint. This SAR pattern is unique in that the navigation path never goes through the waypoint. The path is a circle around the waypoint intercepted along tangents. With no other menus displayed on the PFD and a waypoint following the active waypoint, **CONT (L6)** appears to allow for continuing out of the orbit and normal sequencing in the active flight plan.



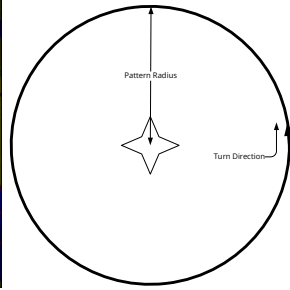
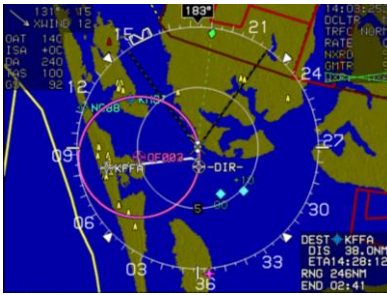


Figure SAR-6: Orbit Pattern

ORBIT PATTERN  
TURN DIR: LEFT  
RADIUS: 5.00 NM

ORBIT PATTERN  
TURN DIR: RIGHT  
RADIUS: 4.75 KM

Distance in NM

Distance in KM

Figure SAR-7: Orbit Pattern Parameters

Table SAR-3: Orbit Pattern Parameters

Parameters	Increments (Range)/Direction
Turn Direction	Left or Right
Radius	NM or KM 0.25 unit increments between 0.25 unit and 10 units

### SAR 5. Racetrack Pattern

With no other menus displayed and a waypoint following in the flight plan, **CONT (L6)** appears for continuing out of the racetrack and normal sequencing in the active flight plan. SAR exit waypoint is a duplicate of the previous waypoint.

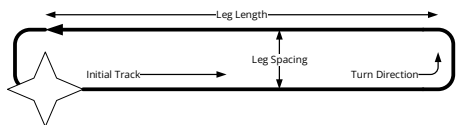


Figure SAR-8: Racetrack Pattern

RACE TRACK PATTERN	
TURN DIR:	LEFT
INIT TRACK:	360°
LEG LENGTH:	10.0 NM
LEG SPACING:	5.00 NM

Distance in NM

RACE TRACK PATTERN	
TURN DIR:	LEFT
INIT TRACK:	013°
LEG LENGTH:	4.0 KM
LEG SPACING:	4.00 KM

Distance in KM

Figure SAR-9: Racetrack Pattern Parameters

Table SAR-4: Racetrack Pattern Parameters

Parameters	Increments (Range)/Direction	Notes
Initial Turn	Left or Right	
Initial Track	Outbound from previous waypoint in 1° increments	Magnetic or True
Leg Length	NM or KM 0.5 unit increments between 1 unit and 100 units	
Leg Spacing	NM or KM 0.25 unit and 10 units	

### SAR 6. Sector Search Pattern

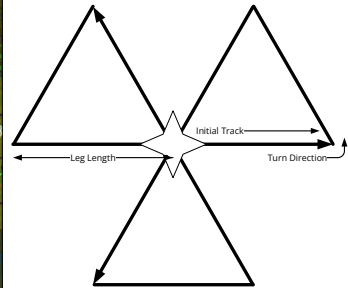


Figure SAR-10: Sector Search Pattern

SECTOR PATTERN	
INIT TURN:	LEFT
INIT TRACK:	348°
LEG LENGTH:	5.0 NM

Distance in NM

SECTOR PATTERN	
INIT TURN:	LEFT
INIT TRACK:	015°
LEG LENGTH:	10.5 KM

Distance in KM

Figure SAR-11: Sector Search Pattern Parameters

Table SAR-5: Sector Search Pattern Parameters

Parameters	Increments (Range)/Direction	Notes
Initial Turn	Left or Right	
Initial Track	Outbound from previous waypoint in 1° increments	Magnetic or True

Table SAR-5: Sector Search Pattern Parameters

Parameters	Increments (Range)/Direction	Notes
Leg Length	NM or KM in 0.5 unit increments between 1 unit and 100 units	

Exit waypoint is a duplicate of the previous waypoint.



Figure SAR-12: Sector Search Pattern-Individual Leg Selected

## Abbreviations and Acronyms

µmHg	Micrometer of Mercury
OR	No Radius
3D	Three-Dimensional
ACTV	Active
ADAHRS	Air Data Attitude Heading Reference System
ADC	Air Data Computer
ADF	Automatic Direction Finder
ADS-B	Automatic Dependent Surveillance-Broadcast
AFCS	Automatic Flight Control System
AGL	Above Ground Level
AHRS	Attitude Heading Reference System
AIRAC	Aeronautical Information Regulation and Control
AIRMET	Airmen's Meteorological Information
ALT	Pressure Altitude
ALT SEL	Altitude Selection
ANP	Actual Navigation Performance
ANT	Antenna
AP	Autopilot
APP	Waypoint is part of an Instrument Approach Procedure
APPR	Approach
APT	Airport
APV	Approach with Vertical Guidance
ARINC	Aeronautical Radio, Inc.
ARL	Auto Range Limiting (RDR-2100)
ARTCC	Air Route Traffic Control Center
ASEL	Aircraft Selected Altitude
ATC	Air Traffic Control
ATT	Attitude
Baro	Barometric setting
Baro-VNAV	Barometric Vertical Navigation
BC	Backcourse navigation
BRT	Brightness
BTM	Bottom
C	Celsius
CA	Course to Altitude (ARINC-424 Leg)
CALC	Calculate RAIM Prediction
CAS	Crew Alerting System
CD	Course to DME Distance (ARINC-424 Leg)
CCW	Counter Clockwise
CDA	Continuous Descent Approach
CDI	Course Deviation Indicator
CF	Course to Fix (ARINC-424 Leg)

---

CI	Course to Intercept (ARINC-424 Leg)
CLR	Clear
CNX	Cancel
COM	Communication
CONT	Continue
CPLT	Co-Pilot
CPM	Computer Processor Module
CPU	Central Processing Unit
CR	Course to Radial Termination (ARINC-424 Leg)
CRC	Cyclic Redundancy Check
CRS	Course
CSA	Conflict Situation Awareness (ADS-B)
CTRST	Contrast
CW	Clockwise
DA	Decision Altitude
dB	Decibel
dBZ	Decibel relative to radar reflectivity (Z)
DCLTR	Declutter
DCND	Descend
DEC HT	Decision Height Bug
DEL	Delete
DESIG	Designate
DF	Direct to Fix (ARINC-424 Leg)
DFLT	Default
DG	Directional Gyro
DH	Decision Height
DLNK	Datalink
DME	Distance Measuring Equipment
DO	RTCA Document
DP	Departure Procedure
DTG	Distance to Go
DR	Dead Reckoning
EFIS	Electronic Flight Instrument System
EGM	Earth Gravity Model
EGNOS	European Geostationary Navigation Overlay Service
EQPMNT	Equipment
ESSNTL	Essential
ETA	Estimated Time of Arrival
ETE	Estimated Time En route
ETT	EFIS Training Tool
EXCD	Exceedance
EXPND	Expand (also EXP)
F	Fahrenheit

FA	Course from a Fix to Altitude (ARINC-424 Leg)
FAA	Federal Aviation Administration
FAF	Final Approach Fix
FAR	Federal Aviation Regulation
FAS	Final Approach Segment (DO-229D and AC20-129 reference)
FAWP	Final Approach Waypoint (same as FAF)
FC	Course Fix to Along-Track Distance (ARINC-424 Leg)
FD	Course from a Fix to DME Distance (ARINC-424 Leg); Flight Director
FDE	Fault Detection and Exclusion
FG	Fixed Gear
FIS	Flight Information Service
FIS-B	Flight Information Service-Broadcast
FL	Flight Level
FLTA	Forward Looking Terrain Awareness
FM	Course from Fix to Manual termination (ARINC-424 Leg)
FMS	Flight Management System
FOV	Field of View
FPL	Flight Plan
fpm	Feet per minute
FPM	Flight Path Marker
FPNM	Feet Per Nautical Mile
FRT	Fixed-Radius Transition
FSD	Full Scale Deflection
FT	Feet
FTE	Flight Technical Error
FTP	Fictitious Threshold Point
FNCT	Function
GAGAN	India's GPS and GEO-Augmented Navigation System
GARP	GNSS Azimuth Reference Point
GBAS	Australia's Ground Based Augmentation System
GLS	GNSS Landing System
GMAP	Ground Map mode (RDR-2100)
GMETAR	Graphical METAR (also GMTR)
GMF	Ground Maintenance Function
GN	Gain
GND	Ground
GNSS	Global Navigation Satellite System
GPI	Glide Path Intercept
GPIP	Glide Path Intercept Point
GPS	Global Positioning System
GPSV	Global Positioning System Vertical Navigation
GPWS	Ground Proximity Warning System

GS	Glide Slope; Ground Speed
H	Hold
HA	Terminates at an altitude (ARINC-424 Leg)
HF	Holding, Pattern to Fix (ARINC-424 Leg)
HM	Altitude or Manual Termination (ARINC-424 Leg)
HAL	Horizontal Alert Limit
HAT	Height Above Threshold
HDG	Heading
HFOM	Horizontal Figure of Merit
hh:mm:ss	Hours: Minutes: Seconds
HITS	Highway in the Sky
HLTH	Health
HORIZ	Horizontal
HOTAS	Hands on Throttle and Stick
hPa	Hectopascal
HPL	Horizontal Protection Level
HPL <sub>FD</sub>	Horizontal Protection Limit Fault Detection
HPL <sub>SBAS</sub>	Horizontal Protection Limit based on SBAS
HSI	Horizontal Situation Indicator
HUD	Head Up Display
IAP	Instrument Approach Procedure; Initial Approach Point
IAS	Indicated Airspeed
IAWP	Initial Approach Waypoint (same as IAP)
ICAO	International Civil Aviation Organization
ID	Identity or Identification
IDU	Integrated Display Unit
IF	Initial Fix leg
IFR	Instrument Flight Rules
ILS	Instrument Landing System
IM	Inner Marker
INFO	Information
INHBT	Inhibit
inHg	Inches of Mercury
INIT	Initialize
IO	Input/Output
IP	Initial Point
IPV	Instrument Procedure with Vertical Guidance
ISA	International Standard Atmosphere
IVSI	Instantaneous Vertical Speed Indicator
IWP	Intermediate Approach Waypoint
K	Kilo = 1000
KB	Kilobyte
kHz	Kilohertz

IAS	Knots Indicated Airspeed
KM	Kilometers
Km/h	Kilometers per Hour
KT	Knot - Nautical Mile per Hour
KTAS	Knots True Airspeed
LAT	Latitude
lbs	Pounds
LCD	Liquid Crystal Display
LCL	Local
LDA	Localizer-type Directional Aid
LED	Light Emitting Diode
LGND	Legend
LIFR	Low IFR conditions (Ceiling < 100' or visibility < 1 mile)
LIN	Linear
LNAV	Lateral Navigation
LOC	Localizer
LOI	Loss of Integrity
LON	Loss of Navigation; Longitude
LP	Localizer Performance
LPV	Localizer Performance with Vertical Guidance
LTP	Landing Threshold Point
LVL	Level
MA	Waypoint is part of the missed approach segment of an Instrument Approach Procedure
MAGVAR	Magnetic Declination (Variation)
MAHP	Missed Approach Holding Point
MAHWP	Missed Approach Holding Waypoint (same as MAHP)
MAN	Manual
MAP	Missed Approach Point; Missed Approach Procedure
MAWP	Missed Approach Waypoint (also MAWPT)
mbar	Millibar
MDA	Minimum Descent Altitude
MESO	Mesocyclonic
METAR	Routine hourly weather report
MFD	Multifunction Display
MIN	Minimum
MM	Middle Marker
MOA	Military Operations Area
MOT	Mark On Target
m/s	Meters per second
MSAS	Japan's MTSAT-based Satellite Augmentation System
MSG	Message
MSL	Mean Sea Level



MVFR	Marginal Visual Flight Rules
NAS	U.S. National Airspace System
NAV	Navigation
NAVAID	Device or system providing navigational assistance
ND	Navigation Display
NDB	Nondirectional Beacon
NEXRAD	(Next-Generation Radar) network of weather radars operated by the National Weather Service (NWS) (also NXRD)
NIMA	National Imagery and Mapping Agency
NM	Nautical Mile
NRST	Nearest
nT	Nanoteslas (ref. World magnetic Model)
NWS	National Weather Service
OAT	Outside Air Temperature
OBS	Omnibearing Selector
ODP	Obstacle Departure Procedure
OF	Over-fly
OM	Outer Marker
OT	Other Traffic (Traffic Function)
PA	Proximate Advisory (Traffic Function)
PFD	Primary Flight Display (also refers to the primary IDU with software that only shows primary flight instrumentation)
PFI	Primary Flight Information
PI	Procedure Turn (ARINC-424 Leg)
PLT	Pilot
PM	Personality Module
PN	Part Number; Pan
PPOS	Present Position
PROC	Procedure
PRN	Pseudo-Random-Noise (Satellite communications)
PRS	Press
PRV	Previous
PSH	Push
PTK	Parallel offset (Parallel Track)
PTRS	Pointers
PWR	Power
QFE	Altimeter setting provides height above reference point
QNE	Altimeter setting provides pressure altitude readout
QNH	Altimeter setting provides MSL altitude at a reporting point
RA	Resolution Advisory (Traffic Function)
RADALT	Radar Altimeter (also RALT)
RAD-DST	Radial and Distance
RAIM	Receiver Autonomous Integrity Monitoring

RCP	Radar Control Panel
RG	Retractable Gear
RDR	Radar
RF	Precision Arc to Fix (ARINC-424 Leg)
RG	Retractable Gear
RFM	Rotorcraft Flight Manual
RFMS	Rotorcraft Flight Manual Supplement
RHT	Radar Height
RMI	Radio Magnetic Indicator
RNAV	Area Navigation
RNP	Required Navigation Performance
RNP APCH	Required Navigation Performance Approach
RNP AR-APCH	RNP approach procedure that requires special aircraft and aircrew authorization.
RTC	Required terrain clearance
RTCA	Radio Technical Commission for Aeronautics
RW	Runway
RX	Radio Receive indication
SAE	Society of Automotive Engineers
SAR	Search and Rescue
SAT	Saturation
SATLT	Satellite
SBAS	Satellite-Based Augmentation System
SCC	System Configuration Card (personality module)
SECAM	Analog color television system used in France
SI	International System of Units
SIC	Side-in-Command
SID	Standard Instrument Departure
SIGMET	Significant Meteorological Advisory
SSM	Sign Status Matrix
STAB	Stability
STAR	Standard Terminal Arrival Routes
STBY	Stand-by
STD	Standard
STRKS	Strikes (Lightning detection)
SVN	Synthetic Vision (Tapes configuration in PFI area)
SVS	Synthetic Vision System
SYMB	Symbol
SYNC	Synchronize
SYRD	System Requirements Document
TA	Traffic Advisory (Traffic Function)
TACAN	Ultra-High Frequency Tactical Air Navigational Aid
TAFs	Terminal Aerodrome Forecasts

---

TAS	Traffic Advisory System; True Airspeed
TAWAS	Terrain Awareness and Warning System
TCA	Terminal Control Areas
TCAD	Traffic Collision Alert Device
TCAS	Traffic Collision Alert System
TD	Terrain Data
T/D	Top of Descent
TERPS	Terminal Instrument Procedures
TF	Track to a Fix; Track from Fix to New Fix (ARINC-424 Leg)
TFR	Temporary Flight Restriction
TGT	Target
TIS	Traffic Information Service
TIS-B	Traffic information Service-Broadcast
TOAC	Time Of Arrival Control
TLT	Tilt (WX-RDR)
T/R	Transmit/Receive
TRANS	Transition
TRK	Track
TRNDO	Tornadic
TSO	Technical Standard Order
TTA	Time to Alert
TTG	Time to Go
TURB	Turbulence
TX	Radio Transmit
USB	Universal Serial Bus, data storage device
USR	User Waypoint
UTC	Universal Time Coordinated
VA	Heading to Altitude (ARINC-424 Leg)
VAL	Vertical Alert Limit
VD	Heading to DME Distance (ARINC-424 Leg)
VDI	Vertical Deviation Indicator
VERT	Vertical
VFOM	Vertical Figure of Merit
VFR	Visual Flight Rules
VHF	Very High Frequency
V <sub>HOLD</sub>	Aircraft's normal speed (in airspeed units configured in EFIS limits) for flying holding patterns. Value is used for calculating the turn radius of holding patterns.
VI	Heading to Intercept (ARINC-424 Leg)
VLOC	VOR/Localizer
VLON	Vertical Loss of Navigation
VM	Heading to Manual Termination (ARINC-424 Leg)
VNAV	Vertical Navigation (also VNV)

V <sub>NE</sub>	Never exceed speed
V <sub>NO</sub>	Maximum structural cruising speed or maximum speed for normal operations
VOR	VHF Omnidirectional Radio
VORTAC	Collocated VOR and TACAN
VP	VFR waypoints (five digits beginning with "VP")
VPL	Vertical Protection Level
V <sub>PROC</sub>	Procedure Speed
VR	Heading to Radial Termination (ARINC-424 Leg)
VS	Vertical Speed
VSI	Vertical Speed Indicator
VTF	Vectors to Final
V <sub>TOS</sub>	Minimum speed for a positive rate of climb with one engine inoperative
WAAS	Wide Area Augmentation System
WGS84	World Geodetic System 1984
WOG	Weight on Ground
WOW	Weight on Wheels
WPT	Waypoint
WX	Weather
WXA	Weather-alert (RDR-2100)
XFILL	Crossfill

## Definitions

ADF – Display of single and or dual ADF bearing information in the form of an RMI pointer (when enabled in EFIS limits).

AGL Indication (Rad Alt, GPS Alt, Baro Alt) – Display of altitude above the ground, with designation of the altitude source as R (radio altitude), G (GPS/SBAS geodetic altitude less local ground elevation), or B (barometric altitude less local ground elevation in feet or meters as configured in EFIS limits).

Air Data and Ground Speed – Display of outside air temperature (°C or °F), ISA temperature deviation (°C or °F), density altitude (feet or meters), true airspeed (knots, MPH, or Km/h), and ground speed (knots, or, Km/h) as configured in EFIS limits.

Airspeed Information – Display of airspeed is the indicated airspeed tape and airspeed readout with associated data. The airspeed function includes color-coded caution bands for minimum and maximum speeds based on airspeed units (knots, MPH or Km/h) as configured in EFIS limits.

Altitude Information – Display of altitude information is the altitude tape and altitude readout in feet or meters as configured in EFIS limits.

**Approach Mode Signal Output** – Conventional autopilot approach mode signals are course error output, the left/right deviation signal (localizer output) and the up/down deviation signal (glide slope output). Signals are based on the selected navigation source.

**Attitude Information** – Display of attitude information includes pitch and roll.

**Autoset** – Automatically selects features or settings.

**Azimuth** – Angle between the north vector and the perpendicular projection of the star down onto the horizon. Usually measured in degrees (°).

**Barometric Altimetry** – Measurement of altitude based on the atmosphere (pressure and temperature.)

**Barometric Correction** – Display and altitude correction for local barometric pressure.

**Bezel** – Faceplate of the IDU comprised of pushbuttons along the sides and rotary knobs along the bottom.

**Chroma** – Colorfulness relative to the brightness.

**Clock, Timers** – Display of Zulu time (based on GPS data) or local time (based on UTC Offset) and user-selected timers.

**Conformal** – Angle-preserving, as seen viewing the outside world. Example: traffic, terrain, and obstructions appear conformally on the PFI area.

**Course Deviation Indicator** – Display of course deviation from selected course, including a To-From indicator, and source of information.

**Critical Flight Phase** – Phase(s) of flight where the failure mode would result in a hazard condition using flight phases. For example, failure of ILS would only be a hazard condition during approach and landing.

**Crossfill** – Transfer of data and information between IDUs in a two-sided system with two PFDs configured.

**Cross-linked** – Synchronized across both pilot and co-pilot sides.

**Datalinked** – Display of received data such as weather or traffic from peripheral systems such as ADS-B.

**dBZ** – Decibel relative to radar reflectivity (Z). Composite reflectivity shows the highest dBZ (strongest reflected energy) at all elevations. Unlike base reflectivity, which only shows reflected energy at a single elevation scan of the radar, composite reflectivity displays the highest reflectivity of all elevations scans. If there is heavier precipitation in the atmosphere over an area of lighter precipitation (i.e. rain has yet to reach the ground), the composite reflectivity displays the stronger dBZ level.

**Deadband** – Space between software parameters or setpoints where no action or changes are made.

**Directional Scale (Compass Rose or Arc) and Ownship Symbol** – Display of general directional information. MFD pages include a form of the compass rose with current heading pointer and aircraft ownship symbol.

**Dot** – (CDI scale referenced) represents an additional 2° for VOR and 1.25° for Localizer.

**EFIS-Coupled** – The EFIS is coupled to an autopilot and controls the lateral and/or vertical modes of the autopilot.

**Failure Condition Hazard Description** – A description of the failure mode to be analyzed.

**Flight Director (Selectable Function)** – Display of flight director in a single or dual cue format when selected for display on the PFD or MFD in Essential mode.

**Flight Path Marker (Velocity Vector)** – Display of aircraft's actual flight path, showing where the aircraft is going as opposed to where it is pointed.

**Flight Plan and Navigation Display** – Display of the active GPS/SBAS-based flight plan, including course line, waypoints, ground track, projected path, altitude capture predictor, approach procedure, missed approach procedure, and the aircraft present position on the active leg.

**Geodetic** – Set of reference points used to locate places on the earth.

**Geodesic** – A generalization of the notion of a straight line to curved spaces. The shortest route between two points on the Earth's surface.

**Geoid** – Global mean sea level.

**Glide Slope** – Display of glide slope 1 or glide slope 2 in the form of vertical deviation dots and deviation on PFD VDI or MFD HSI page VDI.

**Glide Slope Sidelobes** – False glide slope signals.

**GPS/SBAS Course Deviation Indicator (CDI)** – Display of CDI relative to selected course, either automatic based on active flight plan or manual based on user-selected OBS when in OBS manual mode. When following an FMS path, bearing indication is the instantaneous desired course to follow the magenta line.

**GPS/SBAS Functions** – The EFIS meets the GPS SBAS navigation and flight planning/management requirements of TSO-C146c (RTCA/DO-229D) for Class Gamma 3 equipment. These functions include navigation, flight planning (function select, flight plan generation and editing, selected waypoints, user waypoints, etc.), path definition including approach and

departure paths, GPS altitude, dead reckoning, navigation modes with automatic mode switching, loss of navigation monitoring, loss of integrity monitoring, etc. The database used with the GPS SBAS functions meets the integrity requirements of RTCA/DO-200A.

**Ground-Based Utility** – The compatible program used for the creation, deletion, editing, or reversing of locked flight plans, routes and User Waypoints for later uploading into the IDU.

**Heading Bug** – Display and control of selected heading using a bug. May be used to drive heading bug output to an autopilot for HSI-based heading mode or visual reference.

**Heading Display** – Display of heading with directional scale is provided at the top of the PFD in SVS mode and as defined in Section 2 Display Symbology.

**Heading Mode Signal Output** – Conventional autopilot heading mode signal is a heading error output based on the difference between the EFIS desired heading and the actual aircraft heading. The EFIS desired heading is either the user-selected heading bug or a heading designed to achieve and maintain the active GPS-based flight plan.

**Hectopascal (hPa)** – International System of Units (SI) unit measure of pressure, equals one millibar (mbar).

**Horizontal Situation Indicator (Selectable Function)** – Display of GPS, VOR or localizer and glide slope deviation when selected for display on the MFD top or bottom areas as MAP overlay or HSI page.

**Hover Vector Display** – Display of hover drift in a rotorcraft installation when the helicopter is traveling less than 30 knots ground speed.

**Inches of Mercury (inHg)** – Unit of atmospheric pressure used in the United States. Named for the use of mercurial barometers, which equate height of a column of mercury with air pressure.

**Inhibit** – Prevention of activity or occurrence e.g., **XFILL INHBT**, **TAWS INHBT**, **FPM INHBT**, **FLTA INHBT**, and **TAS INHBT**.

**Integrated Peripherals** – Internal devices of the essential unit.

**Ionosphere** – Region of the atmosphere between the stratosphere and exosphere, 50 to 600 miles (80 to 1,000 km) above the surface of the earth.

**International Standard Atmosphere (ISA)** – Standard model of the change of pressure, temperature, density, and viscosity over a wide range of altitudes or elevations. (°C or °F configured in EFIS limits.)

Landing Gear Indication – When enabled on retractable landing gear aircraft, PFD (PFI area), and MFD PFI area (when in Essential mode) shows indication of landing gear extended.

Level of Service – Standard Positioning Service (SPS) for general civil use. With selective availability (SA), SPS provides predictable accuracies of 100m in the horizontal plane and 146m in the vertical plan 95% of the time. Without (SA) SPS, accuracy would be approximately 25m in the horizontal plane and 43m in the vertical plane 95% of the time. ARINC-424 Level of Service indicates a particular type approach minimum is approved, e.g., **LP APPR**, **LPV APPR**, **RNP: 0. 10A**.

Lightning Cell Information – Display of lightning information from a WX-500 system and shown in the form of lightning cells. The user may show individual lightning strike data by selecting the dedicated WX-500 page when enabled in EFIS limits.

Localizer – Display of VLOC1 or VLOC2 in the form of horizontal deviation dots and deviation.

Lubber Line – Green-dashed line connecting the center of the ownship symbol and the track pointer.

Magnetic Declination (MAGVAR) – Sometimes called magnetic variation; the angle between magnetic north and true north.

Map Data – Display of map data, including airspace, VFR/IFR airports, VHF nav aids such as VOR/NDB/DME, H Airway, and L Airway, IFR/VFR fixes, ARSPC CTRL, ARSPC SUA Y, ARSPC R, and display range rings.

Marker Beacon – Display of outer, middle, and inner marker beacons as a color-coded circle with the corresponding letter.

Menu Functions – The EFIS includes menus to access functions on both the PFD and the MFD.

Millibar (mbar) – Metric (not SI) unit of pressure, one thousandth of a bar, which is about equal to the atmospheric pressure on Earth at sea level - 1013 millibars.

Miscompare – Disparity of data or information, for example: **ALT MISCOMP**, **ATT MISCOMP**, **GPS MISCOMP**, **GS MISCOMP**, **HDG MISCOMP**, **LOC MISCOMP**, **IAS MISCOMP**, and **BARO MISCOMP**.

NavData® – Jeppesen's aeronautical database to navigate the global airspace system.

Navigation Data Display – Display of active waypoint, bearing to waypoint, and ground track based on active flight plan. The pilot may also select flight



plan information as a MINI MAP, These functions are analyzed as part of the GPS/SBAS functions not the PFD functions.

Navigation Log – Display of navigation information based on active flight plan, including next waypoint, destination, estimated time remaining, and fuel totalizer-based range and endurance. This function may be deselected by a setting in the IDU configuration (limits) file. These functions are analyzed as part of the GPS/SBAS functions not the MFD functions. (As configured for Wpt to Wpt or PPOS to Wpt.)

Navigation Mode Signal Output – Conventional autopilot Navigation mode signals are the course error output and the left-right deviation signals. Course error output is based on the difference between the EFIS selected course (OBS) and the actual aircraft heading. These signals are based on the selected navigation signal (VOR, LOC, ADF or GPS).

Nondirectional – Functions in all directions.

Nanoteslas (nT) – A unit of measurement of the strength of the magnetic field. Earth's strongest magnetic field is located at the poles, and the weakest field is near the equator.

Obstructions Display – Display of obstructions identified in the embedded obstruction database.

Omnibearing – Magnetic bearing of an omni-range station.

Offset – When referring to parallel track of an active flight plan, offset implies the distance paralleling the original track. When referring to VNAV altitudes, offset refers to the distance before or after the waypoint the VNAV altitude must be reached in NM or KM units.

Ownship – Principal eye-point; referring to icon of aircraft represented on HSI, Map, Traffic, WXR-RDR, WX-500 Lightning, or Datalink pages.

Projected Path (Noodle) – Map projected; curving path based upon the aircraft bank angle and ground speed used effectively to assist in course interception and making small adjustments to bank angle for proper roll out.

Q-Routes – Published RNAV routes, including Q-Routes and T-Routes, can be flight planned for use by the Genesys EFIS, subject to any limitations or requirements noted on en route charts, in applicable advisory circulars, or by NOTAM. RNAV routes are depicted in blue on aeronautical charts and are identified by the letter “Q” or “T” followed by the airway number, e.g., Q35, T-205. Published RNAV routes are RNAV-2 except when specifically charted as RNAV-1.

QFE – Barometric setting that results in the altimeter displaying height above a reference elevation (e.g., airport or runway threshold).

QNE – Standard barometric setting (29.92 inHg or 1013 mbar) used to display pressure attitude for flight above the transition attitude.

QNH – Barometric setting that results in the altimeter displaying altitude above mean sea level at the reporting station.

Recency – State of occurrence, appearance, or origin.

Selection and Display of Selected Course – Omni-Bearing Select (OBS) function for the user to select the course for navigation. Selected course is displayed for reference.

SI Units – International Speed Units according to the following:

Speed    Knots (nautical), MPH (statue), Kilometers per hour (Km/h)

Altitude    Feet, Meters

Rate        FPM, Meters per second (m/s)

Side in Command – Side of aircraft control responsible for its operation. Side of aircraft control responsible for its operation. This display of steady green arrow in the center of the PFD mode annunciation area is displayed on two-sided systems only to show which side is commanding the autopilot.

Skipped Waypoint – A skipped waypoint is a waypoint associated with a dynamic termination leg with a zero length. These are either:

- 1) An altitude termination leg when current aircraft altitude is above the termination altitude; or
- 2) System-created (i.e., not NavData® specified) intercept to a “Course to a Fix” leg where there is insufficient distance to calculate an intercept heading.

Skyway VNAV/LNAV Guidance (Synthetic Vision) – Display of GPS-based active navigation route, flight plan, procedure, or FMS-OBS course in a three-dimensional series of skyway boxes. Also known as Highway in the Sky (HITS).

Slip Indicator – Display of aircraft lateral accelerations via an integral slip/skid indicator function. The slip indicator is a rectangle just below the heading pointer that moves left and right to indicate the lateral acceleration sensed by the AHRS in the same manner as the ball in a mechanical slip indicator.

Strikefinder – Lightning detector system (WX-500) connected to EFIS and enabled through factory program settings.

**Suppressed Waypoint** – A suppressed waypoint (designated by brackets) is an airport associated with an IFR or VFR approach procedure.

**Symbology** – Use of symbols.

**T-Routes** – T-Routes are available for use by GPS/SBAS equipped aircraft from 1,200 feet above the surface (or in some instances higher) up to but not including 18,000 feet MSL. T-Routes are depicted on en route low altitude charts and considered to include the same attributes of low altitude airways in the Genesys Aerosystems EFIS declutter menus. (Altitudes always in feet.)

**Terrain Display (PFD Artificial Horizon)** – Conformal display of surrounding terrain presented with the artificial horizon, shown in the correct scale and perspective for the aircraft's current position and altitude. Includes conformal display of known runway locations, direction, scale, and perspective based on aircraft's current position and altitude.

**Terrain Display (PFD Artificial Horizon)** – Display of terrain, including identification and annunciation of threatening terrain in accordance with Terrain Awareness Warning System (TAWS) requirements. All altitude references are in feet.

**Time Indication** – User-selected function for count-up or countdown timers, flight time, local time, and Sunrise/Sunset.

**Time Zone** – Derived from Time menu when setting UTC offset for purposes of displaying the local time. On two-sided systems, it is possible to have different time zones on each side.

**Traffic** – When integrated with an appropriate traffic system, traffic is shown using standard TCAS symbology showing relative position, altitude, climb/decent, and color via traffic symbols on the PFI area, Map page, and Traffic page. The pop-up mini traffic display shows traffic position in a full 360° format. Distance displayed in NM or KM as configured in EFIS limits.

**Transmit-Enabled** – IDU providing data to external sensors, generating aural alerts, and displaying warning, caution, and advisory flags. IDUs depend upon intra-system communications to determine which IDU on a side takes over transmit-enabled responsibilities. There is only one transmit-enabled per side and a master PFD when considering aircraft limits. Any IDU may become transmit-enabled through auto reversionary means in the event of the PFD failing.

**Vertical Speed Display** – Display of altitude rate of change (vertical speed or climb rate). Display of altitude rate of change (vertical speed or climb rate) (fpm or m/s as configured in EFIS limits.)

- VOR RMI – Display of VOR1 and VOR2 bearing in the form of RMI pointers.
- $V_{\text{HOLD}}$  (Holding Speed) – The aircraft's normal speed (in airspeed units and configured in EFIS limits) for flying holding patterns. This value is used for calculating the turn radius of holding patterns.
- $V_{\text{PROC}}$  (Procedure Speed) – The aircraft's normal speed (in airspeed units as configured in EFIS limits) for flying published instrument procedures (DPs, IAPs, STARs). This value is used for calculating the turn radius used for instrument procedure legs. This speed is not seen on the airspeed tape and only found in the aircraft speed settings inside the limits.
- Warning, Caution, and Advisory Flags – Time-critical warning and caution alerts in the primary field of view remain present until acknowledged by pressing master caution switch. Display of warning, caution, and advisory indications accompanied by aural indications. The flags are stacked in the lower left corner of the PFD. Warnings are always shown at the top of the flag stack, followed by cautions and then advisories. These flags remain in view for as long as the situation exists.
- Waterline – Indication of the aircraft's longitudinal axis or waterline (attitude).
- Wide Area Augmentation System (WAAS) – Developed by Federal Aviation Administration to provide accurate positioning part of the Satellite Based Augmentation System (SBAS). Other countries have similar systems: Europe: European Geostationary Overlay System (EGNOS); Japan: MTSAT Satellite-based Augmentation System (MSAS); India: GPS Aided GEO Augmented Navigation system (GAGAN).
- Wind Information – Display of wind direction, wind speed (knots or m/s), and cross wind component (knots or m/s as configured in EFIS limits.)
- Zulu – Display of Zulu time (based on GPS data).

